

**SINGER**  
**111W103**

MACHINE NO. 111w103

2-21-61

240545

MACHINE NO. 111w103

\*240173 Arm with 202135  
240069 Arm Cap with 244071  
244071 Arm Cap Oil Wick  
200278X Arm Cap Screw  
202248 Arm Cap Screw Washer  
204235 Arm Position Pin (2)  
200004E Arm Screw (3)  
202005 Arm Screw Washer (3)  
240102 Arm Shaft with 200357E and 224392  
240802 Arm Shaft Bushing (back) with 202244  
202244 Arm Shaft Bushing (back) Oil Packing (wick)  
200338C Arm Shaft Bushing (back) Set Screw  
207080 Arm Shaft Bushing (front) with 202244  
202244 Arm Shaft Bushing (front) Oil Packing (wick)  
200502X Arm Shaft Bushing (front) Oil Packing Thumb Screw  
200338C Arm Shaft Bushing (front) Set Screw  
224103 Arm Shaft Connection Belt  
224104 Arm Shaft Connection Belt Pulley with 200327C, 200602C  
and two 202253  
200602E Arm Shaft Connection Belt Pulley Position Screw  
200327C Arm Shaft Connection Belt Pulley Set Screw  
202253 Arm Shaft Connection Belt Pulley Spring Flange  
224113 Arm Shaft Connection Belt Timing Collar with 200113F  
200113F Arm Shaft Connection Belt Timing Collar Set Screw  
224139 Arm Shaft Connection Belt Timing Plate  
200164X Arm Shaft Connection Belt Timing Plate Screw (2)

MACHINE NO. 111w103

224392 Arm Shaft Oil Packing (wick)  
200357E Arm Shaft Oil Packing Thumb Screw  
\*240103 Bed  
54897 Bed Oil Cup  
240003 Bed Slide (back)  
223811 Bed Slide (back) Stop  
223812 Bed Slide (back) Stop Spring  
240004 Bed Slide (front)  
203470 Bobbin  
\*233764 Bobbin Case  
203648 Bobbin Case Latch  
\*202056 Bobbin Case Latch Pin  
203473 Bobbin Case Latch Plunger  
203474 Bobbin Case Latch Spring  
241674 Bobbin Case Oiling Felt  
241675 Bobbin Case Oiling Felt Retainer  
350405C Bobbin Case Oiling Felt Retainer Screw  
224004 Bobbin Case Opener  
224005 Bobbin Case Opener Lever with 201349C, 201542C and  
203101  
201349C Bobbin Case Opener Lever Driving Screw Stud  
201542C Bobbin Case Opener Lever Driving Screw Stud Nut  
203101 Bobbin Case Opener Lever Driving Screw Stud Oil Packing  
(wick)  
265088 Bobbin Case Opener Lever Hinge Stud with 202277  
202277 Bobbin Case Opener Lever Hinge Stud Oil Packing (wick)

MACHINE NO. 111w103

200364C Bobbin Case Opener Lever Hinge Stud Set Screw  
223623 Bobbin Case Opener Lever Link  
200118D Bobbin Case Opener Screw  
203214 Bobbin Case Tension Spring  
200984C Bobbin Case Tension Spring Regulating Screw  
200594C Bobbin Case Tension Spring Screw  
203216 Bobbin Case Washer (cloth)  
233765 Bobbin Case complete, Nos. 200594C, 200984C, 202056, 203214,  
203216, 203473, 203474, 203648, 233764, 241674, 241675 and  
two 350405C  
240179 Face Plate with 201650X and 350432XC  
202135 Face Plate Position Pin  
200473X Face Plate Thumb Screw  
240037 Feed Bar  
240038 Feed Bar 240037 with 224052, 225837 and 350197E  
350393C Feed Bar Hinge Screw (driving)  
201518E Feed Bar Hinge Screw Nut  
240112 Feed Dog, 40 needle hole, for needle sizes 20 and 22  
200106E Feed Dog Screw (2)  
237565 Feed Driving Connection with 200049D and 202330  
201171C Feed Driving Connection Hinge Screw  
201517E Feed Driving Connection Hinge Screw Nut  
202277 Feed Driving Connection Hinge Screw Oil Packing (wick)  
202330 Feed Driving Connection Oil Packing (wick)  
200049D Feed Driving Connection Pinch Screw  
237521 Feed Driving Eccentric Regulating Bracket

MACHINE NO. 111w103

237043 Feed Driving Eccentric Regulating Bracket 237521 with  
224108 two each 200256C and 201535E

224108 Feed Driving Eccentric Regulating Bracket Flange with  
200383C and 200437C

200437C Feed Driving Eccentric Regulating Bracket Flange Position  
Screw

200383C Feed Driving Eccentric Regulating Bracket Flange Set  
Screw

200256C Feed Driving Eccentric Regulating Bracket Hinge Screw

201525E Feed Driving Eccentric Regulating Bracket Hinge Screw  
Nut

202301 Feed Driving Eccentric Regulating Bracket Plunger

237523 Feed Driving Eccentric Regulating Bracket Plunger Spring

200607C Feed Driving Eccentric Regulating Bracket Plunger Spring  
Stop Screw

200256C Feed Driving Eccentric Regulating Bracket Stop Screw

201525E Feed Driving Eccentric Regulating Bracket Stop Screw  
Nut

200429C Feed Driving Eccentric Regulating Screw

200383C Feed Driving Eccentric Regulating Screw Check Screw

223650 Feed Driving Rock Shaft

240031 Feed Driving Rock Shaft 223650 with 201518E, 240038 and  
350393C

223655 Feed Driving Rock Shaft Crank with 200019E

200019E Feed Driving Rock Shaft Crank Pinch Screw

202625 Feed Driving Rock Shaft Stop Collar with two 200383C (2)

200383C Feed Driving Rock Shaft Stop Collar Set Screw

224154 Feed Lifting Cam with 201220C

224052 Feed Lifting Cam Fork with 200173D and 223655

350197E Feed Lifting Cam Fork Screw

MACHINE NO. 111w103

225837 Feed Lifting Cam Fork Screw Washer  
223655 Feed Lifting Cam Oiling Felt  
200173D Feed Lifting Cam Oiling Felt Screw  
201220C Feed Lifting Cam Set Screw  
224122 Feed Regulating Spindle with 202311, 202443 and 202619  
\*202311 Feed Regulating Spindle Head  
202443 Feed Regulating Spindle Head Pin  
202619 Feed Regulating Spindle Head Position Pin  
\*240041 Hook (sewing)  
240042 Hook 240041 with 203525, 224025, two each 200590X and  
201253F  
240207 Hook and Bobbin Case complete, Nos. 233765 and 240042  
224019 Hook Bushing (lower) (bronze)  
200364C Hook Bushing (lower) Set Screw  
224020 Hook Bushing (upper) (bronze)  
200446C Hook Bushing (upper) Position Screw  
223867 Hook Driving Gear (spiral) with 200362C and 201222C  
201222C Hook Driving Gear Position Screw  
200362C Hook Driving Gear Set Screw  
240167 Hook Driving Pinion (spiral) with 200382C and 201220C  
200382C Hook Driving Pinion Set Screw  
201220C Hook Driving Pinion Set Screw  
224022 Hook Driving Pinion Thrust Washer  
240017 Hook Driving Shaft  
224111 Hook Driving Shaft Bushing (back) with 202244  
202244 Hook Driving Shaft Bushing Oil Packing (wick)

MACHINE NO. 111w103

237529	Hook Driving Shaft Bushing (front)
200327C	Hook Driving Shaft Bushing Set Screw (2)
*240045	Hook Driving Shaft Connection Belt Pulley with 202253 and 240049
*240046	Hook Driving Shaft Connection Belt Pulley Driving Flange with two 201254C
240047	Hook Driving Shaft Connection Belt Pulley Driving Flange Locking Plunger
240048	Hook Driving Shaft Connection Belt Pulley Driving Flange Locking Plunger Spring
240049	Hook Driving Shaft Connection Belt Pulley Driving Flange Locking Plunger Spring Socket
201254C	Hook Driving Shaft Connection Belt Pulley Driving Flange Set Screw
240050	Hook Driving Shaft Connection Belt Pulley Safety Clutch complete, Nos. 240045 and 240048
202253	Hook Driving Shaft Connection Belt Pulley Spring Flange
203525	Hook Gib
201253F	Hook Gib Screw
223850	Hook Saddle with 200009E
224024	Hook Saddle 223850 with 200364C, 200446C, 224019 and 224020
223681	Hook Saddle Bearing
200335C	Hook Saddle Bearing Set Screw
240018	Hook Saddle Oil Guard
240019	Hook Saddle Oil Guard Felt
200160D	Hook Saddle Oil Guard Screw (2)
200009E	Hook Saddle Pinch Screw
200006E	Hook Saddle Screw
225585	Hook Saddle Screw Washer



MACHINE NO. 111w103

240177 Hook Saddle complete, Nos. 200118D, 200364C, 223623, 224004, 224005, 224022, 224024, 240167, 240207 and 265088

224025 Hook Washer

200590X Hook Washer Screw

237837 Knee Lifter Connection Lever

200262X Knee Lifter Connection Lever Hinge Screw

223684 Knee Lifter Connection Lever Lifting Rod with 202302

202302 Knee Lifter Connection Lever Lifting Rod Cotter Pin

206628 Knee Lifter Connection Lever Lifting Rod Spring

227227 Knee Lifter Connection Lever Lifting Rod Spring Collar with 200113F

200113F Knee Lifter Connection Lever Lifting Rod Spring Collar Set Screw

240175 Knee Lifter Lifting Lever

200262X Knee Lifter Lifting Lever Hinge Screw

208545 Lifting Bell Crank

200996C Lifting Bell Crank Cap Screw

240125 Lifting Bell Crank Link

350172C Lifting Bell Crank Link Screw Stud

201524E Lifting Bell Crank Link Screw Stud Nut

240160 Lifting Eccentric with 200382C and 200398C

240126 Lifting Eccentric Connection

240171 Lifting Eccentric Connection Crank with 200029E and 210933

210933 Lifting Eccentric Connection Crank Oil Packing (wick)

200029E Lifting Eccentric Connection Crank Pinch Screw

200398C Lifting Eccentric Position Screw

MACHINE NO. 111w103

200382C Lifting Eccentric Set Screw  
240135 Lifting Presser Foot, for cording and general upholstery  
200074 Lifting Presser Foot Screw  
240136 Lifting Rock Shaft with 201524E and 350172C  
240174 Lifting Rock Shaft Bushing (2)  
241561 Machine Pulley (disc) (belt groove 2-3/4 in. diam.) with  
200382C and 200335C  
200328C Machine Pulley Position Screw  
200335C Machine Pulley Set Screw  
240169 Needle Bar with 200125F, 200175D and 240170  
202552 Needle Bar Connecting Link  
264718 Needle Bar Connecting Link Oil Guard  
200161D Needle Bar Connecting Link Oil Guard Screw  
202333 Needle Bar Connecting Link Stud with 202254  
202254 Needle Bar Connecting Link Stud Oil Packing (wick)  
200374C Needle Bar Connecting Link Stud Set Screw  
200383C Needle Bar Connecting Link Stud Set Screw  
208552 Needle Bar Connecting Stud with 200086C and 202330  
202330 Needle Bar Connecting Stud Oil Packing (wick)  
200086C Needle Bar Connecting Stud Pinch Screw  
202692 Needle Bar Crank with 200335C, 200374C, 200383C, 200428C  
and 202333  
240178 Needle Bar Crank 202692 with 202399, 202400, 202552, 208552  
and 241518  
203172 Needle Bar Crank Friction Washer  
200428C Needle Bar Crank Position Screw  
200335C Needle Bar Crank Set Screw

MACHINE NO. 111w103

240138 Needle Bar Rock Frame  
210910 Needle Bar Rock Frame Hinge Stud with 202277  
202277 Needle Bar Rock Frame Hinge Stud Oil Packing (wick)  
200347C Needle Bar Rock Frame Hinge Stud Set Screw  
202666 Needle Bar Rock Frame Position Bracket  
200098F Needle Bar Rock Frame Position Bracket Screw  
223690 Needle Bar Rock Frame Rock Shaft  
223691 Needle Bar Rock Frame Rock Shaft 223690 with 200387C and  
210920  
223692 Needle Bar Rock Frame Rock Shaft Crank with 200029E  
223693 Needle Bar Rock Frame Rock Shaft Crank Connection with  
202277  
200833C Needle Bar Rock Frame Rock Shaft Crank Connection Hinge  
Screw  
201522E Needle Bar Rock Frame Rock Shaft Crank Connection Hinge  
Screw Nut  
202277 Needle Bar Rock Frame Rock Shaft Crank Connection Oil  
Packing (wick)  
200029E Needle Bar Rock Frame Rock Shaft Crank Pinch Screw  
202668 Needle Bar Rock Frame Slide Block  
210920 Needle Bar Rock Frame Slide Block 202668 with 201141C  
201141C Needle Bar Rock Frame Slide Block Stud  
200387C Needle Bar Rock Frame Slide Block Stud Set Screw  
240170 Needle Bar Thread Guide  
200175D Needle Bar Thread Guide Screw  
200125F Needle Set Screw  
208566 Presser Bar with 200074F  
241535 Presser Bar Bushing (lower)

MACHINE NO. 111w103

207072	Presser Bar Bushing (upper)
200352C	Presser Bar Bushing Set Screw (2)
202554	Presser Bar Lifter
200653C	Presser Bar Lifter Hinge Screw
208555	Presser Bar Lifting Bracket with 200054E
200975F	Presser Bar Lifting Bracket Guide Screw
200054E	Presser Bar Lifting Bracket Pinch Screw
202337	Presser Bar Position Guide
202338	Presser Bar Position Guide Lever with 200086F
200086F	Presser Bar Position Guide Lever Pinch Screw
200352C	Presser Bar Position Guide Set Screw
237836	Presser Bar Spring (flat)
210949	Presser Bar Spring Bracket with 200086C
200086C	Presser Bar Spring Bracket Pinch Screw
201410F	Presser Bar Spring Regulating Screw
200948F	Presser Bar Spring Support Screw
241518	Take-up Lever
202399	Take-up Lever Driving Stud with 202277
202277	Take-up Lever Driving Stud Oil Packing (wick)
202400	Take-up Lever Hinge Stud with 202423
202423	Take-up Lever Hinge Stud Oil Packing (wick)
200363C	Take-up Lever Hinge Stud Set Screw
240023	Tension Bracket with 201224X and 236060
200159F	Tension Bracket Screw
234047	Tension Bracket Screw Socket

MACHINE NO. 111w103

200368X	Tension Bracket Screw Socket Set Screw
240024	Tension Bracket complete, Nos. 13710, 200978X, 201199F, 204271, 223703, 223704, 223706, 237174, 240023, two each 200309E, 201572X and 244048
244048	Tension Disc
236060	Tension Disc Position Pin
223703	Tension Release Lever
235576	Tension Release Lever Rod
200309E	Tension Release Lever Screw
223704	Tension Release Plunger
240141	Tension Release Slide
240142	Tension Release Slide Spring
204271	Tension Release Washer
13710	Tension Spring
201224X	Tension Stud
201572X	Tension Thumb Nut
223706	Thread Controller Disc
200978X	Thread Controller Disc Screw
237174	Thread Controller Spring
242117	Thread Controller Spring Stop
200132E	Thread Controller Spring Stop Screw
201199F	Thread Controller Stud with 204925
200061C	Thread Controller Stud Set Screw
201572X	Thread Controller Stud Thumb Nut
204925	Thread Controller Stud Washer
202412	Thread Guide
224040	Thread Guide

MACHINE NO. 111w103

210955	Thread Guide (upper)
200582X	Thread Guide Screw (3)
241755	Thread Lubricator Oil Pad (felt)
237845	Thread Lubricator Oil Pad Holder
240439	Thread Lubricator Oil Pad Retainer
241758	Thread Lubricator Oil Reservoir
241759	Thread Lubricator Oil Wick
350432XC	Thread Lubricator Screw
201650X	Thread Lubricator Screw Nut
241838	Thread Lubricator Screw Washer
237846	Thread Lubricator complete, Nos. 214838, 237845, 240439, 241755, 241758 and 241759
240034	Thread Retainer
200355X	Thread Retainer Set Screw
240145	Throat Plate
691F	Throat Plate Screw (2)
208562	Vibrating Presser Bar
208563	Vibrating Presser Bar Connecting Link
202277	Vibrating Presser Bar Oil Packing (wick)
240158	Vibrating Presser Foot, 40 needle hole, with 201015F
201015F	Vibrating Presser Foot Pinch Screw

ACCESSORIES

FOR

MACHINE NO. 111w103

200157X	Attachment Screw
200861D	Bed Slide (back) Locking Thumb Screw
203470	Bobbin (5)
225497	Bobbin Case Screw Driver
231337	Cloth Guide
200861D	Cloth Guide Thumb Screw
135x17	Needles six size 24
224121	Drip Pan
12361	Machine Hinge Connection (2)
41400	Machine Rest Pin (wood)
120342	Oiler
225498	Screw Driver complete
225554	Wrench
225382	Bobbin Winder complete
228298	Knee Lifter Rock Lever complete