

Singer 31-52

Singer 31-62

M 18955
(236)
PRINTED IN U. S. A.

LIST OF PARTS



MACHINES

Nos. 31-52 and 31-62

THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling and when in continuous use, it should be oiled at least twice each day with Singer Manufacturing Sewing Machine Oil (Cloth and Leather).

Copyright, U. S. A., 1933 and 1936
by The Singer Manufacturing Co.
All Rights Reserved for all Countries

INDEX

| | Page |
|----------------------------------|------|
| Attachments and Accessories..... | 18 |
| Belt Guard..... | 19 |
| Binders..... | 24 |
| Bobbin Winders..... | 19 |
| Driving Attachment..... | 22 |
| Folders..... | 25 |
| Foot Lifter Parts..... | 41 |
| Guides..... | 27 |
| Hemmer..... | 28 |
| Knee Lifter Parts..... | 42 |
| Lap Seam Fellers..... | 29 |
| Machine Base..... | 18 |
| Machine No. 31-52..... | 5 |
| Machine No. 31-62..... | 18 |
| Numerical List of Parts..... | 45 |
| Presser Feet..... | 31 |
| Presser Foot Extensions..... | 33 |
| Presser Foot Strip Gauge..... | 33 |
| Quilters..... | 33 |
| Rufflers..... | 34 |
| Shirt Closing Parts..... | 37 |
| Spool Fixture (Wire)..... | 41 |
| Spool Holder..... | 39 |
| Tape Holders..... | 39 |
| Tape Spool Fixture (Wire)..... | 40 |
| Throat Plates and Feed Dogs..... | 38 |
| Thread Unwinder..... | 44 |
| Wrenches..... | 44 |

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the part **NUMBER** in the **FIRST** column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

A-Hardened, Polished, Nickel Plated and Buffed

B-Polished, Nickel Plated and Buffed

C-Hardened Only

D-Polished Only

E-Soft, Not Polished

F-Hardened and Polished

G-Bright Rumbled and Nickel Plated

H-Blued

J-Nickel Plated Only

K-Hardened and Nickel Plated

L-Brass Plated

M-Oxidized

N-Japanned, Dull

P-Japanned, Bright

R-Merlized

T-Copper Plated

T.A-Hardened, Polished, Copper and Nickel Plated and Buffed

T.B-Copper and Nickel Plated and Polished

T.J-Copper and Nickel Plated Only

T.K-Hardened, Copper and Nickel Plated

T.M-Copper Plated and Oxidized

T.L-Copper and Brass Plated

U-Zinc Plated

V-Silver Plated

W-Polished and Nickel Plated

Y-Black Nickel Plated Only

Z-Chromium Plated

Z.B-Polished, Nickel Plated, Buffed and Chromium Plated

Z.J-Nickel and Chromium Plated

These letters **MUST BE USED** when they appear in the list; and **AFTER** the number as in the list.

In this series:

1 to 1500, 50001 to 51500 and 140001 to 142000 are Screw Numbers

1501 to 1800 and 51501 to 51800 are Nut Numbers


1801 to 2000 and 51801 to 52000 are Roller Numbers

2001 to 50000 and 52001 to 140000 and 142001 to 190000 are Sewing Machine Parts, 190001 and upward are numbers of Electrical Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are **NOT TO BE USED** in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

LIST OF PARTS COMPLETE FOR

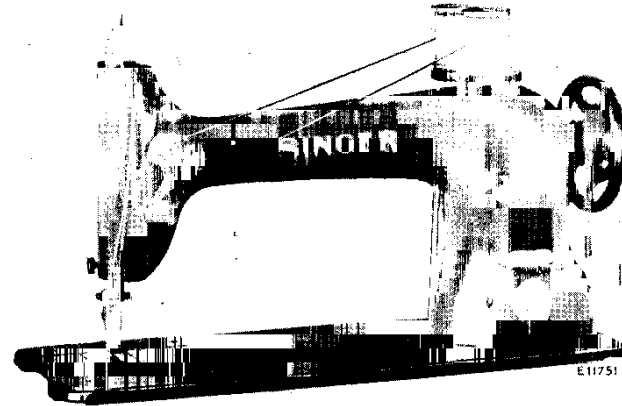

MACHINE No. 31-52

FOR CLOTH. GAUGES FROM 1/32 TO 1/4 INCHES. HIGH
RAISE DROP FEED. SPEED 2000 R. P. M.

| No. | Plate | Name |
|--------|-------|--|
| *20013 | ---- | Arm with 11104, 15404 and two 15405..... |
| 8582 | 8645 | " Dowel Pin..... |
| 12453 | 8645 | " Oil Tube for intermediate bearing.... |
| 15783 | ---- | " " " " 11119..... |
| 11119 | 8645 | " " " 15783 with 52045, for oiling 19156..... |
| 12454 | 8645 | Arm Oil Tube with 132590, for oiling 12409 |
| 24131 | 8645 | " " " " 52045, for oiling 19275 |
| 52045 | 8645 | " " " Packing (wick)..... |
| 132590 | 8645 | " " " " (wick)..... |
| 748E | 8645 | " Screw (back)..... |
| 854E | 8645 | " " (front)..... |
| 12427 | 8677 | " Shaft..... |
| *11104 | ---- | " " Bushing (front)..... |
| 12357 | 8649 | " " Flanged Bushing (back)..... |
| 448C | 8645 | " " " " " Set Screw. |

| No. | Plate | Name |
|--------|-------|---|
| 144D | 8645 | Arm Shaft Screw..... |
| 12480 | 8649 | " Side Cap..... |
| 219D | 5773 | " " " Screw..... |
| 12193 | 8648 | " " " Cover..... |
| 51224D | 8645 | " " " Thumb Screw..... |
| 2415 | 8648 | " Spool Bracket..... |
| 15083 | 8648 | " " " 2415 with two 12403... |
| 145D | 8645 | " " " Screw..... |
| 12403 | 8681 | " " " Spool Pin and Thread Eyelet..... |
| 11241 | 8681 | Arm Spool Bracket Spool Pin Washer (cloth)..... |
| 12358 | 8677 | Balance Wheel (power) light rim, 2 3/16 in. pulley, with two 448C..... |
| 4370 | 8677 | Balance Wheel (stand) heavy rim, 2 3/4 in. pulley with two 448C..... |
| 448C | 8645 | Balance Wheel Set Screw..... |
| *20014 | ---- | Bed..... |
| 20197 | 8648 | Crank Connecting Rod with two 896C..... |
| 896C | 8645 | " " " Cap Screw..... |
| 908C | 8645 | " " " Hinge Screw..... |
| 1619E | 8645 | " " " " " Nut.... |
| 19304 | ---- | Face Plate..... |
| 19305 | 8649 | Face Plate complete, Nos. 19155, 19304 and 19327..... |
| 190D | 2070 | Face Plate Screw..... |
| 19327 | 8672 | " " " Thread Guard (lower) with 12152..... |
| 12152 | 8672 | Face Plate Thread Guard (lower) Rivet... |
| 62624 | 8672 | " " " " (upper)..... |
| 19155 | ---- | " " " " " 62624 with 12152..... |
| 12152 | 8672 | Face Plate Thread Guard (upper) Rivet... |
| 51224D | 8645 | " " " Thumb Screw..... |
| 19111 | 8649 | Feed Bar..... |
| 313C | 8672 | " " " " " Screw Center..... |
| 1519E | 8672 | " " " " " Nut..... |
| 3033 | 8672 | " " " " " Connecting Link..... |
| 375C | 5772 | " " " " " Hinge Screw..... |
| 1519E | 5772 | " " " " " Nut.... |
| 19338 | 786 | " Dog, 13 teeth (16 teeth to the inch) with 19118, for 19287, for general work..... |
| 20103 | 800 | Feed Dog, 10 teeth (16 teeth to the inch) with 19118, for 43964..... |
| 20373 | 8652 | Feed Dog, 10 teeth (16 teeth to the inch) with 19118, for 20375, for edge stitching on curves, for shirt bosoms..... |

| No. | Plate | Name |
|-------|-------|---|
| 20383 | 8652 | Feed Dog, 13 teeth (16 teeth to the inch) with 19118, for 20384..... |
| 20294 | 8659 | Feed Dog, 15 teeth (16 teeth to the inch) with 19118, for 20081..... |
| 19339 | 786 | Feed Dog, 9 teeth (16 teeth to the inch) with 19118, for 19288, for general work..... |
| 19482 | 8659 | Feed Dog, 12 teeth (16 teeth to the inch) with 19118, for 19484, for rounding overgaiters..... |
| 19479 | 8658 | Feed Dog, 7 teeth (16 teeth to the inch) with 19118, for 19481, for staying overgaiters..... |
| 20086 | 799 | Feed Dog, 9 teeth (16 teeth to the inch) with 19118, for 20087, for heavy bolting cloth..... |
| 24449 | 8658 | Feed Dog, 15 teeth (16 teeth to the inch) with 19118, for 24450, for rounding overgaiters..... |
| 20068 | 8653 | Feed Dog, 18 teeth (16 teeth to the inch) with 19118, for 20069, for boning and corset strips..... |
| 20072 | 8653 | Feed Dog, 14 teeth (16 teeth to the inch) with 19118, for 20073..... |
| 19343 | 789 | Feed Dog, 14 teeth (16 teeth to the inch) with 19118, for 19290, for general work..... |
| 19341 | 789 | Feed Dog, 16 teeth (16 teeth to the inch) with 19118, for 19291, for knit goods and general work..... |
| 20391 | 2085 | Feed Dog, 16 teeth (16 teeth to the inch) with 19118, for 20392..... |
| 20074 | 797 | Feed Dog, 16 teeth (16 teeth to the inch) with 19118, for 20075, for knit goods and general work..... |
| 20316 | 8654 | Feed Dog, 14 teeth (16 teeth to the inch) with 19118, for 20079..... |
| 20084 | 799 | Feed Dog, 14 teeth (16 teeth to the inch) with 19118, for 20085, for general work..... |
| 20279 | 2077 | Feed Dog, 16 teeth (16 teeth to the inch) with 19118, for 20280, for knit goods and general work..... |
| 1910 | 8653 | Feed Dog Screw..... |
| 19116 | 8672 | " " " Spring..... |
| 19117 | 8672 | " " " " " Hook for 19120..... |
| 19118 | 8672 | " " " " " " " Feed Dogs..... |

PARTS FOR MACHINE NO. 31-52

| No. | Plate | Name |
|--------|-------|--|
| 19275 | 8649 | Feed and Feed Lifting Eccentric with 446C..... |
| 446C | 8672 | Feed and Feed Lifting Eccentric Set Screw..... |
| 12429 | 8648 | Feed Forked Connection..... |
| 375C | 5772 | " " " Hinge Screw..... |
| 1518E | 5772 | " " " " Nut. |
| 12374 | 8677 | " Lifting Rock Shaft..... |
| 20015 | ---- | Feed Lifting Rock Shaft complete, Nos. 3043J, 12374 and 19120..... |
| 3043J | 8664 | Feed Lifting Rock Shaft Crank (back) with 462C..... |
| 2049 | 5772 | Feed Lifting Rock Shaft Crank (back) Pin |
| 462C | 8672 | " " " " " " Set Screw..... |
| 19120 | 8649 | Feed Lifting Rock Shaft Crank (front) with 157E, 19117, 19121 and 19122..... |
| 157E | 8672 | Feed Lifting Rock Shaft Crank (front) Clamping Screw..... |
| 19121 | 8672 | Feed Lifting Rock Shaft Crank (front) Roller..... |
| 19122 | 8672 | Feed Lifting Rock Shaft Crank (front) Roller Pin..... |
| 43976 | 8648 | Feed Lifting Rock Shaft Crank Connecting Rod (cast iron) with two 966E..... |
| 966E | 8672 | Feed Lifting Rock Shaft Crank Connecting Rod Cap Screw..... |
| 375C | 5772 | Feed Lifting Rock Shaft Crank Connecting Rod Hinge Screw..... |
| 1518E | 5772 | Feed Lifting Rock Shaft Crank Connecting Rod Hinge Screw Nut..... |
| 307C | 8672 | Feed Lifting Rock Shaft Screw Center.... |
| 1513E | 8672 | " " " " " " Nut. |
| 3039 | 8649 | " Regulator..... |
| 1128E | 8672 | " " Hinge Screw..... |
| 818D | 8672 | " " Thumb Screw..... |
| 12379 | 8677 | " Rock Shaft..... |
| 20333 | ---- | Feed Rock Shaft complete, Nos. 12379 and 29633..... |
| 29633 | 8664 | Feed Rock Shaft Crank with 157J..... |
| 157J | 8672 | " " " " Clamping Screw.... |
| 307C | 8672 | " " " " Screw Center..... |
| 1513E | 8672 | " " " " " Nut..... |
| 18014 | 8664 | Needle Bar (hollow)..... |
| *12382 | 1144 | " " Connecting Link with 794E.... |
| 794E | 1144 | " " " " Adjusting Screw..... |
| *12383 | ---- | Needle Bar Connecting Stud..... |

PARTS FOR MACHINE NO. 31-52

| No. | Plate | Name |
|--------|-------|---|
| 12384 | 1144 | Needle Bar Connecting Stud complete, Nos. 453C, 1904 and 12383..... |
| 1904 | 1144 | Needle Bar Connecting Stud Roller (roller only)..... |
| 453C | 8646 | Needle Bar Connecting Stud Set Screw.... |
| 20188 | 8649 | " " Crank with 858C and 1065C.... |
| 1065C | 8646 | " " " Position Screw..... |
| 858C | 8646 | " " " Set Screw..... |
| 936E | 8646 | " " Screw Bushing..... |
| 19276 | 8646 | " Clamp with two 209F..... |
| 2273 | 8646 | " " Pin..... |
| 209F | 8212 | " Set Screw..... |
| *19386 | 8649 | Oscillating Rock Shaft..... |
| 19387 | ---- | Oscillating Rock Shaft complete, Nos. 4784, 12388 and 19386..... |
| 12388 | 8649 | Oscillating Rock Shaft Hinge Pin..... |
| 878D | 8646 | " " " " " Oil Hole Stop Screw..... |
| 12459 | 8646 | Oscillating Rock Shaft Hinge Pin Oil Hole Stop Screw Washer (leather).... |
| 448C | 8645 | Oscillating Rock Shaft Hinge Pin Set Screw..... |
| 4784 | 8646 | Oscillating Rock Shaft Oil Pad..... |
| 20016 | 8677 | " Shaft..... |
| 19496 | ---- | " " Crank..... |
| 19388 | 8646 | Oscillating Shaft Crank complete, Nos. 457C, 1518E, 19390 and 19496..... |
| 2049 | 5772 | Oscillating Shaft Crank Pin..... |
| 457C | 8646 | " " " Set Screw..... |
| 19389 | 8646 | " " " Slide Block.... |
| 226D | 2070 | " " " " " Cap Screw..... |
| 12424 | 8646 | Oscillating Shaft Crank Slide Block Cap Screw Washer..... |
| 969C | 8646 | Oscillating Shaft Crank Slide Block Screw Stud..... |
| 1518E | 5772 | Oscillating Shaft Crank Slide Block Screw Stud Nut..... |
| 19390 | ---- | Oscillating Shaft Crank Slide Block complete, Nos. 226D, 969C, 12424 and 19389..... |
| 12391 | 8664 | Presser Bar (hollow)..... |
| 12326 | 8646 | " " Guide Bracket with 453C.... |
| 453C | 8646 | " " " Set Screw.... |
| 52016 | 8664 | " " Lifter..... |
| 689C | 8646 | " " " Screw..... |
| 1520E | 8646 | " " " Nut..... |
| 12327 | 8671 | " " Lifting and Releasing Lever Bracket..... |

| No. | Plate | Name |
|--|-------|--|
| 11187 | 8664 | Presser Bar Spring (light) .051 wire.... |
| Note: No. 11187 is sent with this machine unless another spring is specified on order. | | |
| 12139 | 8664 | Presser Bar Spring (medium) .055 wire.... |
| 20023 | 8664 | " " " (heavy) .063 wire.... |
| 11170 | 8648 | " " " Washer..... |
| 19128 | 8665 | " Foot, for general work..... |
| 19218 | 8668 | " " with 228D, for strip gauge |
| 19480 | 8665 | " " for staying overgaiters, for 19479..... |
| 19483 | 8665 | Presser Foot, for rounding overgaiters, for 19482..... |
| 120157 | 8665 | Presser Foot (double tube) for two strips..... |
| 20046 | 8665 | Presser Foot (tube)..... |
| 20050 | 1224 | " " " for taping..... |
| 20052 | 1224 | " " " for outside stays and strips..... |
| 20053 | 1224 | Presser Foot (strip) for boning..... |
| 20171 | 8665 | " " (tube) for cording and cover- ing one cord with strip..... |
| 20374 | 8665 | Presser Foot with guide on bottom to the right of needle holes, for 20373.... |
| 20302 | 8665 | Presser Foot with guide on bottom to the right of needle holes..... |
| 26276 | 8667 | Presser Foot Hinge Pin..... |
| 20044 | ---- | " " Plate..... |
| 26275 | ---- | " " Shank..... |
| 20045 | 8667 | Presser Foot (hinged) complete, Nos. 20044, 26275 and 26276..... |
| 26276 | 8667 | Presser Foot Hinge Pin..... |
| 20047 | ---- | " " Plate..... |
| 20048 | ---- | " " Shank..... |
| 26231 | 8667 | " " Spring..... |
| 20049 | 1224 | Presser Foot (spring hinged) tube, com- plete, Nos. 20047, 20048, 26231 and 26276..... |
| 18055 | 8667 | Presser Foot Hinge Pin..... |
| 20129 | ---- | " " Plate..... |
| 20130 | ---- | " " Shank..... |
| 20131 | 8667 | Presser Foot (hinged) complete, hollowed across bottom between needle holes and heel, for riding seams, for gen- eral work, Nos. 18055, 20129 and 20130..... |
| 26276 | 8667 | Presser Foot Hinge Pin..... |
| 20188 | ---- | " " Plate..... |
| 20189 | ---- | " " Shank..... |

| No. | Plate | Name |
|-------|-------|---|
| 20170 | 8667 | Presser Foot (hinged) complete, 5/32 in. and above, for rounding overgaiters, Nos. 20188, 20189 and 26276..... |
| 26276 | 8667 | Presser Foot Hinge Pin..... |
| 44186 | ---- | " " Plate..... |
| 20189 | ---- | " " Shank..... |
| 44187 | 8667 | Presser Foot (hinged) complete for 1/8 in. gauge and below, for rounding overgaiters, Nos. 20189, 26276 and 44186..... |
| 26276 | 8667 | Presser Foot Hinge Pin..... |
| 43894 | ---- | " " Plate..... |
| 20048 | ---- | " " Shank..... |
| 26231 | 8667 | " " Spring..... |
| 43895 | 8667 | Presser Foot (spring hinged) tube, com- plete for taping, Nos. 20048, 26231, 26276 and 43894..... |
| 26276 | 8667 | Presser Foot Hinge Pin..... |
| 43973 | ---- | " " Plate..... |
| 43974 | ---- | " " Shank..... |
| 26231 | 8667 | " " Spring..... |
| 43975 | 8667 | Presser Foot (spring hinged) complete, for bolting cloth, Nos. 26231, 26276, 43973 and 43974..... |
| 190D | 2070 | Presser Foot Screw..... |
| 688E | 8682 | Pressure Regulating Thumb Screw..... |
| 19131 | 8651 | Shuttle (inside) Bobbin..... |
| 62606 | ---- | " " " Case..... |
| 1931C | 8651 | " " " " Latch and Position Finger..... |
| 2521 | 1255 | Shuttle (inside) Bobbin Case Latch and Position Finger Spring..... |
| 592E | 8651 | Shuttle (inside) Bobbin Case Latch and Position Finger Stop Screw..... |
| 19312 | 8651 | Shuttle (inside) Bobbin Case complete, Nos. 591F, 592E, 2521, 19149, 1931C and 62606..... |
| 19136 | 8651 | Shuttle (inside) Body..... |
| 591F | 8651 | " " Tension Regulating Screw..... |
| 19149 | 8651 | Shuttle (inside) Tension Spring..... |
| 19324 | 8651 | " " " 1 11/16 in. diam., Nos. 19131, 19136 and 19312..... |
| 19131 | 8651 | Shuttle (outside) Bobbin..... |
| 62608 | ---- | " " " Case..... |
| 19311 | 8651 | " " " " Latch and Position Finger..... |
| 2521 | 1255 | Shuttle (outside) Bobbin Case Latch and Position Finger Spring..... |

| No. | Plate | Name |
|-------|-------|---|
| 592E | 8651 | Shuttle (outside) Bobbin Case Latch and Position Finger Stop Screw..... |
| 19313 | 8651 | Shuttle (outside) Bobbin Case complete, Nos. 591F, 592E, 2521, 19172, 19311 and 62608..... |
| 19171 | 8650 | Shuttle (outside) Body for 19328..... |
| 19137 | 8650 | " " " " 19325..... |
| 591F | 8651 | " " " Tension Regulating Screw..... |
| 19172 | 8650 | Shuttle (outside) Tension Spring..... |
| 19326 | 8650 | Shuttle (outside) 1 11/16 in. diam., for 1/32 in. to 13/64 in. gauge, Nos. 19131, 19171 and 19313..... |
| 19325 | 8650 | Shuttle (outside) 1 11/16 in. diam., for 7/32 in. gauge and above, Nos. 19131, 19137 and 19313..... |
| 19139 | 8664 | Shuttle Driver with two 453C..... |
| 2049 | 5772 | " " " Pin..... |
| 453C | 8646 | " " " Set Screw..... |
| 24490 | ---- | " " Race Body with 19316, for 24493. |
| 19315 | ---- | " " " " 19316, for 19323. |
| 19379 | ---- | " " " " for 24013..... |
| 19316 | 1213 | " " " Loop Separator for 19315 and 24490..... |
| 24492 | 1241 | Shuttle Race Needle Guard for 24493..... |
| 19309 | 1213 | " " " " " 19323 and 24013..... |
| 1053D | 1241 | Shuttle Race Needle Guard Screw..... |
| 19317 | 1213 | " " " Ring (inside) for 19323, 24013 and 24493..... |
| 19381 | 8664 | Shuttle Race Ring (outside) for 24493... |
| 19318 | 1213 | " " " " " 19323 and 24013..... |
| 2532 | 1245 | Shuttle Race Ring Position Pin..... |
| 2533 | 8664 | " " " " Spring..... |
| 907D | 8650 | " " " " Screw..... |
| 24493 | 1241 | Shuttle Race complete, for 1/32 in. to 5/64 in. gauge, Nos. 19317, 19381, 24490, 24492, two each 907D, 1053D, 2533 and four 2532..... |
| 19323 | 1213 | Shuttle Race complete, for 3/32 in. to 5/32 in. gauge, Nos. 19309, 19315, 19317, 19318, two each 907D, 1053D, 2533 and four 2532..... |
| 24013 | 8664 | Shuttle Race complete, for 11/64 in. gauge and above, Nos. 19309, 19317, 19318, 19379, two each 907D, 1053D, 2533 and four 2532..... |
| 145F | 8645 | Shuttle Race Screw..... |

| No. | Plate | Name |
|-------|-------|---|
| 19145 | 8673 | Shuttle Race Slide (inside)..... |
| 19146 | 8673 | " " " (outside) for 7/16 in. gauge and below..... |
| 19281 | 8673 | Shuttle Race Slide (outside) for 15/32 in. to 15/16 in. gauge..... |
| 19385 | 8673 | Shuttle Race Slide (outside) for 31/32 in. to 1 1/4 in. gauge..... |
| 19147 | 8650 | Shuttle Race Slide Friction Spring..... |
| 651E | 8650 | " " " " " Screw |
| 19148 | 8673 | " " " Guide (back) with 651E and 19147..... |
| 19185 | 8673 | Shuttle Race Slide Guide (front) with 651E and 19147..... |
| 691F | 8650 | Shuttle Race Slide Guide Screw..... |
| 2921 | 1146 | Tension Disc..... |
| 19191 | 1146 | " Plate, for upper tension, with 19231..... |
| 134D | 8650 | Tension Plate Screw..... |
| 1560C | 1146 | " Regulating Thumb Nut..... |
| 19192 | 1146 | " Releaser..... |
| 43944 | 8649 | " Releasing Lever..... |
| 12398 | 8650 | " " " Hinge Pin..... |
| 12329 | 8650 | " " " Spring..... |
| 19193 | 1146 | " " " (intermediate).. |
| 19231 | 1146 | " " " " Hinge Block..... |
| 2269 | 1146 | Tension Releasing Lever (intermediate) Hinge Pin..... |
| 19194 | 1146 | Tension Releasing Lever (intermediate) Spring..... |
| 916C | 1146 | Tension Screw Stud..... |
| 44209 | ---- | " " " 916C with 1560C..... |
| 1547D | 1146 | " " " Nut..... |
| 2923 | 1146 | " Spring..... |
| 19195 | 1146 | Tension (upper) complete with Tension Release, Nos. 2269, 19191, 19193, 19194 two each 1547D, 2923, 19192, 44209 and four 2921..... |
| 12149 | 8671 | Thread Guard for 19162..... |
| 19159 | 8671 | " Guide Body..... |
| 19161 | 8671 | " " Cap..... |
| 19180 | 8671 | " " Roller..... |
| 905D | 8671 | " " Screw..... |
| 19182 | ---- | Thread Guide complete (roller) Nos. 905D and 19159 to 19161..... |
| 24129 | 1144 | Thread Take-up Crank..... |
| 3094 | 1144 | " " " Wedge..... |
| 690E | 1144 | " " " Screw..... |
| 19156 | 1144 | " " " Lever..... |

| No. | Plate | Name |
|-------|-------|--|
| 775E | 1144 | Thread Take-up Lever Cap Screw..... |
| 12188 | 1144 | " " " Hinge Pin..... |
| 12409 | 1144 | " " " Link..... |
| 11204 | 1144 | " " " Hinge Pin.... |
| 435C | 8671 | " " " " " Set Screw..... |
| 19157 | 1144 | Thread Take-up Lever complete, Nos.12188 12409 and 19156..... |
| 19158 | 8671 | Thread Take-up Spring (music wire)..... |
| 7326 | 8671 | " " " Regulator..... |
| 448C | 8645 | " " " " " Set Screw |
| 19287 | 786 | Throat Plate for 1/32 in. to 3/16 in. gauge for 19336..... |
| 43964 | 2082 | Throat Plate (flush) for 3/32 in. to 1/8 in. gauge, for 20103..... |
| 20375 | 8652 | Throat Plate for 3/32 in. to 3/16 in. gauge for 20373..... |
| 20384 | 8652 | Throat Plate for 3/32 in. to 3/16 in. gauge for 20383..... |
| 20081 | 8659 | Throat Plate for 3/32 in. to 1/4 in. gauge for 20294..... |
| 19288 | 786 | Throat Plate for 3/32 in. to 5/16 in. gauge for 19339..... |
| 19484 | 8659 | Throat Plate with 240D,19485, 19486 and 25786, for 1/8 in. to 1/4 in. gauge, for 19482..... |
| 19481 | 8656 | Throat Plate with 4515, for 1/8 in. to 5/16 in. gauge, for 19479..... |
| 20087 | 799 | Throat Plate for 3/16 in. to 5/16 in. gauge, for 20088..... |
| 24450 | 8658 | Throat Plate with 240D,19485,19486 and 25786, for 3/16 in. to 5/16 in.gauge for 24449..... |
| 20069 | 8653 | Throat Plate for 3/16 in. to 1/2 in. gauge, for 20068..... |
| 20073 | 8653 | Throat Plate for 3/16 in. to 1/2 in. gauge, for 20072..... |
| 19290 | 789 | Throat Plate for 7/32 in. to 1/2 in. gauge, for 19343..... |
| 19291 | 789 | Throat Plate for 7/32 in. to 5/8 in. gauge, for 19341..... |
| 20392 | 2085 | Throat Plate with 240D,19485,19486 and 25786, for 17/32 in. gauge, for 20391, for under strip..... |
| 20075 | 797 | Throat Plate for 17/32 in. to 13/16 in. gauge, for 20074..... |
| 20079 | 8654 | Throat Plate for 17/32 in. to 13/16 in. gauge, for 20316..... |

| No. | Plate | Name |
|--------|-------|---|
| 20085 | 799 | Throat Plate for 27/32 in. to 1 1/4 in. gauge, for 20084..... |
| 20280 | 2077 | Throat Plate for 27/32 in. to 1 1/4 in. gauge, for 20279..... |
| 19485 | 2085 | Throat Plate Arm for 19484,20392 and 24450..... |
| 25786 | 2085 | Throat Plate Arm Rivet..... |
| 691F | 8650 | " " " Screw..... |
| 4515 | 8682 | " " " Spring Guide for 19481..... |
| 19486 | 2085 | " " " " " 19484,20392 and 24450..... |
| 240D | 8662 | Throat Plate Spring Guide Screw for 19484,20392 and 24450..... |
| *15404 | ---- | Trade Mark..... |
| 15405 | ---- | " " Rivet..... |
| 44212 | 8678 | Drip Pan with four 1 in. wire nails..... |

Genuine Singer Needles should be used
in Singer Machines.
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO." 1

Needles in Containers marked
"For Singer Machines"
are not Singer made needles. 2

MACHINE No. 31-62

FOR STITCHING IN LIGHT AND MEDIUM WEIGHT FABRICS.
GAUGES FROM 3/32 TO 1 1/4 INCHES. DROP FEED. ALTERNATING PRESSERS. SPEED 2000 R.P.M.

NOTE: THIS MACHINE IS THE SAME AS THE 31-52 MACHINE WITH THE FOLLOWING EXCEPTIONS.

| No. | Plate | Name |
|--------|-------|--|
| *43948 | ---- | Arm with 11104, 15404 and two 15405, in place of 20013..... |
| 20475 | ---- | Face Plate..... |
| 20395 | 8670 | Face Plate complete, Nos. 19155, 19327 and 20475, in place of 19305..... |
| 219F | 5773 | Face Plate Screw, in place of 190D..... |
| 12391 | 8664 | Lifting Presser Bar (hollow)..... |
| 19356 | 5772 | " " " Bell Crank..... |
| 199D | 5772 | " " " " " Cap Screw |
| 19357 | 5772 | " " " " " Connect- ing Link..... |
| 199D | 5772 | Lifting Presser Bar Bell Crank Connect- ing Link Cap Screw..... |
| 19358 | 5772 | Lifting Presser Bar Bell Crank Driving Arm..... |
| 2049 | 5772 | Lifting Presser Bar Bell Crank Driving Arm Pin..... |
| 19359 | 5772 | Lifting Presser Bar Bell Crank Driving Arm Shaft..... |
| 19360 | 8669 | Lifting Presser Bar Bell Crank Driving Arm Shaft Bracket..... |
| 19361 | ---- | Lifting Presser Bar Bell Crank Driving Arm Shaft Bracket complete, Nos. 2049 and 19358 to 19360..... |
| 965D | 5773 | Lifting Presser Bar Bell Crank Driving Arm Shaft Bracket Screw..... |
| 19362 | 5772 | Lifting Presser Bar Bell Crank Driving Arm Eccentric Connection..... |
| 375C | 5772 | Lifting Presser Bar Bell Crank Driving Arm Eccentric Connection Hinge Screw |
| 24589 | 8669 | Lifting Presser Bar Guide Bracket with 453C..... |
| 453C | 8646 | Lifting Presser Bar Guide Bracket Set Screw..... |

PARTS FOR MACHINE NO. 31-62

| No. | Plate | Name |
|---|-------|---|
| 43956 | ---- | Lifting Presser Bar Guide Bracket com- plete, Nos. 19356, 19357, 24589, 43949 and three 199D..... |
| 24590 | 8669 | Lifting Presser Bar Guide Bracket Sup- port..... |
| 175D | 8650 | Lifting Presser Bar Guide Bracket Sup- port Screw..... |
| 4855 | 5772 | Lifting Presser Bar Lifter..... |
| 889C | 8646 | " " " " Screw..... |
| 1520E | 8646 | " " " " Nut.... |
| 12327 | 8671 | " " " Lifting and Releas- ing Lever Bracket..... |
| 11167 | 9664 | Lifting Presser Bar Spring (light) .051 wire..... |
| Note: No. 11167 is sent with this machine unless another spring is specified on order. | | |
| 12139 | 8664 | Lifting Presser Bar Spring (medium) .055 wire..... |
| 20023 | 8664 | Lifting Presser Bar Spring (heavy) .083 wire..... |
| 11170 | 8646 | Lifting Presser Bar Spring Washer..... |
| 20482 | 5773 | " " Foot..... |
| 193D | 5773 | " " Screw..... |
| 19365 | 8669 | Needle Bar Crank and Lifting Eccentric with 448C and 743C, in place of 20188 |
| 743C | 5773 | Needle Bar Crank and Lifting Eccentric Position Screw..... |
| 448C | 8645 | Needle Bar Crank and Lifting Eccentric Set Screw..... |
| 43949 | 5773 | Vibrating Presser Bar..... |
| 19367 | 5573 | " " " Cap..... |
| 199F | 5772 | " " " " Screw for 43949 |
| 219F | 5773 | " " " " " 19367 |
| 19368 | 5773 | " " " Cushion (rawhide). |
| 19369 | 5773 | " " " Spring..... |
| 335D | 5773 | " " " Screw..... |
| 20483 | 5773 | " " " Foot..... |
| 217D | 5773 | " " " Screw..... |

MACHINE BASE

| No. | Plate | Name |
|-------|-------|---|
| 19219 | 8675 | Bed Frame Cushion (leather)..... |
| 158C | 8675 | " " " Screw..... |
| 19220 | 8675 | " " " Spring..... |
| 19226 | 8675 | " " Hinge Connection..... |
| 19398 | ---- | " " " " 19226 with 211E and 19397..... |
| 19397 | 8675 | Bed Frame Hinge Connection Cap..... |
| 211E | 8675 | " " " " " Screw.... |
| 16555 | 8675 | " " " " Plate..... |
| 14010 | 8675 | " " " " Rivet..... |
| 20067 | 819 | " " with two each 16555,19398, four each 19219,19220, six each 14010, wood screws 1 1/4 in. No. 12 and eight 158C..... |

ATTACHMENTS AND ACCESSORIES

| No. | Plate | Name |
|--------|-------|---|
| 51075E | 8675 | Machine Hinge Bolt with 51581E..... |
| 51581E | ---- | " " " " Nut..... |
| 6055 | 8675 | " " " " Washer..... |
| 44180 | ---- | Machine Hinge complete, Nos. 6055,12361, 44139 and 51075E..... |
| 12361 | 8675 | Machine Hinge Connection..... |
| 44139 | 8675 | " " " Plate..... |
| 44140 | ---- | Machine Hinge complete, Nos. 12361,44139 and merlized wood screw 1 1/4 in.No. 14..... |
| 12405 | 8675 | Machine Rest (felt)..... |
| 41400 | 8680 | " " " Pin (wood)..... |
| 120348 | 8680 | Oiler (copper plated) with 120347..... |
| 120347 | 8680 | " Spout, 8 1/2 in. long..... |
| 26028 | 8680 | Screw Driver (large)..... |
| 26485 | 8680 | " " (small)..... |
| 120341 | 8680 | Tweezers (curved)..... |

BELT GUARD

| No. | Plate | Name |
|-------|-------|---|
| 41929 | 8677 | Belt Guard..... |
| 8418 | 8686 | " " Button..... |
| 8419 | 8647 | " " " Washer (leather)..... |
| 8420 | ---- | " " " " 8418 with 8419 and wood screws 1 1/4 in. No. 9 R.H.B.... |
| 41930 | 8686 | Belt Guard Hinge..... |
| 41931 | ---- | Belt Guard complete, Nos. 8420,41929,two 41930 and four wood screws 3/4 in. No.9..... |

BOBBIN WINDERS

BOBBIN WINDER

FOR NO. 4370

| No. | Plate | Name |
|-------|-------|---|
| 15072 | 8647 | Bobbin Position Pin..... |
| 12168 | 8685 | Bracket..... |
| 692D | 8647 | " Screw for 12172..... |
| 12169 | 8685 | Frame..... |
| 12171 | 8685 | Frame complete, Nos. 333D,5960,5961,5963 12169 and 15077..... |
| 32D | 8647 | Frame Hinge Screw..... |
| 5960 | 8685 | Friction Wheel (leather)..... |
| 5961 | 8685 | " " Washer..... |
| 333D | 8647 | " " " Screw..... |
| 15077 | 8685 | Spindle with 15072..... |
| 5963 | 8685 | " Flange..... |
| 12170 | 8685 | Spring..... |
| 180F | 8647 | " Screw..... |
| 12172 | ---- | Bobbin Winder complete, Nos. 32D,180F, 12168, 12170 and 12171..... |

BOBBIN WINDER
FOR NO. 12358

NOTE: THIS BOBBIN WINDER IS THE SAME AS NO. 12172
WITH THE FOLLOWING EXCEPTIONS.

| No. | Plate | Name |
|-------|-------|--|
| 20307 | 8685 | Frame, in place of 12169..... |
| 20308 | 8685 | Frame complete, Nos. 333D,5960,5961,5963 15077 and 20307, in place of 12171.. |
| 20309 | ---- | Bobbin Winder complete, Nos. 32D,180F, 12168,12170 and 20308..... |

BOBBIN WINDER
(SWINGING AUTOMATIC, RIGHT HAND)
FOR NO. 19131
FOR POWER TABLE

| No. | Plate | Name |
|---------|-------|--|
| 225433 | 8678 | Bobbin Winder and Tension Bracket Base.. |
| 225453 | 8686 | Frame with 202277 and 225438..... |
| 225454 | 8686 | " Hinge Pin..... |
| 202277 | 8676 | " Oil Packing (wick)..... |
| 225438 | 8676 | " Well Cap..... |
| 225455 | 8686 | " Spring..... |
| 225456 | 8676 | " Plunger..... |
| 202473 | 8686 | Pulley with 200380C..... |
| 200380C | 8676 | " Set Screw..... |
| 225381 | 8686 | Spindle..... |
| 225444 | 8686 | Stop Latch..... |
| 200056E | 8676 | " Screw..... |
| 225458 | 8686 | " Thumb Lever..... |
| 225459 | 8676 | " " Hinge Stud..... |
| 225459 | 8676 | " " Joint Stud..... |
| 202478 | 8686 | " Trip Lever..... |
| 200299H | 8676 | " Hinge Screw..... |
| 225461 | 8686 | Tension Bracket with 201499B..... |
| 200082D | 8676 | " Screw..... |
| 228026 | 8676 | " Washer..... |

BOBBIN WINDER

21

| No. | Plate | Name |
|---------|-------|--|
| 2102 | 8676 | Tension Disc..... |
| 202407 | 8676 | " Spring..... |
| 201499B | 8686 | " Stud..... |
| 201572B | 8676 | " Thumb Nut..... |
| 225462 | ---- | Tension Bracket complete, Nos. 201572B, 202407,225461 and two 2102..... |
| 225382 | 8678 | Bobbin Winder complete, Nos. 200056E, 200082D,200299H,202473,202478,225381 225433,225444,225453 to 225456, 225458,225462,228026,two each 225459 and wood screws 3/4 in. No. 12 R.H.B |

BOBBIN WINDER
(SWINGING AUTOMATIC, RIGHT HAND)
FOR NO. 19131
FOR STAND

| No. | Plate | Name |
|--------|-------|--|
| 27540 | 8669 | Base..... |
| 15072 | 8647 | Bobbin Position Pin..... |
| 27302 | 8669 | Frame..... |
| 50356D | 8676 | " Hinge Screw..... |
| 1820J | 8676 | " " Nut..... |
| 27303 | 8676 | " Spring..... |
| 27541 | 8669 | Pulley..... |
| *27849 | ---- | Spindle..... |
| 27538 | 8669 | " 27849 with 15072,27850 and 41828 |
| *27850 | ---- | " Collar..... |
| 41828 | 8647 | " Pin..... |
| 27306 | 8686 | Spool Pin..... |
| 27307 | 8686 | " Stand..... |
| 27308 | 8686 | Spool Stand complete, Nos. 418E,1562J, 2106,10141,11241,27306,27307 and two each 2455 and wood screws 1 in. No. 10..... |
| 11241 | 8681 | Spool Washer (cloth)..... |
| 27587 | 8686 | Stop Latch..... |
| 35D | 8647 | " Hinge Screw..... |
| 2455 | 8647 | Tension Disc..... |
| 1562J | 8647 | " Regulating Thumb Nut..... |
| 418E | 8647 | " Screw Stud..... |
| 10141 | 8647 | " Spring..... |
| 2106 | 8647 | " Thread Guide..... |

| No. | Plate | Name |
|-------|-------|---|
| 27875 | ---- | Bobbin Winder, Nos. 35D, 1620J, 27302, 27303, 27538, 27540, 27541, 27587, 50356D and two wood screws 1 in. No. 7..... |
| 27876 | ---- | Bobbin Winder (swinging automatic, right hand) complete, Nos. 27308 and 27875 |

DRIVING ATTACHMENT

| No. | Plate | Name |
|-------|-------|--|
| 16592 | 8687 | Balance Wheel (friction) with 7958, 16524 and two 435C..... |
| 16524 | ---- | Balance Wheel Friction Ring (leather).... |
| 7958 | 8674 | " " " " Stop Pin.... |
| 24355 | 8683 | " " Oil Cover..... |
| 210D | 8674 | " " " " Screw..... |
| 435C | 8671 | " " Set Screw..... |
| 15072 | 8647 | Bobbin Position Pin for 15077..... |
| 16514 | 8685 | " Winder Frame..... |
| 32D | 8647 | " " " Hinge Screw..... |
| 16515 | 8685 | Bobbin Winder Frame complete, Nos. 333D, 5960, 5961, 5963, 15077 and 16514..... |
| 5960 | 8685 | Bobbin Winder Friction Wheel (leather)... |
| 5961 | 8685 | " " " " Washer..... |
| 333D | 8647 | " " " " Screw |
| 15077 | 8685 | " " Spindle with 15072..... |
| 5963 | 8685 | " " " Flange..... |
| 27306 | 8686 | " " Spool Pin..... |
| 27307 | 8686 | " " Stand..... |
| 27308 | 8686 | Bobbin Winder Spool Stand complete, Nos. 418E, 1562J, 2106, 10141, 11241, 27306, 27307 and two each 2455 and wood screws 1 in. No. 10..... |
| 11241 | 8681 | Bobbin Winder Spool Washer (cloth)..... |
| 12170 | 8685 | " " Spring..... |
| 180F | 8647 | " " " Screw..... |
| 19258 | 8683 | " " Stop Latch with 152F and 1550H..... |
| 152F | 8674 | Bobbin Winder Stop Latch Adjusting Screw |
| 1550H | 2070 | " " " " " " Nut..... |
| 75D | 8674 | Bobbin Winder Stop Latch Hinge Screw.... |
| 27303 | 8676 | " " " " Spring..... |
| 2269 | 1146 | " " " " Stop Pin..... |
| 2455 | 8647 | " " Tension Disc..... |
| 1562J | 8647 | " " Regulating Thumb Nut..... |

| No. | Plate | Name |
|--------|-------|--|
| 418E | 8647 | Bobbin Winder Tension Screw Stud..... |
| 10141 | 8647 | " " " Spring..... |
| 2106 | 8647 | " " " Thread Guide..... |
| 16530 | 8685 | Bracket..... |
| 692D | 8647 | " Screw..... |
| 12458 | 8687 | Drip Pan with four 1 in. wire nails for 20141..... |
| 16518 | 8687 | Driving Arm with 2269, 2928 and two 15132 |
| 2928 | 8674 | " " Brake (leather)..... |
| 15132 | 8674 | " " " Rivet..... |
| 12178 | 8674 | " " Friction Plug (wood)..... |
| 427E | 8674 | " " " " Adjusting Screw..... |
| 1508C | 8674 | Driving Arm Friction Plug Adjusting Screw Nut..... |
| 692D | 8683 | Driving Arm Hinge Screw..... |
| 1579C | 8683 | " " " " Nut..... |
| 12475 | 8687 | " " Pitman..... |
| 20371 | 8683 | " " " Crank..... |
| 2022 | 8674 | " " " " Pin..... |
| 20372 | 8683 | " " " " Spring..... |
| 65D | 8674 | " " " " Hinge Screw..... |
| 19280 | ---- | Driving Arm complete, Nos. 32D, 75D, 180F, 427E, 692D, 1508C, 1579C, 12170, 12178, 16515, 16518, 16530, 19258 and 27303... |
| 16594 | 8683 | Driving Friction Pulley, 2 5/16 in. diam. with 861D and 10236..... |
| 10236 | 8674 | Driving Friction Pulley Center Bearing.. |
| 861D | 8647 | " " " Oil Hole Plug Screw..... |
| 27072 | ---- | Shaft Driving Pulley (sectional, grooved) 12 in. diam., 1 3/16 in. bore, with two 597C, for 20141..... |
| 597C | 8674 | Shaft Driving Pulley Clamping Screw.... |
| 12479 | 8683 | Starting Crank..... |
| 2022 | 8674 | " " Pin..... |
| 12477 | 8683 | " " Shaft..... |
| *44176 | ---- | " " " 12477 with 12479, 20371 and two 2022..... |
| 126036 | 8678 | Treadle..... |
| 126205 | 8683 | " Bracket (left)..... |
| 126206 | ---- | Treadle Bracket (left) complete, Nos. 23258, 126205, 126207, 126208 and two wood screws 1 in. No. 14..... |
| 126207 | 8683 | Treadle Bracket (left) Hook..... |
| 23258 | 8674 | " " " Friction Washer..... |
| 126208 | 8674 | Treadle Bracket (left) Hook Rivet..... |
| 46681 | 8683 | " " (right)..... |

DRIVING ATTACHMENT

| No. | Plate | Name |
|--------|-------|---|
| 80502 | ---- | Treadle Bracket (right) 46681 with two wood screws 1 in. No. 14..... |
| 126209 | ---- | Treadle complete, Nos. 80502, 126036 and 126208..... |
| 27637 | 8697 | Treadle Pitman Rod (lower)..... |
| 150208 | 8685 | " " " " Spring..... |
| 8055 | 8675 | " " " " Washer..... |
| 14081 | 8687 | " " " " (upper)..... |
| 80223 | 8687 | " " " " Clamp with 361C..... |
| 361C | 8674 | " " " " Screw..... |
| 2762 | 8687 | " " " " Stop Collar with 362C..... |
| 362C | 8674 | " " " " Set Screw..... |
| 14233 | 8687 | Treadle Pitman complete, Nos. 2762, 8055, 14081, 27637, 80223 and 150208..... |
| 126213 | ---- | Treadle and Pitman complete, Nos. 14233 and 126209..... |
| 20141 | ---- | Driving Attachment with Bobbin Winder and Treadle complete, Nos. 210D, 892D 12475, 18592, 18594, 19260, 20372, 24355, 27072, 27308, 44176, 126213 and two 65D |

BINDERS

FOR MACHINE NO. 31-62

| No. | Plate | Name |
|-------|-------|---|
| 35691 | 1248 | Binder on Slide 18114, for 1/2 in. to 1 1/2 in. ribbon binding, for blankets..... |
| 35692 | 8677 | Binder on Slide 18114, for 1 9/16 in. to 2 1/2 in. ribbon binding, for blankets..... |
| 35693 | 8677 | Binder on Slide 18114, for 2 9/16 in. to 3 1/2 in. ribbon binding, for blankets..... |
| 18114 | 8673 | Binder Slide..... |
| 35694 | 1249 | Feed Dog with 21 teeth (16 teeth to the inch) with 19118, for 35691 to 35693 and 35695..... |
| 19118 | 8672 | Feed Dog Spring Hook..... |
| 35696 | 1249 | Lifting Presser Foot for 35691..... |
| 35698 | 1249 | " " " " 35692 and 35693 |
| 35695 | 1249 | Throat Plate for 3/16 in. to 5/16 in. gauge, for 35691 to 35694..... |
| 35697 | 1249 | Vibrating Presser Foot for 35691..... |
| 35699 | 1249 | " " " " 35692 and 35693 |

FOLDERS

EDGE FOLDERS

| No. | Plate | Name |
|-------|-------|---|
| 26965 | 2660 | Edge Folder (left hand) on Slide complete, with right hand upper guide, for folding bobbinette curtains and inserting edge of lace..... |
| 28934 | 2660 | Edge Folder (right hand) and Slide complete, with left hand upper guide, for folding bobbinette curtains and inserting edge of lace..... |
| 35080 | 2679 | Edge Folder, to turn the goods in, use with 35081..... |
| 35081 | 2679 | Presser Foot (hinged) strip folding, with tape guide, for 35080..... |
| 35300 | 8679 | Edge Folder (left hand) on Slide complete, to turn edge under with right hand lower guide, for turning silk bolting cloth and stitching cotton webbing and ticking..... |
| 35994 | 5794 | Edge Folder (double) on Slide 18114..... |
| 18114 | 8673 | " " Slide..... |

STRIP FOLDERS

| No. | Plate | Name |
|--|-------|---|
| *26412 | ---- | Strip Folder..... |
| 18114 | 8673 | " " Slide..... |
| 26413 | 8679 | " " on Slide, Nos. 18114 and 26412..... |
| Note: When ordering No. 26413, give gauge required | | |
| 35102 | 2681 | Strip Folder on Slide 18114, for folding strip so that both edges will meet in center, for belt loops for trousers..... |
| 35103 | 2681 | Presser Foot (tube) for 35102..... |
| 35132 | 8679 | Strip Folder on Slide 18114 to turn both edges up, so that the edges will meet in center, for garters..... |
| 35133 | 2686 | Presser Foot (strip folding) to turn under both edges 1/4 in., for garters, for 35132..... |
| 35702 | 1251 | Strip Folder on Slide 18114 with lining guide, for making side straps for trousers..... |

STRIP FOLDERS

| No. | Plate | Name |
|-------|-------|---|
| 35703 | 1251 | Presser Foot for 35702..... |
| 35801 | 1254 | Strip Folder on Slide 18114, with guides for steel and interlining..... |
| 26276 | 8667 | Presser Foot Hinge Pin..... |
| 35802 | ---- | " " Plate for 35804..... |
| 35803 | ---- | " " Shank for 35804..... |
| 35804 | 1254 | Presser Foot (hinged) complete for 35801 Nos. 26276, 35802 and 35803..... |
| 35878 | 1254 | Strip Folder on Slide 18114, with guide for interlining..... |
| 36077 | 5796 | Strip Folder on Slide 18114, for light material, for making straps..... |
| 36078 | 5796 | Presser Foot for 36077..... |

STRIP FOLDER

FOR MACHINE NO. 31-52

| No. | Plate | Name |
|--------|-------|---|
| 120193 | 8661 | Feed Dog, 12 teeth (16 teeth to the inch) with 19118, for 120195 and 120196... |
| 19118 | 8672 | Feed Dog Spring Hook..... |
| 120194 | 8661 | Presser Foot for 120196..... |
| 120195 | 8661 | Throat Plate for 1/2 in. to 3/4 in. gauge for 120193 and 120196..... |
| 18114 | 8673 | Strip Folder Slide..... |
| 120196 | 8661 | " " on 18114, for hemming the right hand edge and turning over the left hand edge, for army shirts..... |

STRIP FOLDER

FOR MACHINE NO. 31-62

| No. | Plate | Name |
|-------|-------|------------------------------------|
| 36490 | 8679 | Edge Guide..... |
| 1443B | 8647 | " " Screw..... |
| 36491 | 8679 | Strip Folder (lower) on Slide..... |
| 36492 | 8679 | " " (upper) on Bracket..... |
| 1425B | 8647 | " " Screw..... |
| 793B | 8647 | " " Thumb Screw..... |

STRIP FOLDER

| No. | Plate | Name |
|-------|-------|--|
| 36493 | 8679 | Strip Folder (lower and upper) complete with Edge Guide, for banding knee pants, Nos. 793B, 1425B, 1443B and 36490 to 36492..... |
| 36606 | 8655 | Feed Dog, 21 teeth (16 teeth to the inch) with 19118, for 36493 and 36607..... |
| 36494 | 8654 | Feed Dog, 21 teeth (16 teeth to the inch) with 19118, for 36493 and 36496..... |
| 19118 | 8672 | Feed Dog Spring Hook..... |
| 36495 | 8655 | Lifting Presser Foot for 36493..... |
| 36496 | 8654 | Throat Plate, for 17/32 in. to 13/16 in. gauge, for 36493 and 36494..... |
| 36607 | 8655 | Throat Plate, for 3/8 in. to 1/2 in. gauge, for 36493 and 36606..... |
| 36497 | 8655 | Vibrating Presser Foot for 36493..... |

GUIDES

GUIDE

FOR MACHINE NO. 31-52

| No. | Plate | Name |
|-------|-------|---------------------------|
| 19230 | 8679 | Guide..... |
| 207F | 8647 | " Screw for 19230..... |
| 7071 | 8647 | " " Washer for 19230..... |

GUIDES (Hinged)

FOR CLOSING FRONT SEAMS ON STRAIGHT FRONT CORSETS

| No. | Plate | Name |
|--------|-------|---|
| 36224 | 2059 | Guide (right hand) for 35287..... |
| 36225 | 2059 | " " " Hinge Plate for 35287 |
| 50094D | 2059 | " " " Screw for 35287 |
| 35287 | 2059 | Guide (hinged) right hand complete, Nos. 36224, 36225 and 50094D..... |
| 35288 | 2059 | Presser Foot with guide on bottom to the left of needle holes, for 35287..... |
| 36226 | 2059 | Guide (left hand) for 35289..... |
| 36227 | 2059 | " " " Hinge Plate for 35289. |

LAP SEAM FELLERS

| No. | Plate | Name |
|--------|-------|---|
| 20387 | 8657 | Feed Dog, 16 spiked teeth (16 teeth to the inch) with 19118, for heavy lap seam feller, for 20388..... |
| 19118 | 8672 | Feed Dog Spring Hook..... |
| *26269 | ---- | Folder for 26272..... |
| 18114 | 8673 | " Slide..... |
| 19294 | 8647 | " " Spring..... |
| 405E | 8647 | " " Screw..... |
| 26272 | 8681 | Lap Seam Feller (right hand) complete, Nos. 18114 and 26269..... |
| *26396 | ---- | Folder for 26397..... |
| 26397 | 8681 | Lap Seam Feller (left hand) complete, Nos. 18114 and 26396..... |
| 36880 | 8681 | Lap Seam Feller (left hand) on Slide 18114, to fold top only..... |
| 26565 | 2071 | Lap Seam Feller (right hand) on Slide 18114, to fold top only..... |
| 26276 | 8667 | Presser Foot Hinge Pin..... |
| 26382 | ---- | " " Plate..... |
| 26395 | ---- | " " Shank..... |
| 26383 | 8656 | Presser Foot (hinged) complete, for X heavy, XX heavy and XXX heavy lap seam feller, Nos. 26276, 26382 and 26395..... |
| 26276 | 8667 | Presser Foot Hinge Pin..... |
| 35195 | ---- | " " Plate..... |
| 26275 | ---- | " " Shank..... |
| 35196 | 8656 | Presser Foot (hinged) complete, for 3/32 in. to 3/8 in. gauge, for light medium and heavy lap seam feller, Nos. 26275, 26276 and 35195..... |
| 19147 | 8650 | Shuttle Race Slide Friction Spring..... |
| 651E | 8650 | " " " " Screw..... |
| 19189 | 8681 | " " " Guide (front) with 651E and 19147..... |
| 914F | 8647 | Shuttle Race Slide Guide Screw for 19189 |
| 19190 | 8656 | Throat Plate, for 7/32 in. to 1/2 in. gauge, for 19340 and 24482..... |
| 20077 | 797 | Throat Plate, for 17/32 in. to 13/16 in. gauge, for 20076..... |
| 20089 | 800 | Throat Plate, for 27/32 in. to 1 1/4 in. gauge, for 20088..... |
| 20104 | 800 | Throat Plate, for 3/32 in. to 1/8 in. gauge, for 20103..... |
| 20196 | 8657 | Throat Plate, for 3/16 in. to 1/2 in. gauge, for 20195..... |
| 19283 | 788 | Throat Plate, for 15/64 in. to 9/16 in. gauge, for 19274..... |

LAP SEAM FELLERS

| No. | Plate | Name |
|-------|-------|--|
| 19289 | 788 | Throat Plate, for 3/32 in. to 3/8 in. gauge, for 19344..... |
| 43965 | 2082 | Throat Plate, for 3/16 in. to 5/16 in. gauge, for 20086..... |
| 20388 | 8657 | Throat Plate, for 33/64 in. to 13/16 in. gauge, for 20387..... |

PRESSER FEET

| No. | Plate | Name |
|-------|-------|--|
| 26404 | 1224 | Presser Foot (tube) for reeding..... |
| 26276 | 8667 | " " Hinge Pin..... |
| 26405 | ---- | " " Plate..... |
| 26275 | ---- | " " Shank..... |
| 26406 | 1224 | Presser Foot (tube) hinged complete, for reeding, Nos. 26275, 26276 and 26405. |
| 26407 | 1224 | Presser Foot, for double strips (tube) for reeding..... |
| 26408 | 1224 | Presser Foot, for double strips (tube).. |
| 26276 | 8667 | " " Hinge Pin..... |
| 26409 | ---- | " " Plate..... |
| 26275 | ---- | " " Shank..... |
| 26410 | 1224 | Presser Foot, for double strips (tube) hinged, complete, Nos. 26275, 26276 and 26409..... |
| 26411 | 8666 | Presser Foot (strip folding) for cording |
| 26414 | 8666 | " " " " opening seams and enclosing folded edges.... |
| 26415 | 8666 | Presser Foot (strip folding) for short strips..... |
| 36089 | 5797 | Presser Foot (strip folding) for long strips..... |
| 26416 | 8666 | Presser Foot (strip folding) with guide, for opening seams..... |
| 26276 | 8667 | Presser Foot Hinge Pin..... |
| 26417 | ---- | " " Plate..... |
| 26275 | ---- | " " Shank..... |
| 26418 | 8666 | Presser Foot (strip folding) hinged, complete, with guide for opening seams, Nos. 26275, 26276 and 26417.... |
| 26276 | 8667 | Presser Foot Hinge Pin..... |
| 26518 | ---- | " " Plate..... |
| 26275 | ---- | " " Shank..... |
| 26519 | 2679 | Presser Foot (hinged, tube) complete, for double strips, for reeding, Nos. 26275, 26276 and 26518..... |

| No. | Plate | Name |
|--------|-------|--|
| 26574 | 8666 | Presser Foot, for gathering..... |
| 26887 | 5646 | " " (strip folding) with two tubes, for stitching two rows of soutache braid on the folded strip.. |
| 26278 | 8667 | Presser Foot Hinge Pin..... |
| 28801 | ---- | " " Plate..... |
| 26275 | ---- | " " Shank..... |
| 28802 | 8666 | Presser Foot (hinged) strip folding, complete, Nos. 26275, 26276 and 28801... |
| 28995 | 2670 | Presser Foot, for braiding..... |
| 35071 | 2670 | " " (strip folding) for folding strip and inserting piping on each edge of strip..... |
| 35083 | 2681 | Presser Foot (strip folding) for straight cut goods, to turn under the right and left edges 5/16 in., with guide, for interlining..... |
| 35111 | 2670 | Presser Foot with upper and lower strip folder, for 1/4 in. to 5/8 in. gauge. |
| 35194 | 5646 | Presser Foot, for gathering..... |
| 35259 | 2679 | " " (strip folding) with tape guide..... |
| 35362 | 8666 | Presser Foot with upper and lower strip folder..... |
| 35542 | 1003 | Presser Foot (tube) for strip, with two tubes for braid, to stitch braid to each edge of strip..... |
| 35835 | 8666 | Presser Foot (strip folding) with tongue slotted for interlining and guide, for steel..... |
| 26276 | 8667 | Presser Foot Hinge Pin..... |
| 35885 | ---- | " " Plate..... |
| 35886 | ---- | " " Shank..... |
| 35887 | 5797 | Presser Foot (strip folding) hinged, complete, with guide for draw string, Nos. 26276, 35885 and 35886..... |
| 26276 | 8667 | Presser Foot Hinge Pin..... |
| 36295 | ---- | " " Plate..... |
| 20048 | ---- | " " Shank..... |
| 26231 | 8667 | " " Spring..... |
| 36296 | 1003 | Presser Foot (tube) spring hinged, complete, with guide, for opening seams, Nos. 20048, 26231, 26276 and 36295.. |
| 36297 | 5798 | Presser Foot with upper and lower strip folder, for 11/16 in. to 1 1/4 in. gauge..... |
| 120157 | 8665 | Presser Foot (double tube) for two strips..... |

PRESSER FOOT EXTENSIONS

| No. | Plate | Name |
|-------|-------|---|
| 19216 | 8668 | Presser Foot with 228D..... |
| 26279 | 8668 | " " Extension, 1/16 in., for 19216..... |
| 26280 | 8668 | Presser Foot Extension, 1/8 in., for 19216..... |
| 26281 | 8668 | Presser Foot Extension, 1/4 in., for 19216..... |
| 26282 | 8668 | Presser Foot Extension, 3/8 in., for 19216..... |
| 26283 | 8668 | Presser Foot Extension, 1/2 in., for 19216..... |
| 228D | 8212 | Presser Foot Extension Screw..... |

PRESSER FOOT STRIP GAUGE

| No. | Plate | Name |
|-------|-------|--------------------------------|
| 19216 | 8668 | Presser Foot with 228D..... |
| 25967 | 8668 | " " Strip Gauge for 19216..... |
| 228D | 8212 | " " " " Screw..... |

QUILTERS

| No. | Plate | Name |
|--------|-------|---|
| 28659 | 8681 | Quilter Guide for 28660..... |
| 25992 | 8681 | " " Holder with two 207F..... |
| 207F | 8647 | " " " Set Screw..... |
| 207F | 8647 | " " " Set Screw..... |
| 28660 | 8681 | Quilter complete, Nos. 25992 and 28659.. |
| 120479 | 8212 | " Guide (left) for 120485..... |
| 120480 | 8212 | " " (right) for 120485..... |
| 120481 | 8212 | " " Bracket for 120482..... |
| 120482 | ---- | " " 120481 with 120483 and two 209C, for 120485..... |
| 209C | 8212 | Quilter Guide Bracket Set Screw..... |
| 120483 | 8212 | " " Disengaging Sleeve for 120482..... |
| 120484 | 8212 | Quilter Guide Disengaging Sleeve Spring..... |
| 602D | 8647 | " " " " " " Screw..... |
| 209C | 8212 | Quilter Guide Set Screw..... |
| 120485 | ---- | Quilter complete, Nos. 602D, 120479, 120480, 120482 and 120484..... |

RUFFLERS

RUFFLER No. 35305

RUFFLER (POWER) WITH LEVER FOR THROWING RUFFLING
BLADE INTO ACTION, FOR INTERMITTENT RUFFLING,
FOR SHIRT YOKINGS, ETC.

| No. | Plate | Name |
|-------|-------|--|
| 28590 | 2070 | Driving Lever..... |
| 1101C | 2070 | " " Hinge Screw..... |
| 1847C | 2070 | " " " Nut..... |
| 28591 | 2070 | " " Spring..... |
| 28592 | 2070 | " " Collar..... |
| 35302 | 2070 | Frame..... |
| 35306 | ---- | Needle Clamp Body..... |
| 28228 | 2069 | " " Roller..... |
| 209F | 8212 | " " Screw..... |
| 35307 | 2069 | Needle Clamp complete, Nos. 28228, 35306 and two 209F..... |
| 35303 | 2070 | Presser Foot..... |
| 185H | 2070 | " " Screw..... |
| 35304 | 2070 | Ruffling Blade..... |
| 24203 | 2070 | " " Holder..... |
| 226J | 2070 | " " " Cap Screw..... |
| 24204 | 2070 | " " " Spring..... |
| 24205 | 2070 | " " " Stop..... |
| 24206 | 2070 | " " " Stud..... |
| 1550H | 2070 | " " " Nut..... |
| 28607 | 2070 | " " " Stop..... |
| 28600 | 2070 | " " Lever..... |
| 580B | 2070 | " " Adjusting Thumb Screw..... |
| 1603E | 2070 | Ruffling Blade Lever Adjusting Thumb Screw Nut..... |
| 1049D | 2070 | Ruffling Blade Lever Stop Screw..... |
| 665J | 2070 | " " Screw..... |
| 28601 | 2070 | Starting Lever with 190D..... |
| 190D | 2070 | " " Clamping Screw..... |
| 35305 | 2069 | Ruffler complete for 35308, Nos. 185H, 226J, 580B, 1049D, 1101C, 1550H, 1603E, 1647C, 24203 to 24206, 28590 to 28592, 28600, 28601, 28607, 35302 to 35304, 35307 and two 665J..... |
| 35311 | 2072 | Edge Folder (left hand) on Slide com- plete, to turn the goods up with separating blade and right hand up- per guide, for 35305..... |
| 36321 | 2662 | Feed Dog, 16 teeth (16 teeth to the inch) with 19118, for 35305 and 36322..... |

| No. | Plate | Name |
|-------|-------|--|
| 36323 | 2663 | Feed Dog, 16 teeth (16 teeth to the inch) with 19118, for 35305 and 36324..... |
| 35312 | 2072 | Ruffling Blade for 35311..... |
| 35308 | 2071 | Strip Folder on Slide 18114, with upper right hand edge folder to turn the goods under, with separating blade and guide, for draw string, for 35305 |
| 35309 | 2071 | Strip Folder on Slide 18114, with separ- ating blade and guide, for draw string, for 35305..... |
| 18114 | 8673 | Strip Folder Slide..... |
| 35310 | 2071 | " Guide on Slide 18114, with guide, for draw string, for 35305..... |
| 18114 | 8673 | Strip Guide Slide..... |
| 36322 | 2662 | Throat Plate, for 17/32 in. to 13/16 in. gauge, for 35305 and 36321..... |
| 36324 | 2663 | Throat Plate, for 27/32 in. to 1 1/4 in. gauge, for 35305 and 36323..... |

RUFFLER No. 35812

RUFFLER (POWER) WITH LEVER FOR THROWING RUFFLING
BLADE INTO ACTION, FOR INTERMITTENT RUFFLING,
FOR SHIRT YOKINGS, ETC.

| No. | Plate | Name |
|-------|-------|---|
| 28590 | 2070 | Driving Lever..... |
| 1101C | 2070 | " " Hinge Screw..... |
| 1647C | 2070 | " " " Nut..... |
| 28591 | 2070 | " " Spring..... |
| 28592 | 2070 | " " Collar..... |
| 28593 | 1255 | Frame..... |
| 35306 | ---- | Needle Clamp Body..... |
| 28228 | 2069 | " " Roller..... |
| 209F | 8212 | " " Screw..... |
| 35307 | 2069 | Needle Clamp complete, Nos. 28228, 35306 and two 209F..... |
| 35807 | 1255 | Presser Foot (left)..... |
| 185H | 2070 | " " " Screw..... |
| 62527 | 8650 | " " (right) Hinge Pin..... |
| 35808 | ---- | " " Plate..... |
| 28596 | ---- | " " " Shank..... |
| 28597 | 1255 | " " " Cap..... |
| 198D | 1255 | " " " Screw.... |
| 2656 | 1255 | " " " Spring..... |
| 706J | 1255 | " " " Stop Screw... |

| No. | Plate | Name |
|-------|-------|--|
| 2521 | 1255 | Presser Foot (right) Spring..... |
| 35809 | 1255 | Presser Foot (right) complete, Nos. 2521 28598, 35808 and 62527..... |
| 35810 | 1255 | Ruffling Blade..... |
| 24203 | 2070 | " " Holder..... |
| 228J | 2070 | " " " Cap Screw..... |
| 24204 | 2070 | " " " Spring..... |
| 24205 | 2070 | " " " Stop..... |
| 24206 | 2070 | " " " Stud..... |
| 1550H | 2070 | " " " Nut..... |
| 28607 | 2070 | " " " Stop..... |
| 35811 | 1255 | " " Lever..... |
| 560B | 2070 | " " Adjusting Thumb Screw..... |
| 1603E | 2070 | Ruffling Blade Lever Adjusting Thumb Screw Nut..... |
| 1049D | 2070 | Ruffling Blade Lever Stop Screw..... |
| 665J | 2070 | " " Screw..... |
| 28601 | 2070 | Starting Lever with 190D..... |
| 190D | 2070 | " " Clamping Screw..... |
| 35812 | 1255 | Ruffler complete for 35813, Nos. 185H, 226J, 560B, 706J, 1049D, 1101C, 1550H, 1603E, 1647C, 2656, 24203 to 24206, 28590 to 28593, 28597, 28601, 28607, 35307, 35807, 35809 to 35811, two 665J and three 198D..... |
| 35813 | 1256 | Double Edge Folder (right hand) with separating blade, for ruffling shirt body and putting in yoke, for 35812. |
| 35814 | 8663 | Feed Dog, 8 teeth (16 teeth to the inch) with 19118, for 35812 and 35815..... |
| 19118 | 8672 | Feed Dog Spring Hook..... |
| 35815 | 8663 | Throat Plate, for 3/16 in. to 3/8 in. gauge, for 35812 and 35814..... |

RUFFLER No. 36004

RUFFLER (POWER) WITH LEVER FOR THROWING RUFFLING
BLADE INTO ACTION, FOR INTERMITTENT RUFFLING,
FOR SHIRT YOKINGS, ETC.

| No. | Plate | Name |
|-------|-------|----------------------|
| 28590 | 2070 | Driving Lever..... |
| 1101C | 2070 | " " Hinge Screw..... |
| 1647C | 2070 | " " " Nut..... |

| No. | Plate | Name |
|-------|-------|---|
| 28591 | 2070 | Driving Lever Spring..... |
| 28592 | 2070 | " " " Collar..... |
| 35302 | 2070 | Frame..... |
| 35306 | ---- | Needle Clamp Body..... |
| 28228 | 2069 | " " Roller..... |
| 209F | 6212 | " " Screw..... |
| 35307 | 2069 | Needle Clamp complete, Nos. 26228, 35306 and two 209F..... |
| 35303 | 2070 | Presser Foot..... |
| 185H | 2070 | " " Screw..... |
| 36002 | 5795 | Ruffling Blade..... |
| 24203 | 2070 | " " Holder..... |
| 226J | 2070 | " " " Cap Screw..... |
| 24204 | 2070 | " " " Spring..... |
| 24205 | 2070 | " " " Stop..... |
| 24206 | 2070 | " " " Stud..... |
| 1550H | 2070 | " " " Nut..... |
| 28607 | 2070 | " " " Stop..... |
| 36003 | 5795 | " " Lever..... |
| 560B | 2070 | " " Adjusting Thumb Screw..... |
| 1603E | 2070 | Ruffling Blade Lever Adjusting Thumb Screw Nut..... |
| 1049D | 2070 | Ruffling Blade Lever Stop Screw..... |
| 665J | 2070 | " " Screw..... |
| 28601 | 2070 | Starting Lever with 190D..... |
| 190D | 2070 | " " Clamping Screw..... |
| 36004 | 5795 | Ruffler complete for 35308, Nos. 185H, 226J, 560B, 1049D, 1101C, 1550H, 1603E, 1647C, 24203 to 24206, 28590 to 28592, 28601, 28607, 35302, 35303, 35307, 36002, 36003 and two 665J..... |
| 18114 | 8673 | Strip Folder Slide..... |
| 35308 | 2071 | " " on Slide 18114, with upper right hand edge folder to turn the goods under, with separating blade and guide for draw string, for 36004 |

SHIRT CLOSING PARTS

FOR MACHINE NO. 31-52

| No. | Plate | Name |
|-------|-------|---|
| 20317 | 8662 | Feed Dog, 15 teeth (16 teeth to the inch) with 19118, for 20318..... |
| 19118 | 8672 | Feed Dog Spring Hook..... |
| 26487 | 8662 | Hemmer (foot) for felling..... |
| 6267 | 8662 | " Folder for 26487..... |

| No. | Plate | Name |
|---|-------|--|
| 25888 | 8662 | Hemmer Tongue for 26487..... |
| Note: When ordering Nos. 6267 or 25888, give width of hem and No. of Hemmer for which it is required. | | |
| 20318 | 8662 | Throat Plate, for 1/32 in. to 1/4 in. gauge, with 2653, for 20317..... |
| 26488 | 8662 | Throat Plate Cloth Guide..... |
| 102D | 8662 | " " " " Hinge Screw.... |
| 2653 | 8662 | " " " " Stop Pin..... |
| 26489 | 8662 | " " Spring Guide..... |
| 240D | 8662 | " " " " Screw..... |

THROAT PLATES AND FEED DOGS

FOR MACHINE NO. 31-32

| No. | Plate | Name |
|-------|-------|--|
| 26725 | 1328 | Feed Dog, 10 teeth (16 teeth to the inch) with 19118, for 26726, 36310, 36311 and 36543..... |
| 19118 | 8672 | Feed Dog Spring Hook..... |
| 26726 | 1328 | Throat Plate, for 5/32 in. to 1/2 in. gauge, for under strip, for 26725.... |
| 36310 | 2086 | Throat Plate, for 5/32 in. to 1/2 in. gauge, for two under strips, for 26725..... |
| 36311 | 2086 | Throat Plate, for 5/32 in. to 1/2 in. gauge, for two under strips, with adjustable under strip guide, for 26725..... |
| 36543 | 8660 | Throat Plate, for 5/32 in. to 1/2 in. gauge, with adjustable under strip guide, for 26725..... |
| 36312 | 2086 | Feed Dog, 10 teeth (16 teeth to the inch) with 19118, for 36313 to 36316..... |
| 19118 | 8672 | Feed Dog Spring Hook..... |
| 36313 | 2086 | Throat Plate, for 17/32 in. to 13/16 in. gauge, for under strip, for 36312... |
| 36314 | 5800 | Throat Plate, for 17/32 in. to 13/16 in. gauge, for two under strips, for 36312..... |
| 36315 | 5800 | Throat Plate, for 17/32 in. to 13/16 in. gauge, with adjustable under strip guide, for 36312..... |

| No. | Plate | Name |
|-------|-------|---|
| 36316 | 8660 | Throat Plate, for 17/32 in. to 13/16 in. gauge, for two under strips, with adjustable under strip guide, for 36312..... |
| 36317 | 5802 | Feed Dog, 10 teeth (16 teeth to the inch) with 19118, for 36318..... |
| 19118 | 8672 | Feed Dog Spring Hook..... |
| 36318 | 5802 | Throat Plate, for 53/64 in. to 1 1/4 in. gauge, for under strip, for 36317... |

SPOOL HOLDER

(DISC)

| No. | Plate | Name |
|--------|-------|---|
| 26763 | 8670 | Bracket with 219F and 50053D..... |
| 219F | 5773 | " Screw..... |
| 50053D | 8663 | " Thumb Screw..... |
| 19066 | 8670 | Spindle..... |
| 19067 | 8670 | " Thread Guiding Disc..... |
| 691F | 8650 | " " " " Screw..... |
| 26784 | 8670 | Spool Holder complete, Nos. 691F, 19066, 19067 and 26763..... |

TAPE HOLDERS

TAPE HOLDER

(5 IN. DISC)

| No. | Plate | Name |
|-------|-------|--|
| 36795 | 2116 | Tape Holder Body..... |
| 36796 | 2116 | " " Cover..... |
| 55D | 8663 | " " Hinge Screw..... |
| 28994 | 2116 | Tape Holder complete, Nos. 55D, 36795, 36796 and two wood screws 1 1/4 in. No. 10..... |

TAPE HOLDER

(8 IN. DISC)

| No. | Plate | Name |
|-------|-------|--|
| 26061 | 989 | Bracket Wire with Disc..... |
| 26062 | 989 | Disc (adjustable) with 35925 and 51224D. |

TAPE HOLDER

| No. | Plate | Name |
|--------|-------|--|
| 35925 | 8663 | Disc Hub..... |
| 51224D | 8645 | " " Thumb Screw..... |
| 26325 | 8669 | Foot with 736J and three wood screws 1 in. No. 12..... |
| 736J | 8663 | Foot Screw..... |
| 26063 | 989 | Tape Holder (straight) complete for 26065, Nos. 26061 and 26062..... |
| 26065 | ---- | Tape Holder with Foot complete, Nos. 26063 and 26325..... |

TAPE HOLDER

(10 IN. DISC)

| No. | Plate | Name |
|--------|-------|---|
| 26066 | 989 | Bracket Wire..... |
| 26067 | ---- | Bracket Wire complete, Nos. 26066, 26068 and 26072..... |
| 26068 | 989 | Disc..... |
| 26069 | 989 | " Hub..... |
| 26070 | ---- | " Rivet for 26071..... |
| 26071 | ---- | Disc complete, Nos. 26068 and 26069..... |
| 26064 | 8669 | Foot with 736J and three wood screws 1 in. No. 12..... |
| 736J | 8663 | Foot Screw..... |
| 26072 | 989 | Tape Guide..... |
| 26073 | 8663 | Tension Adjusting Collar with 51224E.... |
| 51224B | 8645 | " " " Thumb Screw.... |
| 13211 | 8663 | " " " Spring..... |
| 26074 | 989 | Tape Holder (offset) complete for 26343, Nos. 13211, 26067, 26071 and 26073.... |
| 26343 | ---- | Tape Holder with Foot complete, Nos. 26064 and 26074..... |

TAPE SPOOL FIXTURE (Wire)

| No. | Plate | Name |
|-------|-------|--|
| 4516 | 8684 | Tape Spool Fixture (wire) with fixed cone..... |
| 4518 | 8684 | Tape Spool Fixture Cone..... |
| 1541B | 8684 | " " " Regulating Thumb Nut. |
| 8019 | 8684 | " " " Spring..... |
| 4517 | 8684 | Tape Spool Fixture (wire) with fixed cone complete, Nos. 1541B, 4516, 4518 and 8019..... |

SPOOL FIXTURE (Wire)

| No. | Plate | Name |
|-------|-------|--|
| 4715 | 8684 | Spool Fixture (wire) with two 10145..... |
| 4717 | 8684 | " " Flange..... |
| 10145 | 8684 | " " Thread Eyelet..... |
| 4718 | 8684 | " " Washer (felt)..... |
| 4716 | 8684 | Spool Fixture complete, for two spools, Nos. 4715, two 4717 and three 4718.. |

FOOT LIFTER PARTS

| No. | Plate | Name |
|---|-------|--|
| 5596 | 8682 | Bell Crank..... |
| 56848 | ---- | " " 5596 with 5599 and 5601..... |
| 5599 | 8682 | " " Bracket..... |
| 178E | 8676 | " " " Screw..... |
| 5601 | 8676 | " " Hinge Pin..... |
| 5735 | 8682 | " " Spring..... |
| 5598 | 8682 | Bell Crank complete, Nos. 5735 and 56848 |
| 5670 | ---- | Chain, length 26 in. to 35 in. with 56864 and 56865..... |
| Note: When ordering No. 5670, state length required | | |
| 4879 | 8682 | Chain Connecting Link for 4885..... |
| 56864 | 8682 | " Hook (large)..... |
| 56865 | 8682 | " (small)..... |
| 12237 | 8682 | Lifting Lever with 448C, for 20008..... |
| 20340 | 8682 | " " " 448C, for 43928..... |
| 12415 | 8682 | " " Connecting Rod..... |
| 12416 | 8682 | " " " " " Joint..... |
| 78D | 8676 | " " " " " Hinge Screw..... |
| 1521E | 8676 | Lifting Lever Connecting Rod Lock Nut... |
| 802D | 8676 | " " Hinge Screw..... |
| 12241 | 8671 | " " Link for 20008..... |
| 21301 | 5773 | " " " " 43928..... |
| 766D | 8671 | " " " Hinge Screw..... |
| 12240 | 8682 | " " Pin for 20008..... |
| 19372 | 5773 | " " " " 43928..... |
| 448C | 8645 | " " " Set Screw..... |
| 2763 | 819 | Rock Shaft..... |
| 12242 | 819 | " " Hanger with two wood screws 1 in. No. 10..... |
| 6337 | 819 | Rock Shaft Lifting Bracket with two 356C |
| 12243 | 819 | " " " " " Hook for 5598 |
| 7125 | 819 | " " " " " " 5670 |

FOOT LIFTER PARTS

| No. | Plate | Name |
|-------|-------|---|
| 356C | 8671 | Rock Shaft Lifting Bracket Hook Set Screw..... |
| 356C | 8671 | Rock Shaft Lifting Bracket Set Screw.... |
| 2770 | 319 | " " " Stop Dog with 356C..... |
| 356C | 8671 | " " " " Set Screw..... |
| 4880 | 819 | Rock Shaft complete, Nos. 2763,2770,7125 12243 and two each 6337 and 12242... |
| 4881 | 819 | Treadle..... |
| 4882 | 8682 | " Shaft..... |
| 4883 | 8682 | " Spring..... |
| 4884 | 819 | " Stand..... |
| 4885 | 819 | Treadle complete, Nos. 4879,4881 to 4884 and two wood screws 1 in. No. 16.... |
| 20008 | ---- | Foot Lifter complete for 31-52 Machine, Nos. 76D,766D,802D,1521E,4880,4885, 5598,5670,12237,12240,12241,12415, 12416 and two 178E..... |
| 43928 | ---- | Foot Lifter complete for 31-62 Machine, Nos. 76D,766D,802D,1521E,4880,4885, 5598,5670,12415,12416,19372,20340, 21301 and two 178E..... |

KNEE LIFTER PARTS

| No. | Plate | Name |
|-------|-------|--|
| 5596 | 8682 | Bell Crank..... |
| 56848 | ---- | " " 5596 with 5599 and 5601..... |
| 5599 | 8682 | " " Bracket..... |
| 178E | 8676 | " " Screw..... |
| 5601 | 8676 | " " Hinge Pin..... |
| 5735 | 8682 | " " Spring..... |
| 5598 | 8682 | Bell Crank complete, Nos. 5735 and 56848 |
| 12237 | 8682 | Lifting Lever with 448C, for 12445 and 20466..... |
| 20340 | 8682 | Lifting Lever with 448C, for 20341 and 43931..... |
| 12415 | 8682 | Lifting Lever Connecting Rod..... |
| 12416 | 8682 | " " " " Joint..... |
| 76D | 8676 | " " " " Hinge Screw..... |
| 1521E | 8676 | Lifting Lever Connecting Rod Lock Nut.... |
| 802D | 8676 | " " Hinge Screw..... |
| 12241 | 8671 | " " Link for 12445 and 20466.. |
| 21301 | 5773 | " " " 20341 and 43931.. |
| 766D | 8671 | " " Hinge Screw..... |
| 12240 | 8682 | " " Pin for 12445 and 20466... |

KNEE LIFTER PARTS

| No. | Plate | Name |
|-------|-------|---|
| 19372 | 5773 | Lifting Lever Pin for 20341 and 43931... |
| 448C | 8645 | " " " Set Screw..... |
| 2763 | 819 | Rock Shaft for 12250..... |
| 20091 | 8688 | " " " 20465..... |
| 7539 | 8688 | " " Hanger with two wood screws 1 in. No. 10, for 12250..... |
| 2764 | 8688 | Rock Shaft Hanger (back) with two wood screws 1 in. No. 10, for 20465..... |
| 16128 | 8688 | Rock Shaft Hanger (front) with two wood screws 1 in. No. 10, for 20465..... |
| 2765 | 8688 | Rock Shaft Knee Arm..... |
| 2766 | 8688 | " " " " Hub with 356C, for 2768..... |
| 20462 | 8688 | Rock Shaft Knee Arm Hub with 356C, for 20463..... |
| 356C | 8671 | Rock Shaft Knee Arm Hub Set Screw..... |
| 2768 | ---- | Rock Shaft Knee Arm complete for 12250, Nos. 2765 to 2767..... |
| 20463 | ---- | Rock Shaft Knee Arm complete for 20465, Nos. 2765, 2767 and 20462..... |
| 2767 | 8688 | Rock Shaft Knee Plate with 356C..... |
| 356C | 8671 | " " " " Set Screw..... |
| 20464 | 8688 | " " Lifting Arm with 356C for 20465..... |
| 356C | 8671 | Rock Shaft Lifting Arm Set Screw..... |
| 6337 | 819 | " " " Bracket with two 356C for 12250..... |
| 2778 | 8688 | Rock Shaft Lifting Bracket Hook for 12250..... |
| 356C | 8671 | Rock Shaft Lifting Bracket Hook Set Screw..... |
| 356C | 8671 | Rock Shaft Lifting Bracket Set Screw.... |
| 2770 | 819 | " " Stop Dog with 356C..... |
| 356C | 8671 | " " " " Set Screw..... |
| 12250 | 8688 | Rock Shaft complete for 12445 and 120341 Nos. 2763,2768,2778,6337 and two each 2770 and 7539..... |
| 20465 | 8688 | Rock Shaft complete for 20466 and 43931, Nos. 2764,16128,20091,20463,20464 and two 2770..... |
| 12445 | ---- | Knee Lifter complete (power table or stand No. 25265) for 31-52 Machine, Nos. 76D,766D,802D,1521E,5598,12237, 12240,12241,12250,12415,12416 and two 178E..... |
| 20341 | ---- | Knee Lifter complete (power table or stand No. 25265) for 31-62 Machine, Nos. 76D,766D,802D,1521E,5598,12250, 12415,12416,19372,20340,21301 and two 178E..... |

| No. | Plate | Name |
|-------|-------|---|
| 20466 | ---- | Knee Lifter complete (stand No. 25255) for 31-52 Machine, Nos. 76D, 766D, 802D, 1521E, 5598, 12237, 12240, 12241, 12415, 12416, 20465 and two 178E..... |
| 43931 | ---- | Knee Lifter complete (stand No. 25255) for 31-62 Machine, Nos. 76D, 766D, 802D, 1521E, 5598, 12415, 12416, 19372, 20340, 20465, 21301 and two 178E..... |

THREAD UNWINDER

FOR TWO SPOOLS OR TWO LARGE CONES OF THREAD

| No. | Plate | Name |
|---------|-------|---|
| 225257 | 20335 | Spool Rest with 201018C..... |
| 150203 | 20335 | " " Cushion (felt)..... |
| 225388 | 20335 | " " Rod..... |
| 200383C | 8671 | " " Set Screw..... |
| 201018C | 8671 | " " Set Screw..... |
| 202490 | 20335 | " Stand with 200383C..... |
| 225391 | 20335 | Thread Guide..... |
| 201696J | 8671 | " Lock Nut..... |
| 225326 | 20335 | " Position Cup..... |
| 225324 | 20335 | " Rod with 208E and 225322.. |
| | 208E | " Screw..... |
| 225322 | 8671 | " Washer..... |
| 225258 | 20335 | Thread Unwinder complete, Nos. 201696J, 202490, 225257, 225324, 225326, 225388, two each 150203, 225391 and three wood screws 7/8 in. No. 12..... |
| 27739 | 8670 | Thread Cone (wood) for large cones..... |
| 225390 | 8670 | " Holder, for inverted cones.. |

Note: Nos. 27739 and 225390 are used with, but not included in 225258.

WRENCHES

| No. | Plate | Name |
|-------|-------|------------------------------|
| 19221 | 8680 | Wrench for 936 and 1619..... |
| 8909 | 8680 | " " 1513 and 1518..... |
| 8908 | 8680 | " " 1520..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|------|-------|---|
| 32D | 8647 | Bobbin Winder Frame Hinge Screw for 12172, 19260 and 20309..... |
| 35D | 8647 | Bobbin Winder Stop Latch Hinge Screw for 27875..... |
| 55D | 8663 | Tape Holder Cover Hinge Screw for 28994. |
| 65D | 8674 | Driving Arm Pitman Hinge Screw for 20141 |
| 75D | 8674 | Bobbin Winder Stop Latch Hinge Screw for 19260..... |
| 76D | 8676 | Lifting Lever Connecting Rod Joint Hinge Screw for 12445, 20008, 20341, 20466, 43928 and 43931..... |
| 102D | 8662 | Throat Plate Cloth Guide Hinge Screw for 31-52 Machine, for shirt closing parts..... |
| 106D | 1245 | Presser Foot Shank Hinge Connection Screw for 35560..... |
| 134D | 8650 | Tension Plate Screw..... |
| 144D | 8645 | Arm Shaft Screw..... |
| 145D | 8645 | " Spool Bracket Screw..... |
| 145F | 8645 | Shuttle Race Screw..... |
| 152F | 8674 | Bobbin Winder Stop Latch Adjusting Screw for 19258..... |
| 157E | 8672 | Feed Lifting Rock Shaft Crank (front) Clamping Screw for 19120..... |
| 157J | 8672 | Feed Rock Shaft Crank Clamping Screw for 29633..... |
| 158C | 8675 | Bed Frame Cushion Screw for 20067..... |
| 175D | 8650 | Lifting Presser Bar Guide Bracket Support Screw for 31-62 Machine..... |
| 178E | 8676 | Bell Crank Bracket Screw for 12445, 20008, 20341, 20466, 43928 and 43931..... |
| 180F | 8647 | Bobbin Winder Spring Screw for 12172, 19260 and 20309..... |
| 185H | 2070 | Presser Foot (left) Screw for 35812..... |
| 185H | 2070 | " Screw for 35305 and 36004.. |
| 190D | 2070 | Face Plate Screw for 31-52 Machine..... |
| 190D | 2070 | Presser Foot Screw..... |
| 190D | 2070 | Ruffler Starting Lever Clamping Screw for 28601..... |
| 191C | 8653 | Feed Dog Screw..... |
| 193D | 5773 | Lifting Presser Foot Screw for 31-62 Machine..... |
| 193F | 5773 | Stay Guide Screw for 26268..... |

| No. | Plate | Name |
|------|-------|--|
| 198D | 1255 | Presser Foot (right) Shank Cap Screw for 35812..... |
| 199D | 5772 | Lifting Presser Bar Bell Crank Cap Screw for 43956..... |
| 199D | 5772 | Lifting Presser Bar Bell Crank Connecting Link Cap Screw for 43956..... |
| 199F | 5772 | Vibrating Presser Bar Cap Screw for 43949..... |
| 207F | 8647 | Guide Screw for 19230..... |
| 207F | 8647 | Quilter Guide Holder Set Screw for 25992 |
| 207F | 8647 | " " Set Screw for 25992..... |
| 208E | 8671 | Thread Unwinder Thread Guide Rod Screw for 225324..... |
| 209F | 8212 | Needle Set Screw for 19276..... |
| 209F | 8212 | Ruffler Needle Clamp Screw for 35307.... |
| 209C | 8212 | Quilter Guide Bracket Set Screw for 120482..... |
| 209C | 8212 | Quilter Guide Set Screw for 120482..... |
| 210D | 8674 | Driving Attachment Balance Wheel Oil Cover Screw for 20141..... |
| 211E | 8675 | Bed Frame Hinge Connection Cap Screw for 19398..... |
| 217D | 5773 | Vibrating Presser Bar Foot Screw for 31-62 Machine..... |
| 219D | 5773 | Arm Side Cap Screw..... |
| 219F | 5773 | Face Plate Screw for 31-62 Machine..... |
| 219F | 5773 | Spool Holder Bracket Screw for 26763.... |
| 219F | 5773 | Vibrating Presser Bar Cap Screw for 19367..... |
| 220D | 1245 | Presser Foot Cap Screw for 35560..... |
| 226D | 2070 | Oscillating Shaft Crank Slide Block Cap Screw for 19390..... |
| 226J | 2070 | Ruffling Blade Holder Cap Screw for 35305,35812 and 36004..... |
| 228D | 8212 | Presser Foot Extension Screw for 19216.. |
| 228D | 8212 | " " Strip Gauge Screw for 19216 |
| 240D | 8662 | Throat Plate Spring Guide Screw for 19484,20392,24450 and for shirt closing parts..... |
| 307C | 8672 | Feed Lifting Rock Shaft Screw Center.... |
| 307C | 8672 | " Rock Shaft Screw Center..... |
| 313C | 8672 | " Bar Screw Center..... |
| 333D | 8647 | Bobbin Winder Friction Wheel Washer Screw for 12171,16515 and 20308..... |
| 335D | 5773 | Vibrating Presser Bar Spring Screw for 31-62 Machine..... |
| 356C | 8671 | Rock Shaft Knee Arm Hub Set Screw for 2766 and 20462..... |

| No. | Plate | Name |
|------|-------|--|
| 356C | 8671 | Rock Shaft Knee Plate Set Screw for 2767 |
| 356C | 8671 | " " Lifting Arm Set Screw for 20464..... |
| 356C | 8671 | Rock Shaft Lifting Bracket Hook Set Screw for 6337..... |
| 356C | 8671 | Rock Shaft Lifting Bracket Set Screw for 6337..... |
| 356C | 8671 | Rock Shaft Stop Dog Set Screw for 2770.. |
| 361C | 8674 | Driving Attachment Treadle Pitman Rod Clamp Screw for 80223..... |
| 362C | 8674 | Driving Attachment Treadle Stop Collar Set Screw for 2762..... |
| 375C | 5772 | Feed Connecting Link Hinge Screw..... |
| 375C | 5772 | " Forked Connection Hinge Screw..... |
| 375C | 5772 | " Lifting Rock Shaft Crank Connecting Rod Hinge Screw..... |
| 375C | 5772 | Lifting Presser Bar Bell Crank Driving Arm Eccentric Connection Hinge Screw for 31-62 Machine..... |
| 405E | 8647 | Lap Seam Feller Folder Slide Spring Screw..... |
| 418E | 8647 | Bobbin Winder Tension Screw Stud for 27308..... |
| 427E | 8674 | Driving Arm Friction Plug Adjusting Screw for 19260..... |
| 435C | 8671 | Driving Attachment Balance Wheel Set Screw for 16592..... |
| 435C | 8671 | Thread Take-up Lever Link Hinge Pin Set Screw..... |
| 446C | 8672 | Feed and Feed Lifting Eccentric Set Screw for 19275..... |
| 448C | 8645 | Arm Shaft Flanged Bushing (back) Set Screw..... |
| 448C | 8645 | Balance Wheel Set Screw for 4370 and 12358..... |
| 448C | 8645 | Lifting Lever Pin Set Screw for 12237 and 20340..... |
| 448C | 8645 | Needle Bar Crank and Lifting Eccentric Set Screw for 19365..... |
| 448C | 8645 | Oscillating Rock Shaft Hinge Pin Set Screw..... |
| 448C | 8645 | Thread Take-up Spring Regulator Set Screw..... |
| 453C | 8646 | Lifting Presser Bar Guide Bracket Set Screw for 24589..... |
| 453C | 8646 | Needle Bar Connecting Stud Set Screw for 12384..... |
| 453C | 8646 | Presser Bar Guide Bracket Set Screw for 12326..... |

| No. | Plate | Name |
|------|-------|--|
| 453C | 8646 | Shuttle Driver Set Screw for 19139..... |
| 457C | 8646 | Oscillating Shaft Crank Set Screw for 19388..... |
| 462C | 8672 | Feed Lifting Rock Shaft Crank (back) Set Screw for 3043J..... |
| 560B | 2070 | Ruffling Blade Lever Adjusting Thumb Screw for 35305, 35812 and 36004.... |
| 591F | 8651 | Shuttle (inside) Tension Regulating Screw for 19312..... |
| 591F | 8651 | Shuttle (outside) Tension Regulating Screw for 19313..... |
| 592E | 8651 | Shuttle (inside) Bobbin Case Latch and Position Finger Stop Screw for 19312 |
| 592E | 8651 | Shuttle (outside) Bobbin Case Latch and Position Finger Stop Screw for 19313 |
| 597C | 8674 | Driving Attachment Shaft Driving Pulley Clamping Screw for 27072..... |
| 802D | 8647 | Quilter Guide Disengaging Sleeve Spring Screw for 120485..... |
| 651E | 8650 | Shuttle Race Slide Friction Spring Screw for 19148, 19185 and 19189..... |
| 651E | 8650 | Shuttle Race Slide Guide (front) Spring Screw for 35301..... |
| 665J | 2070 | Ruffling Blade Screw for 35305, 35812 and 36004..... |
| 688E | 8682 | Pressure Regulating Thumb Screw..... |
| 689C | 8646 | Lifting Presser Bar Lifter Screw for 31-62 Machine..... |
| 689C | 8646 | Presser Bar Lifter Screw..... |
| 690E | 1144 | Thread Take-up Crank Wedge Screw..... |
| 691F | 8650 | Shuttle Race Slide Guide Screw..... |
| 691F | 8650 | Spool Holder Spindle Thread Guiding Disc Screw for 26764..... |
| 691F | 8650 | Throat Plate Screw..... |
| 692D | 8647 | Bobbin Winder Bracket Screw for 12172 and 20141..... |
| 693D | 8683 | Driving Arm Hinge Screw for 19260..... |
| 706J | 1255 | Presser Foot (right) Shank Stop Screw for 35812..... |
| 736J | 8663 | Tape Holder Foot Screw for 26064 and 26325..... |
| 743C | 5773 | Needle Bar Crank and Lifting Eccentric Position Screw for 19365..... |
| 748E | 8645 | Arm Screw (back)..... |
| 766D | 8671 | Lifting Lever Link Hinge Screw for 12445 20008, 20341, 20466, 43928 and 43931... |
| 775E | 1144 | Thread Take-up Lever Cap Screw..... |
| 793B | 8647 | Strip Folder (upper) Thumb Screw for 36493..... |

| No. | Plate | Name |
|-------|-------|---|
| 794E | 1144 | Needle Bar Connecting Link Adjusting Screw for 12362..... |
| 802D | 8676 | Lifting Lever Hinge Screw for 12445, 20008, 20341, 20466, 43928 and 43931... |
| 816D | 8672 | Feed Regulator Thumb Screw..... |
| 854E | 8645 | Arm Screw (front)..... |
| 858C | 8646 | Needle Bar Crank Set Screw for 20188.... |
| 861D | 8647 | Driving Friction Pulley Oil Hole Plug Screw for 16594..... |
| 878D | 8646 | Oscillating Rock Shaft Hinge Pin Oil Hole Stop Screw..... |
| 896C | 8645 | Crank Connecting Rod Cap Screw for 20197 |
| 905D | 8671 | Thread Guide Screw for 19162..... |
| 907D | 8650 | Shuttle Race Ring Spring Screw for 19323 24013 and 24493..... |
| 908C | 8645 | Crank Connecting Rod Hinge Screw..... |
| 914F | 8647 | Shuttle Race Slide Guide Screw for 19189 |
| 916C | 1146 | Tension Screw Stud for 44209..... |
| 936E | 8646 | Needle Bar Screw Bushing..... |
| 965D | 5773 | Lifting Presser Bar Bell Crank Driving Arm Shaft Bracket Screw for 31-62 Machine..... |
| 966E | 8672 | Feed Lifting Rock Shaft Crank Connecting Rod Cap Screw for 43976..... |
| 969C | 8646 | Oscillating Shaft Crank Slide Block Screw Stud for 19390..... |
| 1049D | 2070 | Ruffling Blade Lever Stop Screw for 35305, 35812 and 36004..... |
| 1053D | 1241 | Shuttle Race Needle Guard Screw for 19323, 24013 and 24493..... |
| 1065C | 8646 | Needle Bar Crank Position Screw for 20188..... |
| 1101C | 2070 | Ruffler Driving Lever Hinge Screw for 35305, 35812 and 36004..... |
| 1128E | 8672 | Feed Regulator Hinge Screw..... |
| 1425B | 8647 | Strip Folder (upper) Screw for 36493.... |
| 1443B | 8647 | Edge Guide Screw for 36493..... |
| 1508C | 8674 | Driving Arm Friction Plug Adjusting Screw Nut for 19260..... |
| 1513E | 8672 | Feed Lifting Rock Shaft Screw Center Nut |
| 1513E | 8672 | " Rock Shaft Screw Center Nut..... |
| 1518E | 5772 | " Connecting Link Hinge Screw Nut.... |
| 1518E | 5772 | " Forked Connection Hinge Screw Nut.. |
| 1518E | 5772 | " Lifting Rock Shaft Crank Connecting Rod Hinge Screw Nut..... |
| 1518E | 5772 | Oscillating Shaft Crank Slide Block Screw Stud Nut for 19388..... |
| 1519E | 8672 | Feed Bar Screw Center Nut..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|-------|-------|--|
| 1520E | 8646 | Lifting Presser Bar Lifter Screw Nut for 31-62 Machine..... |
| 1520E | 8646 | Presser Bar Lifter Screw Nut..... |
| 1521E | 8676 | Lifting Lever Connecting Rod Lock Nut for 12445, 20008, 20341, 20466, 43928 and 43931..... |
| 1541B | 8684 | Tape Spool Fixture Regulating Thumb Nut for 4517..... |
| 1547D | 1146 | Tension Screw Stud Nut for 19195..... |
| 1550H | 2070 | Bobbin Winder Stop Latch Adjusting Screw Nut for 19258..... |
| 1550H | 2070 | Ruffling Blade Holder Stud Nut for 35305 35812 and 36004..... |
| 1560C | 1146 | Tension Regulating Thumb Nut for 44209.. |
| 1562J | 8647 | Bobbin Winder Tension Regulating Thumb Nut for 27308..... |
| 1579C | 8683 | Driving Arm Hinge Screw Nut for 19260... |
| 1603E | 2070 | Ruffling Blade Lever Adjusting Thumb Screw Nut for 35305, 35812 and 36004. |
| 1619E | 8645 | Crank Connecting Rod Hinge Screw Nut.... |
| 1620J | 8676 | Bobbin Winder Frame Hinge Screw Nut for 27875..... |
| 1647C | 2070 | Ruffler Driving Lever Hinge Screw Nut for 35305, 35812 and 36004..... |
| 1904 | 1144 | Needle Bar Connecting Stud Roller (roller only) for 12384..... |
| 2022 | 8674 | Driving Arm Pitman Crank Pin for 44176.. |
| 2022 | 8674 | Driving Attachment Starting Crank Pin for 44176..... |
| 2049 | 5772 | Feed Lifting Rock Shaft Crank (back) Pin |
| 2049 | 5772 | Lifting Presser Bar Bell Crank Driving Arm Pin for 19361..... |
| 2049 | 5772 | Oscillating Shaft Crank Pin..... |
| 2049 | 5772 | Shuttle Driver Pin..... |
| 2102 | 8676 | Bobbin Winder Tension Disc for 225462... |
| 2106 | 8647 | " " " Thread Guide for 27308..... |
| 2269 | 1146 | Bobbin Winder Stop Latch Stop Pin for 16518..... |
| 2269 | 1146 | Tension Releasing Lever (intermediate) Hinge Pin for 19195..... |
| 2273 | 8646 | Needle Clamp Pin..... |
| 2415 | 8648 | Arm Spool Bracket for 15063..... |
| 2455 | 8647 | Bobbin Winder Tension Disc for 27308.... |
| 2521 | 1255 | Presser Foot (right) Spring for 35809... |
| 2521 | 1255 | Shuttle (inside) Bobbin Case Latch and Position Finger Spring for 19312.... |
| 2521 | 1255 | Shuttle (outside) Bobbin Case Latch and Position Finger Spring for 19313.... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|-------|-------|--|
| 2532 | 1245 | Shuttle Race Ring Position Pin for 19323 24013 and 24493..... |
| 2533 | 8664 | Shuttle Race Ring Spring for 19323, 24013 and 24493..... |
| 2653 | 8662 | Throat Plate Cloth Guide Stop Pin for 20318..... |
| 2656 | 1255 | Presser Foot (right) Shank Spring for 35812..... |
| 2762 | 8687 | Driving Attachment Treadle Stop Collar with 362C, for 14233..... |
| 2763 | 819 | Rock Shaft for 4880 and 12250..... |
| 2764 | 8688 | Rock Shaft Hanger (back) with two wood screws 1 in. No. 10, for 20465..... |
| 2765 | 8688 | Rock Shaft Knee Arm for 2768 and 20463.. |
| 2766 | 8688 | " " " " Hub with 356C, for 2768..... |
| 2767 | 8688 | Rock Shaft Knee Plate with 356C, for 2768 and 20463..... |
| 2768 | ---- | Rock Shaft Knee Arm complete for 12250, Nos. 2765 to 2767..... |
| 2770 | 819 | Rock Shaft Stop Dog with 356C, for 4880, 12250 and 20465..... |
| 2778 | 8688 | Rock Shaft Lifting Bracket Hook for 12250..... |
| 2921 | 1146 | Tension Disc for 19195..... |
| 2923 | 1146 | " Spring for 19195..... |
| 2928 | 8674 | Driving Arm Brake (leather) for 16518... |
| 3033 | 8672 | Feed Connecting Link..... |
| 3039 | 8649 | " Regulator..... |
| 3043J | 8664 | " Lifting Rock Shaft Crank (back) with 462C, for 20015..... |
| 3094 | 1144 | Thread Take-up Crank Wedge..... |
| 4370 | 8677 | Balance Wheel (stand) heavy rim 2 3/4 in. pulley, with two 448C..... |
| 4515 | 8682 | Throat Plate Spring Guide for 19481..... |
| 4516 | 8684 | Tape Spool Fixture (wire) with fixed cone for 4517..... |
| 4517 | 8684 | Tape Spool Fixture (wire) with fixed cone complete, Nos. 1541B, 4516, 4518 and 8019..... |
| 4518 | 8684 | Tape Spool Fixture Cone for 4517..... |
| 4715 | 8684 | Spool Fixture (wire) with two 10145, for 4716..... |
| 4716 | 8684 | Spool Fixture (wire) complete, for two spools, Nos. 4715, two 4717 and three 4718..... |
| 4717 | 8684 | Spool Fixture Flange for 4716..... |
| 4718 | 8684 | " " Washer (felt) for 4716.... |
| 4784 | 8646 | Oscillating Rock Shaft Oil Pad for 19387 |

| No. | Plate | Name |
|------|-------|--|
| 4855 | 5772 | Lifting Presser Bar Lifter for 31-62 Machine..... |
| 4879 | 8682 | Chain Connecting Link for 4885..... |
| 4880 | 819 | Rock Shaft complete for 20008 and 43928, Nos. 2763, 2770, 7125, 12243 and two each 6337 and 12242..... |
| 4881 | 819 | Treadle for 4885..... |
| 4882 | 8682 | " Shaft for 4885..... |
| 4883 | 8682 | " Spring for 4885..... |
| 4884 | 819 | " Stand for 4885..... |
| 4885 | 819 | Treadle complete for 20008 and 43928, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16..... |
| 5598 | 8682 | Bell Crank for 56848..... |
| 5598 | 8682 | Bell Crank complete for 12445, 20008, 20341, 20486, 43928 and 43931, Nos. 5735 and 56848..... |
| 5599 | 8682 | Bell Crank Bracket for 56848..... |
| 5601 | 8676 | " " Hinge Pin for 56848..... |
| 5670 | ---- | Chain, length 26 in. to 35 in. with 56864 and 56865, for 20008 and 43928 |
| 5735 | 8682 | Bell Crank Spring for 5598..... |
| 5960 | 8685 | Bobbin Winder Friction Wheel (leather) for 12171, 16515 and 20308..... |
| 5961 | 8685 | Bobbin Winder Friction Wheel Washer for 12171, 16515 and 20308..... |
| 5963 | 8685 | Bobbin Winder Spindle Flange for 12171, 16515 and 20308..... |
| 6055 | 8675 | Driving Attachment Treadle Pitman Rod (lower) Spring Washer for 14233..... |
| 6055 | 8675 | Machine Hinge Bolt Nut Washer for 44180 (Attachments and Accessories)..... |
| 6267 | 8662 | Hemmer Folder for 28487, for shirt closing parts, for 31-52 Machine..... |
| 6337 | 819 | Rock Shaft Lifting Bracket with two 3560 for 4880 and 12250..... |
| 7071 | 8647 | Guide Screw Washer for 19230..... |
| 7071 | 8647 | Stay Guide Screw Washer for 26268..... |
| 7125 | 819 | Rock Shaft Lifting Bracket Hook for 4880 and 5670..... |
| 7308 | 1245 | Presser Foot Bracket for 35560..... |
| 7309 | 1245 | " " Cap for 35560..... |
| 7310 | 1245 | " " Shank Hinge Connection for 35580..... |
| 7311 | 1245 | Presser Foot Shank Pin for 35558 and 35559..... |
| 7336 | 8671 | Thread Take-up Spring Regulator..... |
| 7539 | 8688 | Rock Shaft Hanger with two wood screws 1 in. No. 10, for 12250..... |

| No. | Plate | Name |
|--------|-------|---|
| 7958 | 8674 | Driving Attachment Balance Wheel Friction Ring Stop Pin for 16592..... |
| 8019 | 8684 | Tape Spool Fixture Spring for 4517..... |
| 8418 | 8686 | Belt Guard Button for 8420..... |
| 8419 | 8647 | " " " Washer (leather) for 8420..... |
| 8420 | ---- | Belt Guard Button 8418 with 8419 and wood screws 1 1/4 in. No. 9 R.H.B., for 41931..... |
| 8582 | 8645 | Arm Dowel Pin..... |
| 8908 | 8680 | Wrench for 1520 (Attachments and Accessories)..... |
| 8909 | 8680 | Wrench for 1513 and 1518 (Attachments and Accessories)..... |
| 10141 | 8647 | Bobbin Winder Tension Spring for 27308.. |
| 10145 | 8684 | Spool Fixture Thread Eyelet for 4715.... |
| 10236 | 8674 | Driving Friction Pulley Center Bearing for 16594..... |
| *11104 | ---- | Arm Shaft Bushing (front) for 20013 and 43948..... |
| 11119 | 8645 | Arm Oil Tube 15733 with 52045, for oiling 19156..... |
| 11187 | 8664 | Lifting Presser Bar Spring (light) .051 wire, for 31-62 Machine..... |
| 11187 | 8664 | Presser Bar Spring (light) .051 wire.... |
| 11170 | 8646 | Lifting Presser Bar Spring Washer for 31-62 Machine..... |
| 11170 | 8646 | Presser Bar Spring Washer..... |
| 11204 | 1144 | Thread Take-up Lever Link Hinge Pin..... |
| 11241 | 8681 | Arm Spool Bracket Spool Pin Washer (cloth)..... |
| 11241 | 8681 | Bobbin Winder Spool Washer (cloth) for 27308..... |
| 12139 | 8664 | Lifting Presser Bar Spring (medium) .055 wire, for 31-62 Machine..... |
| 12139 | 8664 | Presser Bar Spring (medium) .055 wire... |
| 12149 | 8671 | Thread Guard for 19162..... |
| 12152 | 8672 | Face Plate Thread Guard (lower) Rivet for 19327..... |
| 12152 | 8672 | Face Plate Thread Guard (upper) Rivet for 19155..... |
| 12166 | 1144 | Thread Take-up Lever Hinge Pin for 19157 |
| 12168 | 8685 | Bobbin Winder Bracket for 12172 and 20309..... |
| 12169 | 8685 | Bobbin Winder Frame for 12171..... |
| 12170 | 8685 | " " Spring for 12172, 19280 and 20309..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|--------|-------|--|
| 12171 | 8685 | Bobbin Winder Frame complete for 12172, Nos. 333D, 5960, 5961, 5963, 12169 and 15077..... |
| 12172 | ---- | Bobbin Winder complete for 4370, Nos. 32D, 180F, 12168, 12170 and 12171..... |
| 12178 | 8674 | Driving Arm Friction Plug (wood) for 19260..... |
| 12193 | 8648 | Arm Side Cover..... |
| 12237 | 8682 | Lifting Lever with 448C, for 12445, 20008 and 20466..... |
| 12240 | 8682 | Lifting Lever Pin for 12445, 20008 and 20466..... |
| 12241 | 8671 | Lifting Lever Link for 12445, 20008 and 20466..... |
| 12242 | 819 | Rock Shaft Hanger with two wood screws 1 in. No. 10, for 4880..... |
| 12243 | 819 | Rock Shaft Lifting Bracket Hook for 4880 and 5598..... |
| 12250 | 8688 | Rock Shaft complete, for 12445 and 20341 Nos. 2763, 2768, 2778, 6337 and two each 2770 and 7539..... |
| 12326 | 8646 | Presser Bar Guide Bracket with 453C..... |
| 12327 | 8671 | Lifting Presser Bar Lifting and Releasing Lever Bracket, for 31-62 Machine |
| 12327 | 8671 | Presser Bar Lifting and Releasing Lever Bracket..... |
| 12329 | 8650 | Tension Releasing Lever Spring..... |
| 12357 | 8649 | Arm Shaft Flanged Bushing (back)..... |
| 12358 | 8677 | Balance Wheel (power) light rim 2 3/16 in. pulley, with two 448C..... |
| 12361 | 8675 | Machine Hinge Connection for 44140 and 44180 (Attachments and Accessories). |
| 12374 | 8677 | Feed Lifting Rock Shaft for 20015..... |
| 12379 | 8677 | " Rock Shaft for 20333..... |
| *12382 | 1144 | Needle Bar Connecting Link with 794E.... |
| *12383 | ---- | " " Stud for 12384.... |
| 12384 | 1144 | Needle Bar Connecting Stud complete, Nos. 453C, 1904 and 12383..... |
| 12388 | 8649 | Oscillating Rock Shaft Hinge Pin for 19387..... |
| 12391 | 8664 | Lifting Presser Bar (hollow) for 31-62 Machine..... |
| 12391 | 8664 | Presser Bar (hollow)..... |
| 12398 | 8650 | Tension Releasing Lever Hinge Pin..... |
| 12403 | 8681 | Arm Spool Bracket Spool Pin and Thread Eyelet for 15063..... |
| 12405 | 8675 | Machine Rest (felt) Attachments and Accessories..... |
| 12409 | 1144 | Thread Take-up Lever Link for 19157..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|--------|-------|--|
| 12415 | 8682 | Lifting Lever Connecting Rod for 12445, 20008, 20341, 20466, 43928 and 43931... |
| 12416 | 8682 | Lifting Lever Connecting Rod Joint for 12445, 20008, 20341, 20466, 43928 and 43931..... |
| 12424 | 8646 | Oscillating Shaft Crank Slide Block Cap Screw Washer for 19390..... |
| 12427 | 8677 | Arm Shaft..... |
| 12429 | 8648 | Feed Forked Connection..... |
| 12445 | ---- | Knee Lifter complete (power table or stand No. 25285) for 31-52 Machine, Nos. 76D, 766D, 802D, 1521E, 5598, 12237, 12240, 12241, 12250, 12415, 12416 and two 178E..... |
| 12453 | 8645 | Arm Oil Tube for intermediate bearing... |
| 12454 | 8645 | " " " with 132590, for oiling 12409..... |
| 12458 | 8687 | Drip Pan with four 1 in. wire nails for 20141..... |
| 12459 | 8646 | Oscillating Rock Shaft Hinge Pin Oil Hole Stop Screw Washer (leather).... |
| 12475 | 8687 | Driving Arm Pitman for 20141..... |
| 12477 | 8683 | " Attachment Starting Crank Shaft, for 44176..... |
| 12479 | 8683 | Driving Attachment Starting Crank for 44176..... |
| 12480 | 8649 | Arm Side Cap..... |
| 13211 | 8663 | Tape Holder Tension Adjusting Spring for 26074..... |
| 14010 | 8675 | Bed Frame Hinge Plate Rivet for 20067... |
| 14081 | 8687 | Driving Attachment Treadle Pitman Rod (upper) for 14233..... |
| 14233 | 8687 | Driving Attachment Treadle Pitman complete, for 126213, Nos. 2762, 6055, 14081, 27637, 80223 and 150208..... |
| 15063 | 8648 | Arm Spool Bracket 2415 with two 12403... |
| 15072 | 8647 | Bobbin Winder Bobbin Position Pin for 15077 and 27538..... |
| 15077 | 8685 | Bobbin Winder Spindle with 15072, for 12171, 16515 and 20308..... |
| 15132 | 8674 | Driving Arm Brake Rivet for 16518..... |
| *15404 | ---- | Trade Mark for 20013 and 43948..... |
| 15405 | ---- | " " Rivet for 20013 and 43948.... |
| 15783 | ---- | Arm Oil Tube for 11119..... |
| 16128 | 8688 | Rock Shaft Hanger Front with two wood screws 1 in. No. 10, for 20465..... |
| 16514 | 8685 | Bobbin Winder Frame for 16515..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|-------|-------|---|
| 16515 | 8685 | Bobbin Winder Frame complete, for 19260, Nos. 333D, 5960, 5961, 5963, 15077 and 16514..... |
| 16518 | 8687 | Driving Arm with 2269, 2928 and two 15132, for 19260..... |
| 16524 | ---- | Driving Attachment Balance Wheel Friction Ring (leather) for 16592..... |
| 16530 | 8685 | Driving Attachment Bracket for 19260.... |
| 16555 | 8675 | Bed Frame Hinge Plate for 20067..... |
| 16592 | 8687 | Driving Attachment Balance Wheel (friction) with 7958, 16524 and two 435C, for 20141..... |
| 16594 | 8683 | Driving Friction Pulley, 2 5/16 in. diam. with 861D and 10236, for 20141..... |
| 18014 | 8664 | Needle Bar (hollow)..... |
| 18055 | 8667 | Presser Foot Hinge Pin for 20131..... |
| 18114 | 8673 | Binder Slide for 35691 to 35693..... |
| 18114 | 8673 | Edge Folder Slide for 35994..... |
| 18114 | 8673 | Lap Seam Feller Folder Slide for 26272, 26397, 26565 and 36880..... |
| 18114 | 8673 | Strip Folder Slide for 26413, 35102, 35132, 35308, 35309, 35702, 35801, 35878, 36077 and 120196..... |
| 18114 | 8673 | Strip Guide Slide for 35310..... |
| 19066 | 8670 | Spool Holder Spindle for 26764..... |
| 19067 | 8670 | " " " Thread Guiding Disc for 26764..... |
| 19111 | 8649 | Feed Bar..... |
| 19116 | 8672 | " Dog Spring..... |
| 19117 | 8672 | " " " Hook for 19120..... |
| 19118 | 8672 | " " " " " 19274, 19338, 19339, 19340, 19341, 19343, 19344, 19479, 19482, 20068, 20072, 20074, 20076, 20084, 20086, 20088, 20103, 20195, 20279, 20294, 20316, 20317, 20373, 20383, 20387, 20391, 24449, 24462, 26725, 35694, 35814, 36312, 36317, 36321, 36323, 36494, 36606 and 120293..... |
| 19120 | 8649 | Feed Lifting Rock Shaft Crank (front) with 157E, 19117, 19121 and 19122, for 20015..... |
| 19121 | 8672 | Feed Lifting Rock Shaft Crank (front) Roller for 19120..... |
| 19122 | 8672 | Feed Lifting Rock Shaft Crank (front) Roller Pin for 19120..... |
| 19128 | 8665 | Presser Foot, for general work..... |
| 19131 | 8651 | Shuttle (inside) Bobbin for 19324..... |
| 19131 | 8651 | " (outside) Bobbin for 19325 and 19326..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|-------|-------|---|
| 19136 | 8651 | Shuttle (inside) Body for 19324..... |
| 19137 | 8650 | " (outside) Body for 19325..... |
| 19139 | 8664 | " Driver with two 453C..... |
| 19145 | 8673 | " Race Slide (inside)..... |
| 19146 | 8673 | " " (outside) for 7/16 in. gauge and below..... |
| 19147 | 8650 | Shuttle Race Slide Friction Spring for 19148, 19185 and 19189..... |
| 19147 | 8650 | Shuttle Race Slide Guide (front) Spring for 35301..... |
| 19148 | 8673 | Shuttle Race Slide Guide (back) with 651E and 19147..... |
| 19149 | 8651 | Shuttle (inside) Tension Spring for 19312..... |
| 19155 | ---- | Face Plate Thread Guard (upper) 62624 with 12152, for 19305 and 20395..... |
| 19156 | 1144 | Thread Take-up Lever for 19157..... |
| 19157 | 1144 | Thread Take-up Lever complete, Nos. 12166, 12409 and 19156..... |
| 19158 | 8671 | Thread Take-up Spring (music wire)..... |
| 19159 | 8671 | " Guide Body for 19162..... |
| 19160 | 8671 | " " Roller for 19162..... |
| 19161 | 8671 | " " Cap for 19162..... |
| 19162 | ---- | Thread Guide complete (roller) Nos. 905D and 19159 to 19161..... |
| 19171 | 8650 | Shuttle (outside) Body for 19326..... |
| 19172 | 8650 | " " Tension Spring for 19313..... |
| 19185 | 8673 | Shuttle Race Slide Guide (front) with 651E and 19147..... |
| 19189 | 8681 | Shuttle Race Slide Guide (front) with 651E and 19147, for lap seam feller..... |
| 19190 | 8658 | Throat Plate, for 7/32 in. to 1/2 in. gauge, for 19340 and 24462, for lap seam feller..... |
| 19191 | 1146 | Tension Plate for upper tension, with 19231, for 19195..... |
| 19192 | 1146 | Tension Releaser for 19195..... |
| 19193 | 1146 | " Releasing Lever (intermediate) for 19195..... |
| 19194 | 1146 | Tension Releasing Lever (intermediate) Spring for 19195..... |
| 19195 | 1146 | Tension (upper) complete with tension release, Nos. 2289, 19191, 19193, 19194 two each 1547D, 2923, 19192, 44209 and four 2921..... |
| 19216 | 8668 | Presser Foot with 228D, for strip gauge, for 25987..... |
| 19219 | 8675 | Bed Frame Cushion (leather) for 20067... |

| No. | Plate | Name |
|-------|-------|--|
| 19220 | 8675 | Bed Frame Cushion Spring for 20067..... |
| 19221 | 8680 | Wrench for 938 and 1619 (Attachments and Accessories)..... |
| 19226 | 8675 | Bed Frame Hinge Connection for 19398.... |
| 19230 | 8679 | Guide for 31-52 Machine..... |
| 19231 | 1146 | Tension Releasing Lever (intermediate) Hinge Block for 19191..... |
| 19258 | 8683 | Bobbin Winder Stop Latch with 152F and 1550H, for 19260..... |
| 19260 | ---- | Driving Arm complete for 20141, Nos. 32D 75D, 180F, 427E, 693D, 1508C, 1579C, 12170 12178, 16515, 16518, 16530, 19258 and 27303..... |
| 19274 | 788 | Feed Dog, 14 teeth (16 teeth to the inch) with 19118, for 19283, for lap seam feller..... |
| 19275 | 8649 | Feed and Feed Lifting Eccentric with 446C..... |
| 19276 | 8646 | Needle Clamp with two 209F..... |
| 19281 | 8673 | Shuttle Race Slide (outside) for 15/32 in. to 15/16 in. gauge..... |
| 19283 | 788 | Throat Plate, for 15/64 in. to 9/16 in. gauge, for 19274, for lap seam feller..... |
| 19287 | 786 | Throat Plate, for 1/32 in. to 3/16 in. gauge, for 19338..... |
| 19288 | 786 | Throat Plate, for 3/32 in. to 5/16 in. gauge, for 19339..... |
| 19289 | 788 | Throat Plate, for 3/32 in. to 3/8 in. gauge, for 19344, for lap seam feller..... |
| 19290 | 789 | Throat Plate, for 7/32 in. to 1/2 in. gauge, for 19343 and 35561..... |
| 19291 | 789 | Throat Plate, for 7/32 in. to 5/8 in. gauge, for 19341..... |
| 19294 | 8647 | Lap Seam Feller Folder Slide Spring..... |
| 19304 | ---- | Face Plate for 19305..... |
| 19305 | 8649 | Face Plate complete, for 31-52 Machine Nos. 19155, 19304 and 19327..... |
| 19309 | 1213 | Shuttle Race Needle Guard for 19323 and 24013..... |
| 19310 | 8651 | Shuttle (inside) Bobbin Case Latch and Position Finger for 19312..... |
| 19311 | 8651 | Shuttle (outside) Bobbin Case Latch and Position Finger for 19313..... |
| 19312 | 8651 | Shuttle (inside) Bobbin Case complete, for 19324, Nos. 591F, 592E, 2521, 19149 19310 and 62606..... |

| No. | Plate | Name |
|-------|-------|---|
| 19313 | 8651 | Shuttle (outside) Bobbin Case complete, for 19325 and 19326, Nos. 591F, 592E, 2521, 19172, 19311 and 62608..... |
| 19315 | ---- | Shuttle Race Body with 19316, for 19323. |
| 19316 | 1213 | " " Loop Separator for 19315 and 24490..... |
| 19317 | 1213 | Shuttle Race Ring (inside) for 19323, 24013 and 24493..... |
| 19318 | 1213 | Shuttle Race Ring (outside) for 19323 and 24013..... |
| 19323 | 1213 | Shuttle Race complete, for 3/32 in. to 5/32 in. gauge, Nos. 19309, 19315, 19317, 19318, two each 907D, 1053D, 2533 and four 2532..... |
| 19324 | 8651 | Shuttle (inside) 1 11/16 in. diam., Nos. 19131, 19136 and 19312..... |
| 19325 | 8650 | Shuttle (outside) 1 11/16 in. diam. for 7/32 in. gauge and above, Nos. 19131 19137 and 19313..... |
| 19326 | 8650 | Shuttle (outside) 1 11/16 in. diam., for 1/32 in. to 13/64 in. gauge, Nos. 19131, 19171 and 19313..... |
| 19327 | 8672 | Face Plate Thread Guard (lower) with 12152, for 19305 and 20395..... |
| 19338 | 786 | Feed Dog, 13 teeth (16 teeth to the inch) with 19118, for 19287, for general work..... |
| 19339 | 786 | Feed Dog, 9 teeth (16 teeth to the inch) with 19118, for 19288, for general work..... |
| 19340 | 8656 | Feed Dog, 13 teeth (16 teeth to the inch) with 19118, for 19190, for lap seam feller..... |
| 19341 | 789 | Feed Dog, 16 teeth (16 teeth to the inch) with 19118, for 19291, for knit goods and general work..... |
| 19343 | 789 | Feed Dog, 14 teeth (16 teeth to the inch) with 19118, for 19290 and 35561, for general work..... |
| 19344 | 786 | Feed Dog, 14 teeth (16 teeth to the inch) with 19118, for 19289, for lap seam feller..... |
| 19356 | 5772 | Lifting Presser Bar Bell Crank for 43956 |
| 19357 | 5772 | " " " " " Connecting Link for 43956..... |
| 19358 | 5772 | Lifting Presser Bar Bell Crank Driving Arm for 19361..... |
| 19359 | 5772 | Lifting Presser Bar Bell Crank Driving Arm Shaft for 19361..... |

| No. | Plate | Name |
|--------|-------|---|
| 19360 | 8669 | Lifting Presser Bar Bell Crank Driving Arm Shaft Bracket for 19361..... |
| 19361 | ---- | Lifting Presser Bar Bell Crank Driving Arm Shaft Bracket complete, for 31-62 Machine Nos.2049 and 19358 to 19360..... |
| 19362 | 5772 | Lifting Presser Bar Bell Crank Driving Arm Eccentric Connection for 31-62 Machine..... |
| 19365 | 8669 | Needle Bar Crank and Lifting Eccentric with 448C and 743C, for 31-62 Machine..... |
| 19367 | 5773 | Vibrating Presser Bar Cap for 31-62 Machine..... |
| 19368 | 5773 | Vibrating Presser Bar Cushion (rawhide), for 31-62 Machine..... |
| 19369 | 5773 | Vibrating Presser Bar Spring for 31-62 Machine..... |
| 19372 | 5773 | Lifting Lever Pin for 20341, 43928 and 43931..... |
| 19379 | ---- | Shuttle Race Body for 24013..... |
| 19381 | 8664 | " " Ring (outside) for 24493... |
| 19385 | 8673 | " " Slide (outside) for 31/32 in. to 1 1/4 in. gauge..... |
| *19386 | 8649 | Oscillating Rock Shaft for 19387..... |
| 19387 | ---- | Oscillating Rock Shaft complete, Nos. 4784,12388 and 19386..... |
| 19388 | 8646 | Oscillating Shaft Crank complete, Nos. 457C, 1518E, 19390 and 19496..... |
| 19389 | 8646 | Oscillating Shaft Crank Slide Block for 19390..... |
| 19390 | ---- | Oscillating Shaft Crank Slide Block complete, for 19388, Nos. 226D,969C, 12424 and 19389..... |
| 19397 | 8675 | Bed Frame Hinge Connection Cap for 19398 |
| 19398 | ---- | " " " 19228 with 211E and 19397, for 20067..... |
| 19479 | 8658 | Feed Dog, 7 teeth (16 teeth to the inch) with 19118, for 19481, for staying overgaiters..... |
| 19480 | 8665 | Presser Foot, for 19479, for staying overgaiters..... |
| 19481 | 8658 | Throat Plate with 4515, for 1/8 in. to 5/16 in. gauge, for 19479..... |
| 19482 | 8659 | Feed Dog,12 teeth (16 teeth to the inch) with 19118, for 19484, for rounding overgaiters..... |
| 19483 | 8665 | Presser Foot, for 19482, for rounding overgaiters..... |

| No. | Plate | Name |
|--------|-------|---|
| 19484 | 8659 | Throat Plate with 240D,19485,19486 and 25786, for 1/8 in. to 1/4 in. gauge, for 19482..... |
| 19485 | 2085 | Throat Plate Arm for 19484,20392 and 24450..... |
| 19486 | 2085 | Throat Plate Spring Guide for 19484, 20392 and 24450..... |
| 19496 | ---- | Oscillating Shaft Crank for 19388..... |
| 20008 | ---- | Foot Lifter complete, for 31-52 Machine Nos. 76D,766D,802D,1521E,4880, 4885, 5598, 5670, 12237,12240,12241,12415, 12416 and two 178E..... |
| *20013 | ---- | Arm with 11104, 15404 and two 15405, for 31-52 Machine..... |
| *20014 | ---- | Bed..... |
| 20015 | ---- | Feed Lifting Rock Shaft complete, Nos. 3043J, 12374 and 19120..... |
| 20016 | 8677 | Oscillating Shaft..... |
| 20023 | 8664 | Lifting Presser Bar Spring (heavy) .063 wire, for 31-62 Machine..... |
| 20023 | 8664 | Presser Bar Spring (heavy) .063 wire.... |
| 20044 | ---- | " Foot Plate for 20045..... |
| 20045 | 8667 | Presser Foot (hinged) complete, Nos. 20044, 26275 and 26276..... |
| 20046 | 8665 | Presser Foot (tube)..... |
| 20047 | ---- | " " Plate for 20049..... |
| 20048 | ---- | " " Shank for 20049, 36296 and 43895..... |
| 20049 | 1224 | Presser Foot (spring-hinged) tube, complete, Nos. 20047,20048,26231 and 26276..... |
| 20050 | 1224 | Presser Foot (tube) for taping..... |
| 20052 | 1224 | " " for outside stays and strips |
| 20053 | 1224 | " " (strip) for boning..... |
| 20067 | 819 | Bed Frame with two each 16555,19398, four each 19219,1922C, six each 14010 wood screws 1 1/4 in. No. 12 and eight 158C..... |
| 20068 | 8653 | Feed Dog,18 teeth (16 teeth to the inch) with 19118, for 20069, for boning and corset strips..... |
| 20069 | 8653 | Throat Plate, for 3/16 in. to 1/2 in. gauge, for 20068..... |
| 20072 | 8653 | Feed Dog,14 teeth (16 teeth to the inch) with 19118, for 20073..... |
| 20073 | 8653 | Throat Plate, for 3/16 in. to 1/2 in. gauge, for 20072..... |
| 20074 | 797 | Feed Dog,16 teeth (16 teeth to the inch) with 19118,for 20075, for knit goods and general work..... |

| No. | Plate | Name |
|-------|-------|---|
| 20075 | 797 | Throat Plate, for 17/32 in. to 13/16 in. gauge, for 20074..... |
| 20076 | 797 | Feed Dog, 13 teeth (16 teeth to the inch) with 19118, for 20077, for heavy lap seam feller..... |
| 20077 | 797 | Throat Plate, for 17/32 in. to 13/16 in. gauge, for 20076, for heavy lap seam feller..... |
| 20079 | 8654 | Throat Plate, for 17/32 in. to 13/16 in. gauge, for 20318..... |
| 20081 | 8654 | Throat Plate, for 3/32 in. to 1/4 in. gauge, for 20294..... |
| 20084 | 799 | Feed Dog, 14 teeth (16 teeth to the inch) with 19118, for 20085, for general work..... |
| 20085 | 799 | Throat Plate, for 27/32 in. to 1 1/4 in. gauge, for 20084..... |
| 20086 | 799 | Feed Dog, 9 teeth (16 teeth to the inch) with 19118, for 20087 and 43965, for heavy bolting cloth and lap seam feller..... |
| 20087 | 799 | Throat Plate, for 3/16 in. to 5/16 in. gauge, for 20086..... |
| 20088 | 800 | Feed Dog, 13 teeth (16 teeth to the inch) with 19118, for 20089, for heavy lap seam feller..... |
| 20089 | 800 | Throat Plate, for 27/32 in. to 1 1/4 in. gauge, for 20088, for heavy lap seam feller..... |
| 20091 | 8688 | Rock Shaft for 20465..... |
| 20103 | 800 | Feed Dog, 10 teeth (16 teeth to the inch) with 19118, for 20104 and 43964, for lap seam feller..... |
| 20104 | 800 | Throat Plate, for 3/32 in. to 1/8 in. gauge, for 20103, for lap seam feller |
| 20129 | ---- | Presser Foot Plate for 20131..... |
| 20130 | ---- | " " Shank for 20131..... |
| 20131 | 8667 | Presser Foot (hinged) complete, hollowed across bottom between needle holes and heel for riding seams, for general work, Nos. 18055, 20129 and 20130 |
| 20141 | ---- | Driving Attachment with Bobbin Winder and Treadle complete, Nos. 210D, 692D, 12475, 16592, 16594, 19280, 20372, 24355, 27072, 27308, 44176, 126213 and two 65D. |
| 20168 | ---- | Presser Foot Plate for 20170..... |
| 20169 | ---- | " " Shank for 20170 and 44187.. |

| No. | Plate | Name |
|-------|-------|--|
| 20170 | 8667 | Presser Foot (hinged) complete, 5/32 in. and above, for rounding overgaiters, Nos. 20168, 20169 and 26276..... |
| 20171 | 8665 | Presser Foot (tube) for cording and covering one cord with strip..... |
| 20188 | 8649 | Needle Bar Crank with 858C and 1065C, for 31-52 Machine..... |
| 20195 | 8657 | Feed Dog, 15 teeth (16 teeth to the inch) with 19118, for 20196, for lap seam feller..... |
| 20196 | 8657 | Throat Plate, for 3/16 in. to 1/2 in. gauge, for 20195, for lap seam feller..... |
| 20197 | 8648 | Crank Connecting Rod with two 896C..... |
| 20279 | 2077 | Feed Dog, 16 teeth (16 teeth to the inch) with 19118, for 20280, for knit goods and general work..... |
| 20280 | 2077 | Throat Plate, for 27/32 in. to 1 1/4 in. gauge, for 20279..... |
| 20294 | 8659 | Feed Dog, 15 teeth (16 teeth to the inch) with 19118, for 20081..... |
| 20302 | 8665 | Presser Foot with guide on bottom to the right of needle holes..... |
| 20307 | 8665 | Bobbin Winder Frame for 20308..... |
| 20308 | 8665 | Bobbin Winder Frame complete for 20309, Nos. 333D, 5960, 5961, 5963, 15077 and 20307..... |
| 20309 | ---- | Bobbin Winder complete, for 12358, Nos. 32D, 180F, 12168, 12170 and 20308..... |
| 20316 | 8654 | Feed Dog, 14 teeth (16 teeth to the inch) with 19118, for 20079..... |
| 20317 | 8662 | Feed Dog, 15 teeth (16 teeth to the inch) with 19118, for 20318, for shirt closing parts, for 31-52 Machine.... |
| 20318 | 8662 | Throat Plate, for 1/32 in. to 1/4 in. gauge, with 2653, for 20317, for shirt closing parts, for 31-52 Machine..... |
| 20333 | ---- | Feed Rock Shaft complete, Nos. 12379 and 29633..... |
| 20340 | 8662 | Lifting Lever with 448C, for 20341, 43928 and 43931..... |
| 20341 | ---- | Knee Lifter complete, (power table or stand No. 25265) Nos. 76D, 768D, 802D, 1521E, 5598, 12250, 12415, 12416, 19372, 20340, 21301 and two 178E..... |
| 20371 | 8683 | Driving Arm Pitman Crank for 44176..... |
| 20372 | 8683 | " " " " Spring for 20141 |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|-------|-------|---|
| 20373 | 8652 | Feed Dog, 10 teeth (16 teeth to the inch) with 19118, for 20375, for edge stitching on curves, for shirt bottoms..... |
| 20374 | 8665 | Presser Foot with guide on bottom to the right of needle holes, for 20373.... |
| 20375 | 8652 | Throat Plate, for 3/32 in. to 3/16 in. gauge, for 20373..... |
| 20383 | 8652 | Feed Dog, 12 teeth (16 teeth to the inch) with 19118, for 20384..... |
| 20384 | 8652 | Throat Plate, for 3/32 in. to 3/16 in. gauge, for 20383..... |
| 20387 | 8657 | Feed Dog, 16 spiked teeth (16 teeth to the inch) with 19118, for 20388, for heavy lap seam feller..... |
| 20388 | 8657 | Throat Plate, for 33/64 in. to 13/16 in. gauge, for 20387, for heavy lap seam feller..... |
| 20391 | 2085 | Feed Dog, 16 teeth (16 teeth to the inch) with 19118, for 20392..... |
| 20392 | 2085 | Throat Plate with 240D, 19485, 19486, and 25786, for 17/32 in. gauge, for 20391 for under strip..... |
| 20395 | 8670 | Face Plate complete, for 31-62 Machine, Nos. 19155, 19327 and 20475..... |
| 20462 | 8688 | Rock Shaft Knee Arm Hub with 356C, for 20463..... |
| 20463 | ---- | Rock Shaft Knee Arm complete for 20465, Nos. 2765, 2767 and 20462..... |
| 20464 | 8688 | Rock Shaft Lifting Arm with 356C, for 20465..... |
| 20465 | 8688 | Rock Shaft complete, for 20466 and 43931 Nos. 2764, 16128, 20091, 20463, 20464 and two 2770..... |
| 20466 | ---- | Knee Lifter complete (stand No. 25255) for 31-52 Machine, Nos. 76D, 766D, 802D, 1521E, 5598, 12237, 12240, 12241, 12415, 12416, 20465 and two 178E..... |
| 20475 | ---- | Face Plate for 20395..... |
| 20482 | 5773 | Lifting Presser Foot for 31-62 Machine.. |
| 20483 | 5773 | Vibrating Presser Bar Foot for 31-62 Machine..... |
| 21301 | 5773 | Lifting Lever Link for 20341, 43928 and 43931..... |
| 23258 | 8674 | Driving Attachment Treadle Bracket (left) Hook Friction Washer for 126206..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|-------|-------|---|
| 24013 | 8664 | Shuttle Race complete, for 11/64 in. gauge and above, Nos. 19309, 19317, 19318, 19379, two each 907D, 1053D, 2533 and four 2532..... |
| 24129 | 1144 | Thread Take-up Crank..... |
| 24131 | 8645 | Arm Oil Tube with 52045, for oiling 19275 |
| 24203 | 2070 | Ruffling Blade Holder for 35305, 35812 and 36004..... |
| 24204 | 2070 | Ruffling Blade Holder Spring for 35305, 35812 and 36004..... |
| 24205 | 2070 | Ruffling Blade Holder Spring Stop for 35305, 35812 and 36004..... |
| 24206 | 2070 | Ruffling Blade Holder Stud for 35305, 35812 and 36004..... |
| 24355 | 8683 | Driving Attachment Balance Wheel Oil Cover for 20141..... |
| 24449 | 8658 | Feed Dog, 15 teeth (16 teeth to the inch) with 19118, for 24450, for rounding overgaiters..... |
| 24450 | 8658 | Throat Plate with 240D, 19485, 19486 and 25786, for 3/16 in. to 5/16 in. gauge for 24449..... |
| 24462 | 8658 | Feed Dog, 13 spiked teeth (16 teeth to the inch) with 19118, for 19190, for lap seam feller..... |
| 24490 | ---- | Shuttle Race Body with 19316, for 24493. |
| 24492 | 1241 | " " Needle Guard for 24493..... |
| 24493 | 1241 | Shuttle Race complete, for 1/32 in. to 5/64 in. gauge, Nos. 19317, 19381, 24490, 24492, two each 907D, 1053D, 2533 and four 2532..... |
| 24589 | 8669 | Lifting Presser Bar Guide Bracket with 453C, for 43956..... |
| 24590 | 8669 | Lifting Presser Bar Guide Bracket Support for 31-62 Machine..... |
| 25786 | 2085 | Throat Plate Arm Rivet for 19484, 20392 and 24450..... |
| 25888 | 8662 | Hemmer Tongue for 26487, for shirt closing parts, for 31-52 Machine..... |
| 25967 | 8668 | Presser Foot Strip Gauge for 19216..... |
| 25992 | 8681 | Quilter Guide Holder with two 207F, for 28600..... |
| 26026 | 8680 | Screw Driver (large) Attachments and Accessories..... |
| 26061 | 989 | Tape Holder Bracket Wire with Disc, for 28063..... |
| 26062 | 989 | Tape Holder Disc (adjustable) with 35925 and 51224D, for 26063..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|-------|-------|---|
| 26063 | 989 | Tape Holder (straight) complete, for 26065, Nos. 26061 and 26062..... |
| 26064 | 8669 | Tape Holder Foot with 736J and three wood screws 1 in. No. 12, for 26343. |
| 26065 | ---- | Tape Holder with Foot (8 in. disc) complete, Nos. 26063 and 26325..... |
| 26066 | 989 | Tape Holder Bracket Wire for 26067..... |
| 26067 | ---- | Tape Holder Bracket Wire complete, for 26074, Nos. 26066, 26068 and 26072... |
| 26068 | 989 | Tape Holder Disc for 26067 and 26071.... |
| 26069 | 989 | " " " Hub for 26071..... |
| 26070 | ---- | " " " Rivet for 26071.... |
| 26071 | ---- | Tape Holder Disc complete for 26074, Nos. 26068 and 26069..... |
| 26072 | 989 | Tape Holder Tape Guide for 26067..... |
| 26073 | 8663 | " " Tension Adjusting Collar with 51224B, for 26074..... |
| 26074 | 989 | Tape Holder (offset) complete, for 26343 Nos. 13211, 26067, 26071 and 26073.... |
| 26228 | 2069 | Ruffler Needle Clamp Roller for 35307... |
| 26231 | 8667 | Presser Foot Spring for 20049, 36296, 43895 and 43975..... |
| 26266 | 8661 | Stay Guide Plate (lower) for 26268..... |
| 26267 | 8661 | " " " (upper) for 26268..... |
| 26268 | ---- | Stay Guide complete, Nos. 26266 and 26267 |
| 26269 | ---- | Lap Seam Feller Folder for 26272..... |
| 26272 | 8661 | Lap Seam Feller (right hand) complete, Nos. 18114 and 26269..... |
| 26275 | ---- | Presser Foot Shank for 20045, 26406, 26410 26418, 26519, 28802 and 35196..... |
| 26276 | 8667 | Presser Foot Hinge Pin for 20045, 20049, 20170, 26383, 26406, 26410, 26418, 26519, 28802, 35196, 35804, 35887, 36296, 43895, 43975 and 44187..... |
| 26279 | 8668 | Presser Foot Extension, 1/16 in., for 19216..... |
| 26280 | 8668 | Presser Foot Extension, 1/8 in., for 19216..... |
| 26281 | 8668 | Presser Foot Extension, 1/4 in., for 19216..... |
| 26282 | 8668 | Presser Foot Extension, 3/8 in., for 19216..... |
| 26283 | 8668 | Presser Foot Extension, 1/2 in., for 19216..... |
| 26325 | 8669 | Tape Holder Foot with 736J and three wood screws 1 in. No. 12, for 26065. |
| 26343 | ---- | Tape Holder with Foot (10 in. disc) complete, Nos. 26064 and 26074..... |
| 26382 | ---- | Presser Foot Plate for 26383..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|-------|-------|---|
| 26383 | 8656 | Presser Foot (hinged) complete, for X heavy, XX heavy and XXX heavy lap seam feller, Nos. 26276, 26382 and 26395..... |
| 26395 | ---- | Presser Foot Shank for 26383..... |
| 26396 | ---- | Lap Seam Feller Folder for 26397..... |
| 26397 | 8661 | Lap Seam Feller (left hand) complete, Nos. 18114 and 26396..... |
| 26404 | 1224 | Presser Foot (tube) for reeding..... |
| 26405 | ---- | " " Plate for 26406..... |
| 26406 | 1224 | Presser Foot (tube) hinged complete, for reeding, Nos. 26275, 26276 and 26405. |
| 26407 | 1224 | Presser Foot, for double strips (tube) for reeding..... |
| 26408 | 1224 | Presser Foot, for double strips (tube).. |
| 26409 | ---- | " " Plate for 26410..... |
| 26410 | 1224 | Presser Foot, for double strips (tube) hinged complete, Nos. 26275, 26276 and 26409..... |
| 26411 | 8666 | Presser Foot (strip folding) for cording |
| 26412 | ---- | Strip Folder for 26413..... |
| 26413 | 8679 | " " on Slide, Nos. 18114 and 26412..... |
| 26414 | 8666 | Presser Foot (strip folding) for opening seams and enclosing folded edges.... |
| 26415 | 8666 | Presser Foot (strip folding) for short strips..... |
| 26416 | 8666 | Presser Foot (strip folding) with guide for opening seams..... |
| 26417 | ---- | Presser Foot Plate for 26418..... |
| 26418 | 8666 | Presser Foot (strip folding) hinged complete, with guide for opening seams, Nos. 26275, 26276 and 26417..... |
| 26485 | 8660 | Screw Driver (small) Attachments and Accessories..... |
| 26487 | 9662 | Hemmer (foot) for felling, for shirt closing parts, for 31-52 Machine.... |
| 26488 | 8662 | Throat Plate Cloth Guide for shirt closing parts, for 31-52 Machine..... |
| 26489 | 8662 | Throat Plate Spring Guide, for shirt closing parts, for 31-52 Machine.... |
| 26518 | ---- | Presser Foot Plate for 26519..... |
| 26519 | 2679 | Presser Foot (hinged tube) complete, for double strips, for reeding, Nos. 26275, 26276 and 26518..... |
| 26565 | 2071 | Lap Seam Feller (right hand) on Slide 18114 to fold top only..... |
| 26574 | 8666 | Presser Foot for gathering..... |

| No. | Plate | Name |
|--------|-------|---|
| 26725 | 1328 | Feed Dog, 10 teeth (16 teeth to the inch) with 19118, for 26726, 36310, 36311 and 36543, for 31-52 Machine..... |
| 26726 | 1328 | Throat Plate, for 5/32 in. to 1/2 in. gauge, for under strip, for 26725, for 31-52 Machine..... |
| 26763 | 8670 | Spool Holder Bracket with 219F and 50053D, for 26764..... |
| 26764 | 8670 | Spool Holder (disc) complete, Nos. 691F, 19066, 19067 and 26763..... |
| 26887 | 5646 | Presser Foot (strip folding) with two tubes, for stitching two rows of soutache braid on the folded strip.. |
| 26965 | 2660 | Edge Folder (left hand) on slide complete, with right hand upper guide, for folding bobbinette curtains and inserting edge of lace..... |
| 27072 | ---- | Driving Attachment Shaft Driving Pulley (sectional grooved) 12 in. diam., 1 3/16 in. bore, with two 597C, for 20141..... |
| 27302 | 8669 | Bobbin Winder Frame for 27875..... |
| 27303 | 8676 | " " " Spring for 27875.... |
| 27303 | 8676 | " " " Stop Latch Spring for 19260..... |
| 27306 | 8686 | Bobbin Winder Spool Pin for 27308..... |
| 27307 | 8686 | " " " Stand for 27308..... |
| 27308 | 8686 | Bobbin Winder Spool Stand complete, for 20141 and 27876, Nos. 418E, 1562J, 2106, 10141, 11241, 27306, 27307 and two each 2455 and wood screws 1 in. No. 10..... |
| 27538 | 8669 | Bobbin Winder Spindle 27849 with 15072, 27850 and 41828, for 27875..... |
| 27540 | 8669 | Bobbin Winder Base for 27875..... |
| 27541 | 8669 | " " " Pulley for 27875..... |
| 27587 | 8686 | " " " Stop Latch for 27875..... |
| 27637 | 8687 | Driving Attachment Treadle Pitman Rod (lower) for 14233..... |
| 27739 | 8670 | Thread Cone (wood) for large cones, for 225258..... |
| *27849 | ---- | Bobbin Winder Spindle for 27538..... |
| *27850 | ---- | " " " Collar for 27538.. |
| 27875 | ---- | " " " Nos. 35D, 1620J, 27302, 27303, 27538, 27540, 27541, 27587, 50356D and two wood screws 1 in. No. 7, for 27876..... |

| No. | Plate | Name |
|-------|-------|---|
| 27876 | ---- | Bobbin Winder (swinging automatic, right hand) complete, for 19131 for stand Nos. 27308 and 27875..... |
| 28590 | 2070 | Ruffler Driving Lever for 35305, 35812 and 36004..... |
| 28591 | 2070 | Ruffler Driving Lever Spring for 35305, 35812 and 36004..... |
| 28592 | 2070 | Ruffler Driving Lever Spring Collar for 35305, 35812 and 36004..... |
| 28593 | 1255 | Ruffler Frame for 35812..... |
| 28596 | ---- | Presser Foot (right) Shank for 35809.... |
| 28597 | 1255 | " " " " Cap for 35812 |
| 28600 | 2070 | Ruffling Blade Lever for 35305..... |
| 28601 | 2070 | Ruffler Starting Lever with 190D, for 35305, 35812 and 36004..... |
| 28607 | 2070 | Ruffling Blade Holder Stop for 35305, 35812 and 36004..... |
| 28659 | 8681 | Quilter Guide for 28660..... |
| 28660 | 8681 | Quilter complete, Nos. 25992 and 28659.. |
| 28801 | ---- | Presser Foot Plate for 28802..... |
| 28802 | 8666 | Presser Foot (hinged) strip folding complete, Nos. 26275, 26276 and 28801... |
| 28934 | 2660 | Edge Folder (right hand) on slide complete, with left hand upper guide, for folding bobbinette curtains and inserting edge of lace..... |
| 28994 | 2116 | Tape Holder (5 in. disc) complete, Nos. 55D, 36795, 36796 and two wood screws 1 1/4 in. No. 10..... |
| 28995 | 2670 | Presser Foot, for braiding..... |
| 29633 | 8664 | Feed Rock Shaft Crank with 157J, for 20333..... |
| 35071 | 2670 | Presser Foot (strip folding) for folding strip and inserting piping on each edge of strip..... |
| 35080 | 2679 | Edge Folder to turn the goods in, use with 35081..... |
| 35081 | 2679 | Presser Foot (hinged) strip folding with tape guide, for 35080..... |
| 35083 | 2681 | Presser Foot strip folding for straight cut goods to turn under the right and left edges 5/16 in., with guide for interlining..... |
| 35102 | 2681 | Strip Folder on Slide 18114, for folding strip so that both edges will meet in the center, for belt loops for trousers..... |
| 35103 | 2681 | Presser Foot (tube) for 35102..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|-------|-------|--|
| 35111 | 2670 | Presser Foot with upper and lower strip folder, for 1/4 in. to 5/8 in. gauge. |
| 35132 | 8679 | Strip Folder on Slide 18114 to turn both edges up, so that the edges will meet in center, for garters..... |
| 35133 | 2686 | Presser Foot (strip folding) to turn under both edges 1/4 in., for garters for 35132..... |
| 35194 | 5646 | Presser Foot, for gathering..... |
| 35195 | ---- | " " Plate for 35196..... |
| 35198 | 8656 | Presser Foot (hinged) complete, for 3/32 in. to 3/8 in. gauge, for light, medium and heavy lap seam feller, Nos. 26275, 26276 and 35195..... |
| 35259 | 2679 | Presser Foot (strip folding) with tape guide..... |
| 35287 | 2059 | Guide (hinged) right hand complete, for closing front seams on straight front corsets, Nos. 36224, 36225 and 50094D. |
| 35288 | 2059 | Presser Foot with guide on bottom to the left of needle holes, for 35287..... |
| 35289 | 2059 | Guide (hinged) left hand complete, for closing front seams on straight front corsets, Nos. 36226, 36227 and 50094D. |
| 35290 | 2059 | Presser Foot with guide on bottom to the right of needle holes, for 35289..... |
| 35300 | 8679 | Edge Folder (left hand) on slide complete, to turn edge under with right hand lower guide, for turning silk bolting cloth and stitching cotton webbing and ticking..... |
| 35301 | 8679 | Shuttle Race Slide Guide (front) with 651E and 19147, for 35287 and 35289.. |
| 35302 | 2070 | Ruffler Frame for 35305 and 36004..... |
| 35303 | 2070 | Presser Foot for 35305 and 36004..... |
| 35304 | 2070 | Ruffling Blade for 35305..... |
| 35305 | 2069 | Ruffler (power) complete, with lever, for throwing ruffling blade into action, for intermittent ruffling, for shirt yokings, etc., for 35308, Nos. 185H, 226J, 560B, 1049D, 1101C, 1550H, 1603E, 1647C, 24203 to 24206, 28590 to 28592, 28600, 28601, 28607, 35302 to 35304, 35307 and two 665J..... |
| 35306 | ---- | Ruffler Needle Clamp Body for 35307..... |
| 35307 | 2069 | Ruffler Needle Clamp complete, Nos. 26228 35306 and two 209F, for 35305, 35812 and 36004..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|-------|-------|---|
| 35308 | 2071 | Strip Folder on Slide 18114, with upper right hand edge folder to turn the goods under, with separating blade and guide for draw string, for 35305 and 36004..... |
| 35309 | 2071 | Strip Folder on Slide 18114 with separating blade and guide for draw string, for 35305..... |
| 35310 | 2071 | Strip Guide on Slide 18114, with guide for draw string, for 35305..... |
| 35311 | 2072 | Edge Folder (left hand) on Slide complete, to turn the goods up with separating blade and right hand upper guide, for 35305..... |
| 35312 | 2072 | Ruffling Blade for 35311..... |
| 35362 | 8666 | Presser Foot with upper and lower strip folder..... |
| 35542 | 1003 | Presser Foot (tube) for strip with two tubes for braid, to stitch braid to each edge of strip..... |
| 35556 | 1245 | Presser Foot (left) for 35560..... |
| 35557 | 1245 | " " (right) for 35560..... |
| 35558 | 1245 | " " Shank (left) with 7311 for 35560..... |
| 35559 | 1245 | Presser Foot Shank (right) with 7311 for 35560..... |
| 35560 | 1245 | Presser Foot (compensating) complete for 35561, Nos. 106D, 220D, 7308 to 7310, 35556 to 35559 and two 62527..... |
| 35561 | 1245 | Hemmer (double) on Slide, for 3/32 in. to 3/16 in. hem, for hemming two pieces in one operation for skirt ruffler, etc..... |
| 35691 | 1248 | Binder on Slide 18114, for 1/2 in. to 1 1/2 in. ribbon binding, for blankets, for 31-62 Machine..... |
| 35692 | 8677 | Binder on Slide 18114, for 1 9/16 in. to 2 1/2 in. ribbon binding, for blankets, for 31-62 Machine..... |
| 35693 | 8677 | Binder on Slide 18114, for 2 9/16 in. to 3 1/2 in. ribbon binding, for blankets, for 31-62 Machine..... |
| 35694 | 1249 | Feed Dog, 21 teeth (16 teeth the inch) with 19118, for 35691 to 35693 and 35695..... |
| 35695 | 1249 | Throat Plate for 3/16 in. to 5/16 in. gauge, for 35691 to 35694..... |
| 35696 | 1249 | Lifting Presser Foot for 35691..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|-------|-------|--|
| 35697 | 1249 | Vibrating Presser Foot for 35691..... |
| 35698 | 1249 | Lifting Presser Foot for 35692 and 35693 |
| 35699 | 1249 | Vibrating Presser Foot for 35692 and 35693..... |
| 35702 | 1251 | Strip Folder on Slide 18114 with lining guide, for making side straps for trousers..... |
| 35703 | 1251 | Presser Foot for 35702..... |
| 35801 | 1254 | Strip Folder on Slide 18114 with guides, for steel and interlining..... |
| 35802 | ---- | Presser Foot Plate for 35804..... |
| 35803 | ---- | " " Shank for 35804..... |
| 35804 | 1254 | Presser Foot (hinged) complete, for 35801, Nos. 26276, 35802 and 35803.... |
| 35807 | 1255 | Presser Foot (left) for 35812..... |
| 35808 | ---- | " " (right) Plate for 35809.... |
| 35809 | 1255 | Presser Foot (right) complete for 35812, Nos. 2621, 28596, 35808 and 62527..... |
| 35810 | 1255 | Ruffling Blade for 35812..... |
| 35811 | 1255 | " " Lever for 35812..... |
| 35812 | 1255 | Ruffler (power) complete, with lever for throwing ruffling blade into action, for intermittent ruffling, for shirt yokings, etc., for 35813, Nos. 185H, 226J, 560B, 706J, 1049D, 1101C, 1550H, 1603E, 1647C, 2656, 24203 to 24206, 28590 to 28593, 28597, 28601, 28607, 35307, 35807, 35809 to 35811, two 665J and three 198D..... |
| 35813 | 1256 | Double Edge Folder (right hand) with separating blade, for ruffling shirt body and putting in yoke, for 35812. |
| 35814 | 8663 | Feed Dog, 8 teeth (16 teeth to the inch) with 19118, for 35812 and 35815..... |
| 35815 | 8663 | Throat Plate, for 3/16 in. to 3/8 in. gauge, for 35812 and 35814..... |
| 35835 | 8666 | Presser Foot (strip folding) with tongue slotted for interlining and guide for steel..... |
| 35878 | 1254 | Strip Folder on Slide 18114 with guide for interlining..... |
| 35885 | ---- | Presser Foot Plate for 35887..... |
| 35886 | ---- | " " Shank for 35887..... |
| 35887 | 5797 | Presser Foot (strip folding) hinged, complete, with guide for draw string, Nos. 26276, 35885 and 35886..... |
| 35925 | 8663 | Tape Holder Disc Hub for 26062..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|-------|-------|---|
| 35945 | 5794 | Edge Guide (double) on slide, left hand lower, right hand upper, slide grooved for taping..... |
| 35994 | 5794 | Edge Folder (double) on slide 18114..... |
| 36002 | 5795 | Ruffling Blade for 36004..... |
| 36003 | 5795 | " " Lever for 36004..... |
| 36004 | 5795 | Ruffler (power) complete, with lever, for throwing ruffling blade into action, for intermittent ruffling, for shirt yokings, etc., for 35308, Nos. 185H, 226J, 560B, 1049D, 1101C, 1550H, 1603E, 1647C, 24203 to 24206, 28590 to 28592, 28601, 28607, 35302, 35303, 35307, 36002, 36003 and two 665J..... |
| 36077 | 5796 | Strip Folder on slide 18114, for light material, for making straps..... |
| 36078 | 5796 | Presser Foot for 36077..... |
| 36089 | 5797 | " " (strip folding) for long strips..... |
| 36224 | 2059 | Guide (right hand) for 35287..... |
| 36225 | 2059 | " " Hinge Plate for 35287 |
| 36228 | 2059 | " (left hand) for 35289..... |
| 36227 | 2059 | " " Hinge Plate for 35289. |
| 36295 | ---- | Presser Foot Plate for 36296..... |
| 36296 | 1003 | Presser Foot (tube) spring hinged complete, with guide for opening seams, Nos. 20048, 26231, 26276 and 36295.... |
| 36297 | 5798 | Presser Foot with upper and lower strip folder, for 1 1/16 in. to 1 1/4 in. gauge..... |
| 36310 | 2086 | Throat Plate, for 5/32 in. to 1/2 in. gauge, for two under strips, for 26725, for 31-52 Machine..... |
| 36311 | 2086 | Throat Plate, for 5/32 in. to 1/2 in. gauge, for two under strips with adjustable under strip guide, for 26725, for 31-52 Machine..... |
| 36312 | 2086 | Feed Dog, 10 teeth (16 teeth to the inch) with 19118, for 36313 to 36316, for 31-52 Machine..... |
| 36313 | 2086 | Throat Plate, for 17/32 in. to 13/16 in. gauge, for under strip, for 36312, for 31-52 Machine..... |
| 36314 | 5800 | Throat Plate, for 17/32 in. to 13/16 in. gauge, for two under strips, for 36312, for 31-52 Machine..... |
| 36315 | 5800 | Throat Plate, for 17/32 in. to 13/16 in. gauge, with adjustable under strip guide, for 36312, for 31-52 Machine. |

| No. | Plate | Name |
|-------|-------|--|
| 36316 | 8660 | Throat Plate, for 17/32 in. to 13/16 in. gauge, for two under strips with adjustable under strip guide, for 36312, for 31-52 Machine..... |
| 36317 | 5802 | Feed Dog, 10 teeth (16 teeth to the inch) with 19118, for 36318, for 31-52 Machine..... |
| 36318 | 5802 | Throat Plate, for 53/64 in. to 1 1/4 in. gauge, for under strip, for 36317, for 31-52 Machine..... |
| 36321 | 2662 | Feed Dog, 6 teeth (16 teeth to the inch) with 19118, for 35305 and 36322..... |
| 36322 | 2662 | Throat Plate, for 17/32 in. to 13/16 in. gauge, for 35305 and 36321..... |
| 36323 | 2663 | Feed Dog, 6 teeth (16 teeth to the inch) with 19118, for 35305 and 36324..... |
| 36324 | 2663 | Throat Plate, for 27/32 in. to 1 1/4 in. gauge, for 35305 and 36323..... |
| 36490 | 8679 | Edge Guide for 36493..... |
| 36491 | 8679 | Strip Folder (lower) on Slide for 36493. |
| 36492 | 8679 | " " (upper) on Bracket for 36493..... |
| 36493 | 8679 | Strip Folder (lower and upper) complete, with edge guide, for 31-62 Machine, for banding knee pants, Nos. 793B, 1425B, 1443B and 36490 to 36492..... |
| 36494 | 8654 | Feed Dog, 21 teeth (16 teeth to the inch) with 19118, for 36493 and 36496..... |
| 36495 | 8655 | Lifting Presser Foot for 36493..... |
| 36496 | 8654 | Throat Plate, for 17/32 in. to 13/16 in. gauge, for 36493 and 36494..... |
| 36497 | 8655 | Vibrating Presser Foot for 36493..... |
| 36543 | 8660 | Throat Plate, for 5/32 in. to 1/2 in. gauge with adjustable under strip guide, for 26725, for 31-52 Machine. |
| 36606 | 8655 | Feed Dog, 21 teeth (16 teeth to the inch) with 19118, for 36493 and 36607..... |
| 36607 | 8655 | Throat Plate, for 3/8 in. to 1/2 in. gauge, for 36493 and 36606..... |
| 36795 | 2116 | Tape Holder Body for 28994..... |
| 36796 | 2116 | " " Cover for 28994..... |
| 36880 | 8681 | Lap Seam Feller (left hand) on Slide 18114 to fold top only..... |
| 41400 | 8660 | Machine Rest Pin (wood) Attachments and Accessories..... |
| 41828 | 8647 | Bobbin Winder Spindle Collar Pin for 27538..... |
| 41929 | 8677 | Belt Guard for 41931..... |
| 41930 | 8686 | " " Hinge for 41931..... |

| No. | Plate | Name |
|--------|-------|---|
| 41931 | ---- | Belt Guard complete, Nos. 8420, 41929, two 41930 and four wood screws 3/4 in. No. 9..... |
| 43894 | ---- | Presser Foot Plate for 43895..... |
| 43895 | 8667 | Presser Foot (spring hinged) tube complete, for tapping Nos. 20048, 26231, 26276 and 43894..... |
| 43928 | ---- | Foot Lifter complete, for 31-62 Machine, Nos. 76D, 766D, 802D, 1521E, 4880, 4885, 5598, 5670, 12415, 12416, 19372, 20340, 21301 and two 178E..... |
| 43931 | ---- | Knee Lifter complete (stand No. 25255) for 31-62 Machine, Nos. 76D, 766D, 802D, 1521E, 5598, 12415, 12416, 19372, 20340, 20465, 21301 and two 178E..... |
| 43944 | 8649 | Tension Releasing Lever..... |
| *43948 | ---- | Arm with 11104, 15404 and two 15405, for 31-62 Machine..... |
| 43949 | 5773 | Vibrating Presser Bar for 43956..... |
| 43956 | ---- | Lifting Presser Bar Guide Bracket complete, for 31-62 Machine, Nos. 19356, 19357, 24589, 43949 and three 199D.... |
| 43964 | 2082 | Throat Plate (flush) for 3/32 in. to 1/8 in. gauge, for 20103..... |
| 43965 | 2082 | Throat Plate, for 3/16 in. to 5/16 in. gauge, for 20086, for lap seam feller..... |
| 43973 | ---- | Presser Foot Plate for 43975..... |
| 43974 | ---- | " " Shank for 43975..... |
| 43975 | 8667 | Presser Foot (spring hinged) complete, for bolting cloth, Nos. 26231, 26276, 43973 and 43974..... |
| 43976 | 8648 | Feed Lifting Rock Shaft Crank Connecting Rod (cast iron) with two 968E..... |
| 44139 | 8675 | Machine Hinge Plate for 44140 and 44180 (Attachments and Accessories)..... |
| 44140 | ---- | Machine Hinge complete, Nos. 12361, 44139 and merlized wood screw 1 1/4 in. No. 14 (Attachments and Accessories).... |
| *44176 | ---- | Driving Attachment Starting Crank Shaft 12477 with 12479, 20371 and two 2022, for 20141..... |
| 44180 | ---- | Machine Hinge complete, Nos. 8055, 12361, 44139 and 51075E (Attachments and Accessories)..... |
| 44186 | ---- | Presser Foot Plate for 44187..... |
| 44187 | 8667 | Presser Foot (hinged) complete, for 1/8 in. gauge and below for rounding overgaiters, Nos. 20169, 26276 and 44186..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|--------|-------|--|
| 44209 | ---- | Tension Screw Stud 916C with 1560C, for 19195..... |
| 44212 | 8676 | Drip Pan with four 1 in. wire nails..... |
| 46681 | 8683 | Driving Attachment Treadle Bracket (right) for 60502..... |
| 50053D | 8663 | Spool Holder Bracket Thumb Screw for 26763..... |
| 50094D | 2059 | Guide (left hand) Hinge Screw for 35289. |
| 50094D | 2059 | " (right hand) Hinge Screw for 35287 |
| 50356D | 8676 | Bobbin Winder Frame Hinge Screw for 27875..... |
| 51075E | 8675 | Machine Hinge Bolt with 51581E, for 44180 (Attachments and Accessories). |
| 51224D | 8645 | Arm Side Cover Thumb Screw..... |
| 51224D | 8645 | Face Plate Thumb Screw..... |
| 51224D | 8645 | Tape Holder Disc Hub Thumb Screw for 26062..... |
| 51224B | 8645 | Tape Holder Tension Adjusting Collar Thumb Screw for 26073..... |
| 51581E | ---- | Machine Hinge Bolt Nut for 51075E (Attachments and Accessories)..... |
| 52016 | 8664 | Presser Bar Lifter..... |
| 52045 | 8645 | Arm Oil Tube Packing (wick) for 11119 and 24131..... |
| 56848 | ---- | Bell Crank 5596 with 5599 and 5601, for 5598..... |
| 56864 | 8682 | Chain Hook (large) for 5670..... |
| 56865 | 8682 | " " (small) for 5670..... |
| 60502 | ---- | Driving Attachment Treadle Bracket (right) 46681 with two wood screws 1 in. No. 14, for 126209..... |
| 62527 | 8650 | Presser Foot Hinge Pin for 35560..... |
| 62527 | 9650 | " " (right) Hinge Pin for 35809 |
| 62606 | ---- | Shuttle (inside) Bobbin Case for 19312.. |
| 62608 | ---- | " (outside) Bobbin Case for 19313. |
| 62624 | 8672 | Face Plate Thread Guard (upper) for 19155..... |
| 80223 | 8687 | Driving Attachment Treadle Pitman Rod Clamp with 361C, for 14233..... |
| 120157 | 8665 | Presser Foot (double tube) for two strips..... |
| 120193 | 8661 | Feed Dog, 12 teeth (16 teeth to the inch) with 19118, for 120195 and 120196... |
| 120194 | 8661 | Presser Foot for 120196..... |
| 120195 | 8661 | Throat Plate, for 1/2 in. to 3/4 in. gauge, for 120193 and 120196..... |
| 120196 | 8661 | Strip Folder on 18114, for 31-52 Machine for hemming the right hand edge and turning over the left hand edge, for army shirts..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|---------|-------|--|
| 120341 | 8680 | Tweezers (curved) Attachments and Accessories..... |
| 120346 | 8680 | Oiler (copper plated) with 120347 (Attachments and Accessories)..... |
| 120347 | 8680 | Oiler Spout, 8 1/2 long, for 120346 (Attachments and Accessories)..... |
| 120367 | 8681 | Hemmer on Shank, for handkerchief work.. |
| 120452 | 8681 | " " " 1/32 in. to 1/8 in. gauge, for Windsor ties..... |
| 120479 | 8212 | Quilter Guide (left) for 120485..... |
| 120480 | 8212 | " " (right) for 120485..... |
| 120481 | 8212 | " " Bracket for 120482..... |
| 120482 | ---- | " " " 120481 with 120483 and two 209C, for 120485..... |
| 120483 | 8212 | Quilter Guide Disengaging Sleeve, for 120482..... |
| 120484 | 8212 | Quilter Guide Disengaging Sleeve Spring for 120485..... |
| 120485 | ---- | Quilter complete, Nos. 602D, 120479, 120480 120482 and 120484..... |
| 126036 | 8678 | Driving Attachment Treadle for 126209... |
| 126205 | 8683 | " " " Bracket (left) for 126206..... |
| 126206 | ---- | Driving Attachment Treadle Bracket (left) complete, for 126209, Nos. 23258, 126205, 126207, 126208 and two wood screws 1 in. No. 14..... |
| 126207 | 8683 | Driving Attachment Treadle Bracket (left) Hook for 126206..... |
| 126208 | 8674 | Driving Attachment Treadle Bracket (left) Hook Rivet for 126206..... |
| 126209 | ---- | Driving Attachment Treadle complete for 126213, Nos. 60502, 126036 and 126206 |
| 126213 | ---- | Driving Attachment Treadle and Pitman complete for 20141, Nos. 14233 and 126209..... |
| 132590 | 8645 | Arm Oil Tube Packing (wick) for 12454... |
| 150203 | 20335 | Thread Unwinder Spool Rest Cushion (felt) for 225258..... |
| 150208 | 8685 | Driving Attachment Treadle Pitman Rod (lower) Spring for 14233..... |
| 200056E | 8676 | Bobbin Winder Stop Latch Screw for 225382..... |
| 200082D | 8676 | Bobbin Winder Tension Bracket Screw for 225382..... |
| 200299H | 8676 | Bobbin Winder Stop Latch Trip Lever Hinge Screw for 225382..... |
| 200380C | 8676 | Bobbin Winder Pulley Set Screw for 202473..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|---------|-------|--|
| 200383C | 8671 | Thread Unwinder Spool Rest Rod Set Screw for 202490..... |
| 201018C | 8671 | Thread Unwinder Spool Rest Set Screw for 225257..... |
| 201499B | 8686 | Bobbin Winder Tension Stud for 225461... |
| 201572B | 8676 | " " " " Thumb Nut for 225462..... |
| 201696J | 8671 | Thread Unwinder Thread Guide Lock Nut for 225258..... |
| 202277 | 8676 | Bobbin Winder Frame Oil Packing (wick) for 225453..... |
| 202407 | 8678 | Bobbin Winder Tension Spring for 225462. |
| 202473 | 8686 | " " Pulley with 200380C, for 225382..... |
| 202478 | 8686 | Bobbin Winder Stop Latch Trip Lever for 225382..... |
| 202490 | 20335 | Thread Unwinder Spool Stand with 200383C for 225258..... |
| 225257 | 20335 | Thread Unwinder Spool Rest with 201018C, for 225258..... |
| 225258 | 20335 | Thread Unwinder complete, for two spools or two large cones of thread, Nos. 201696J, 202490, 225257, 225324, 225326, 225388, two each 150203, 225391 and three wood screws 7/8 in. No. 12 ... |
| 225322 | 8671 | Thread Unwinder Thread Guide Rod Washer for 225324..... |
| 225324 | 20335 | Thread Unwinder Thread Guide Rod with 208E and 225322, for 225258..... |
| 225326 | 20335 | Thread Unwinder Thread Guide Position Cup for 225258..... |
| 225381 | 8686 | Bobbin Winder Spindle for 225382..... |
| 225382 | 8678 | Bobbin Winder (swinging automatic, right hand) complete, for 19131, for power table, Nos. 200056E, 200082D, 200299H, 202473, 202478, 225381, 225433, 225444, 225453 to 225456, 225458, 225462, 228026, two each 225459 and wood screws 3/4 in. No. 12 R.H.B..... |
| 225388 | 20335 | Thread Unwinder Spool Rest Rod for 225258..... |
| 225390 | 8670 | Thread Cone Holder for inverted cones, for 225258..... |
| 225391 | 20335 | Thread Unwinder Thread Guide for 225258. |
| 225433 | 8678 | Bobbin Winder and Tension Bracket Base for 225382..... |
| 225438 | 8676 | Bobbin Winder Frame Oil Well Cap for 225453..... |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|--------|-------|---|
| 225444 | 8686 | Bobbin Winder Stop Latch for 225382..... |
| 225453 | 8686 | " " Frame with 202277, 225438, for 225382..... |
| 225454 | 8686 | Bobbin Winder Frame Hinge Pin for 225382 |
| 225455 | 8676 | " " Spring for 225382... |
| 225456 | 8676 | " " " " Plunger for 225382..... |
| 225458 | 8686 | Bobbin Winder Stop Latch Thumb Lever for 225382..... |
| 225459 | 8676 | Bobbin Winder Stop Latch Thumb Lever Hinge Stud for 225382..... |
| 225459 | 8678 | Bobbin Winder Stop Latch Thumb Lever Joint Stud for 225382..... |
| 225461 | 8686 | Bobbin Winder Tension Bracket with 201499B, for 225462..... |
| 225462 | ---- | Bobbin Winder Tension Bracket complete for 225382, Nos. 201572B, 202407, 225461 and two 2102..... |
| 228026 | 8676 | Bobbin Winder Tension Bracket Screw Washer for 225382..... |

Genuine Singer Needles should be used in Singer Machines. These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO." 1


Needles in Containers marked "For Singer Machines" are not Singer made needles. 2

Genuine Singer Needles should be used
in Singer Machines.
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO." 1


Needles in Containers marked
"For Singer Machines"
are not Singer made needles. 2

PLATE 786—FULL SIZE


19338

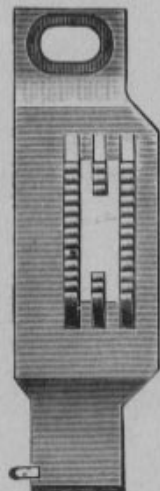

19287

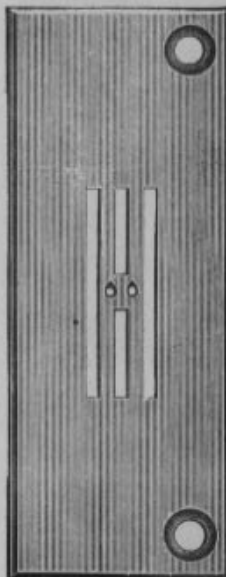

19288

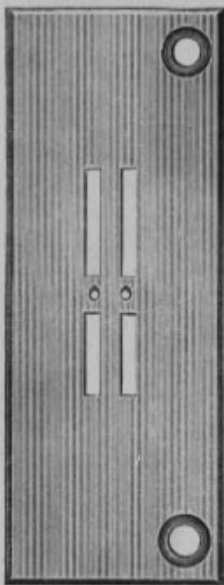

19339



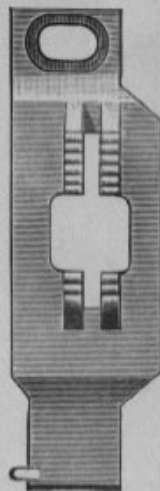


PLATE 788—FULL SIZE


19274

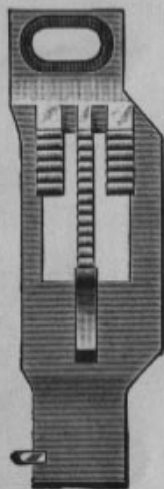

19283

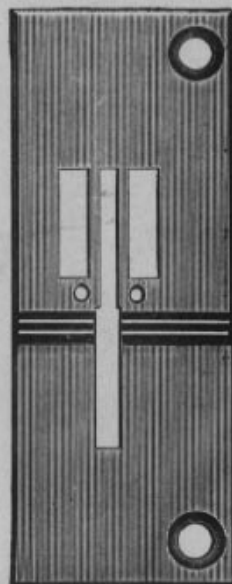

19289

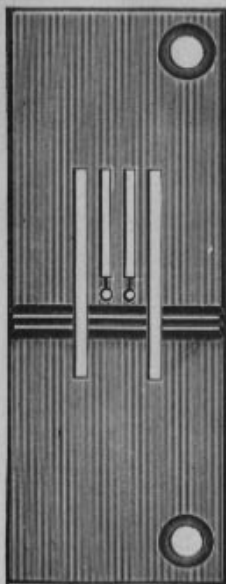

19344



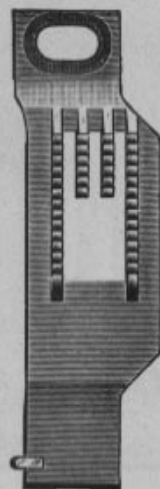


PLATE 789—FULL SIZE


19343

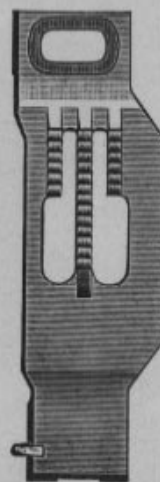

19290

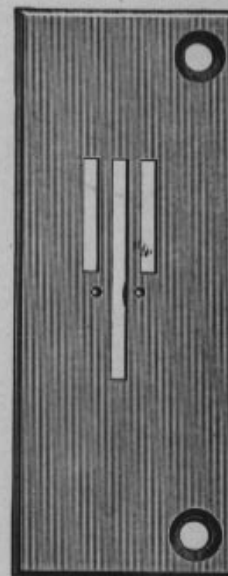

19291

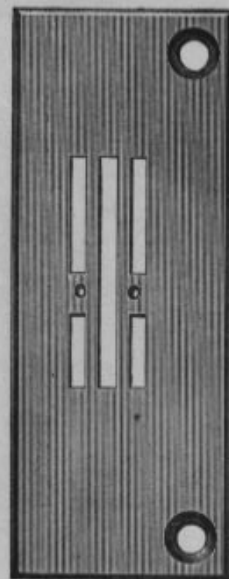

19341

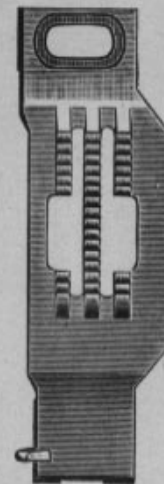


PLATE 797—FULL SIZE

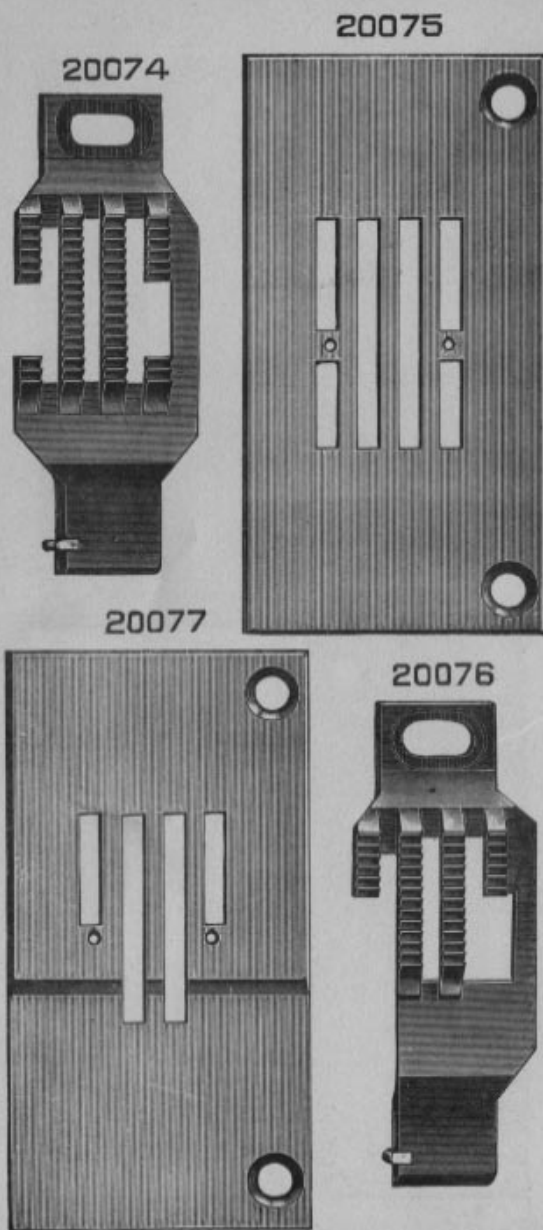


PLATE 799—FULL SIZE

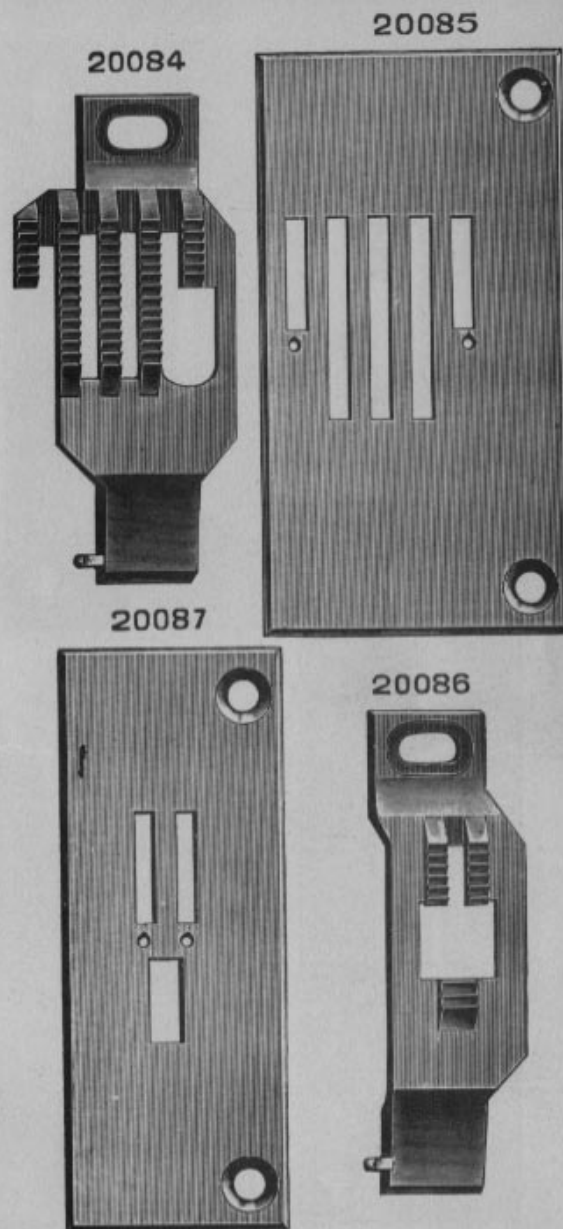


PLATE 800—FULL SIZE

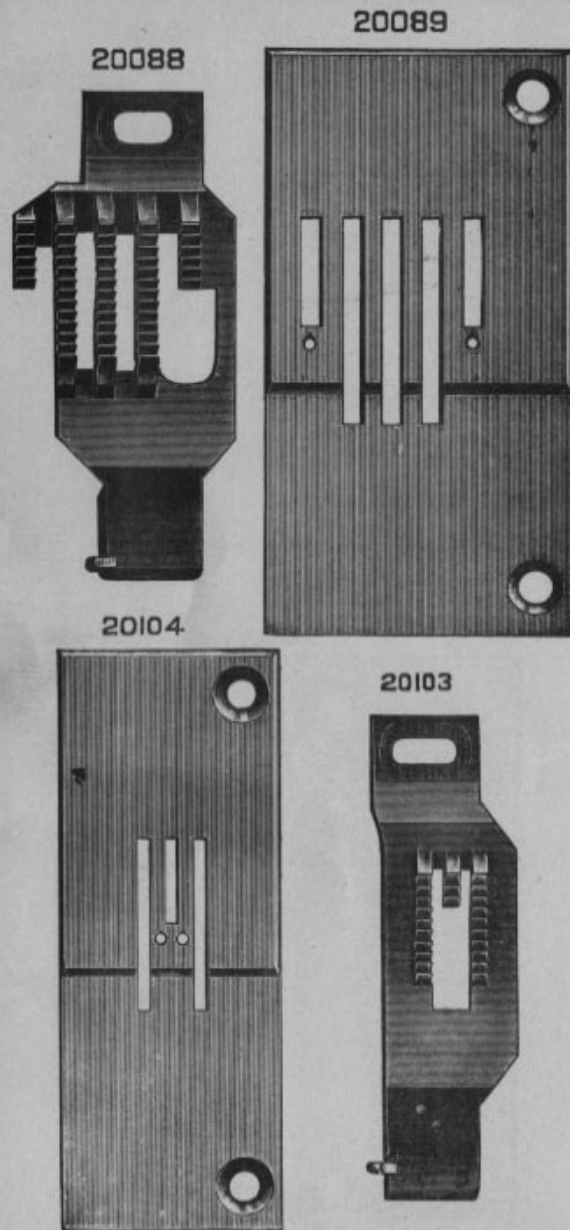


PLATE 819—ONE-FOURTH SIZE


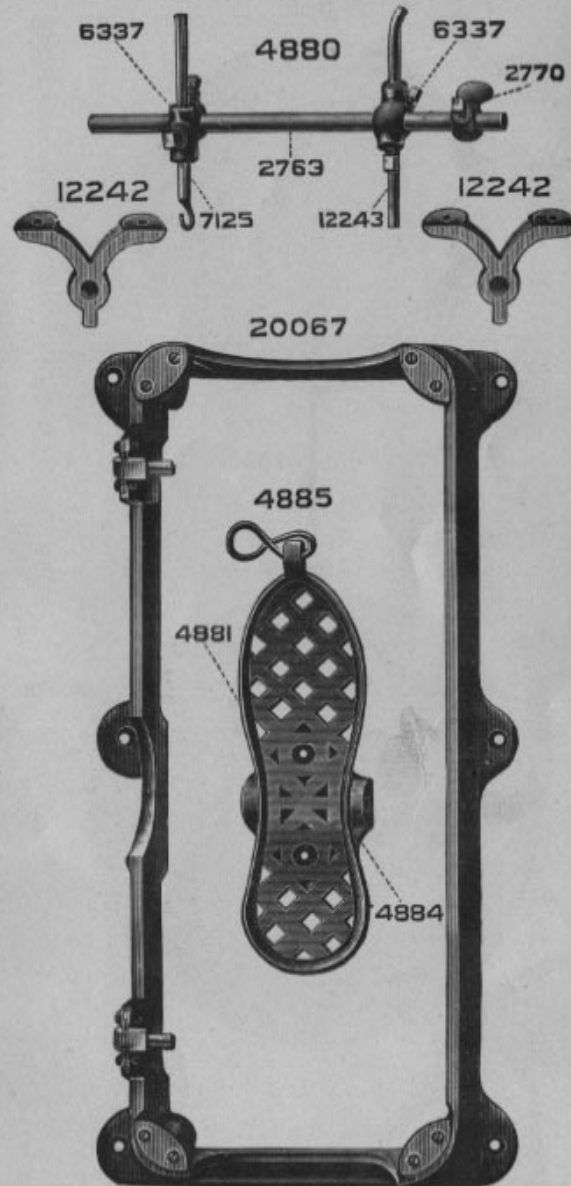


PLATE 989—ONE-FOURTH SIZE


26063

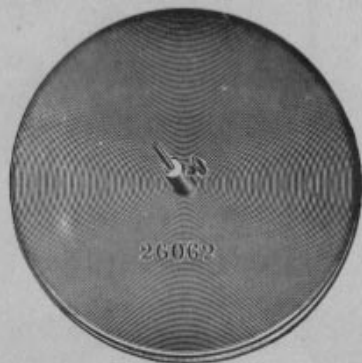

26062

---26061

26074

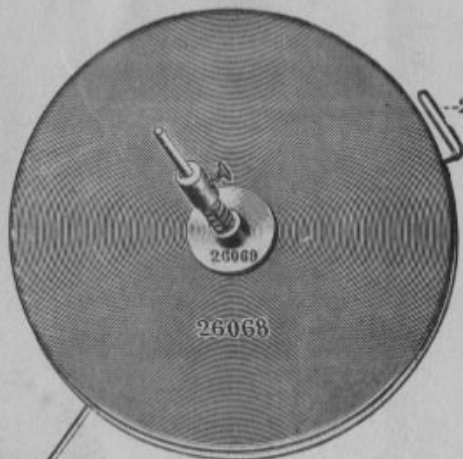


--26072

26068


---26066

PLATE 1003—FULL SIZE


35542

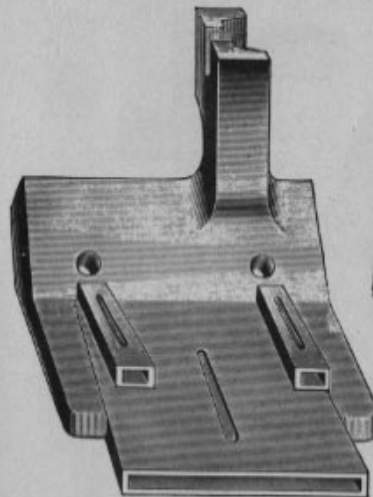

36296

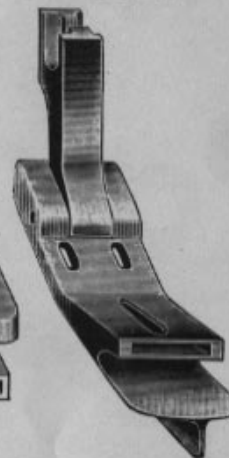

35542

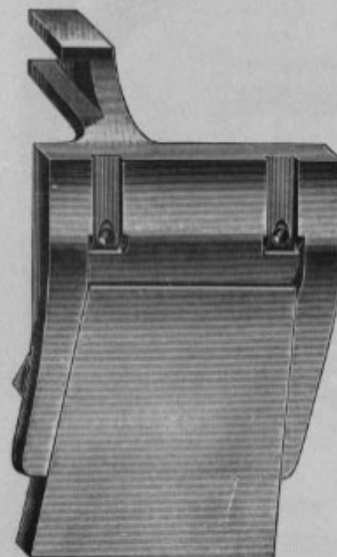

36296

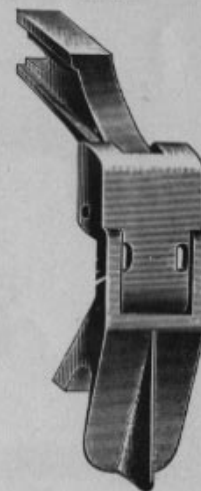


PLATE 1144—FULL SIZE

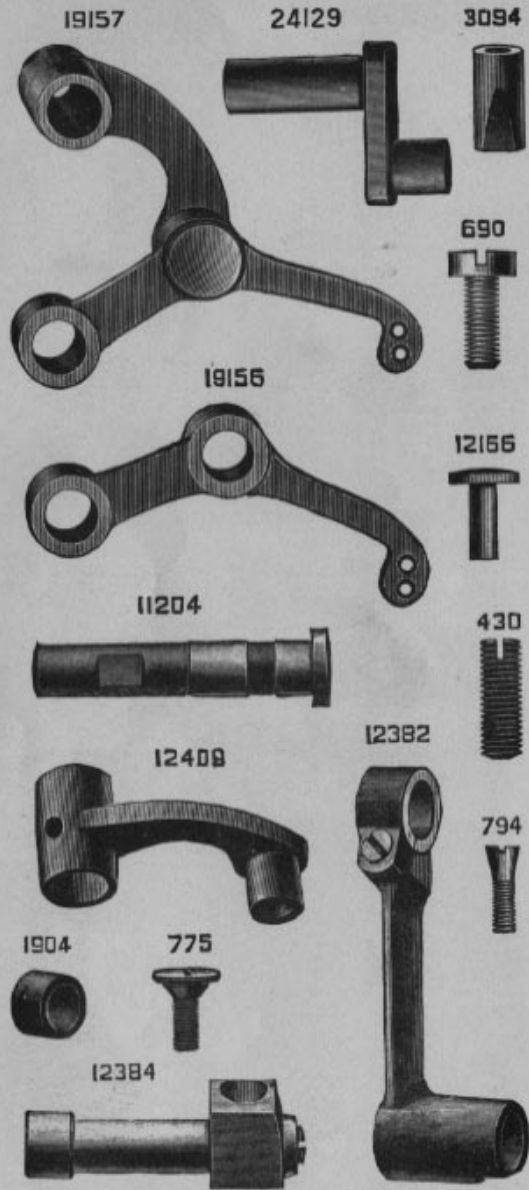


PLATE 1146—FULL SIZE



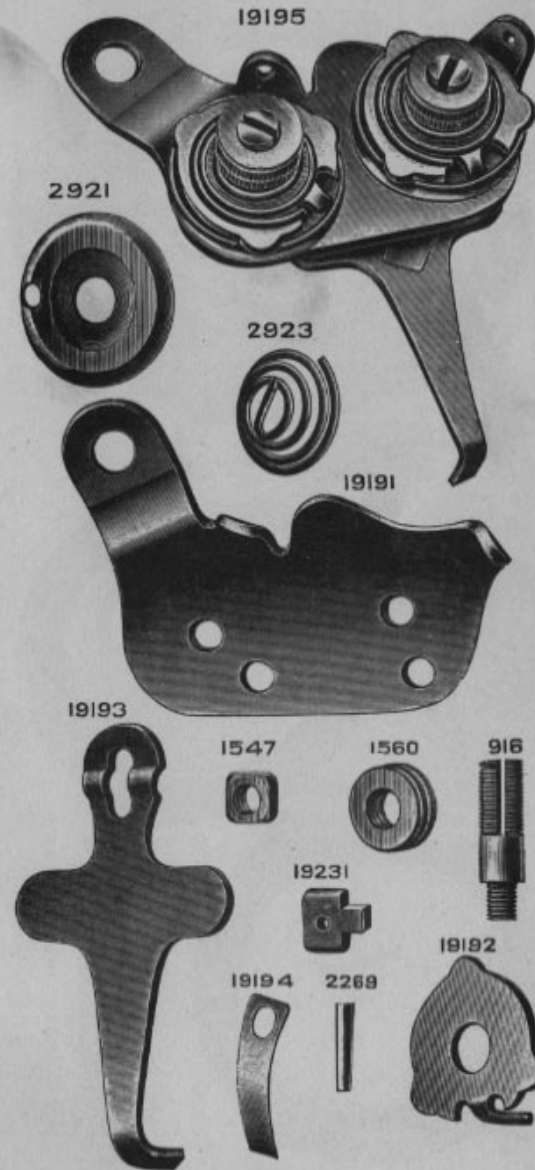


PLATE 1213—FULL SIZE


19323

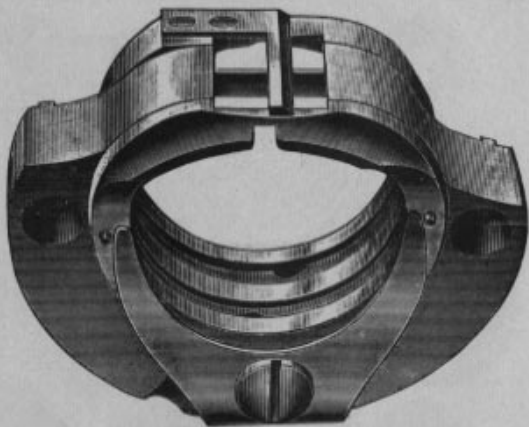


19318

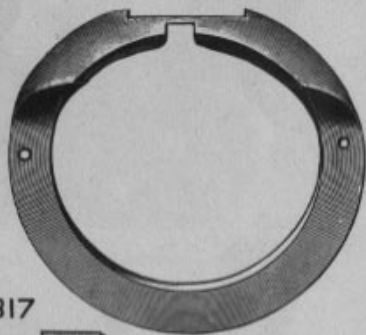

19309

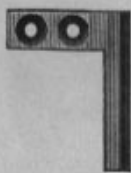

19317

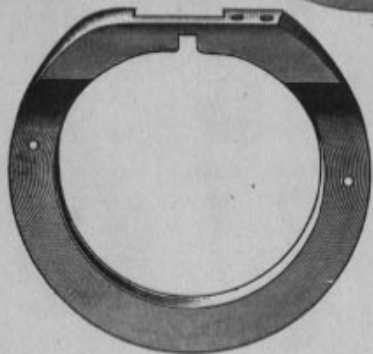


19316




PLATE 1224—FULL SIZE


20050

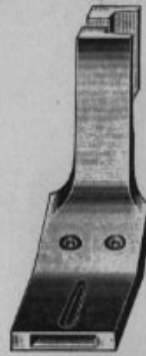

20049

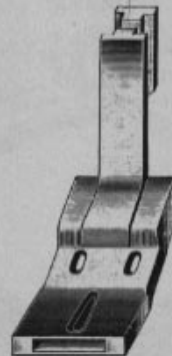

26408

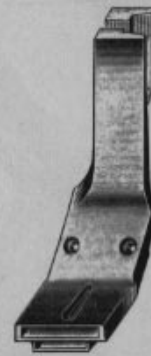

26410




20052




20053



26404

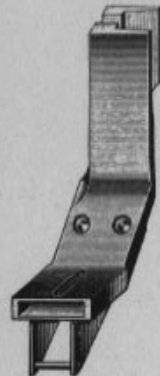

26406

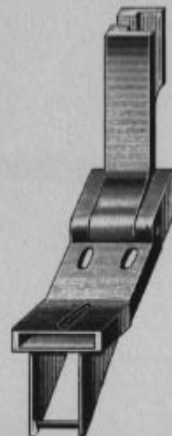


26407



PLATE 1241—FULL SIZE

24493

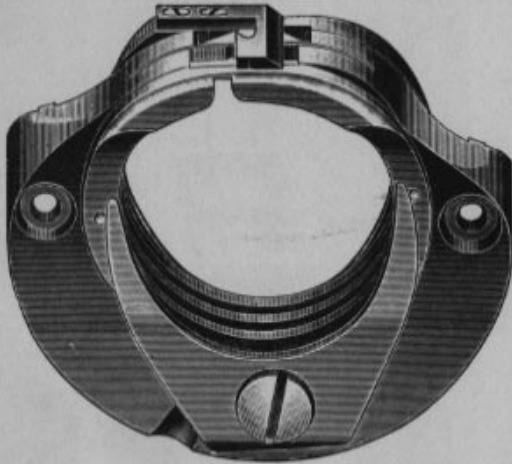

1053
Y

24492


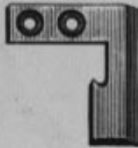


PLATE 1245—FULL SIZE

35560



7308

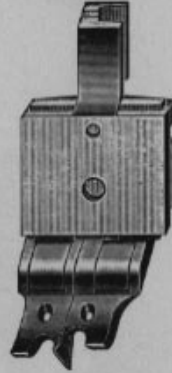


7309



7310



35561

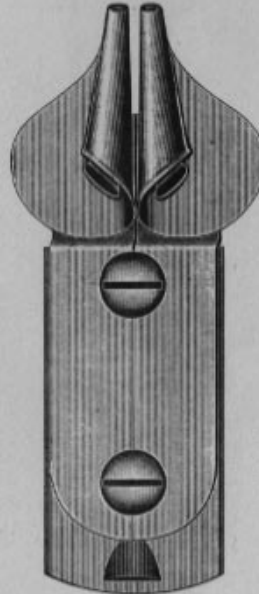

35558



35559



35556



35557



106



220



7311



2532



PLATE 1248—FULL SIZE



35691



PLATE 1249—FULL SIZE

35695


35694

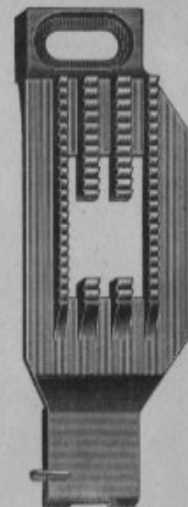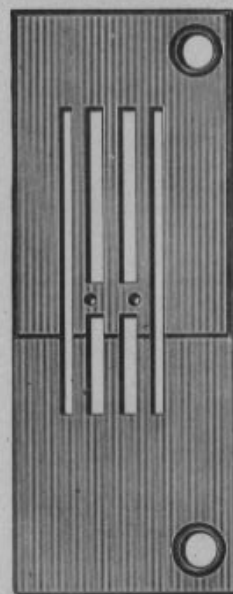

35696

35698

35697

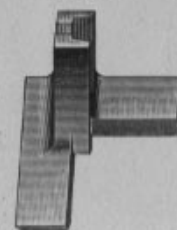

35699

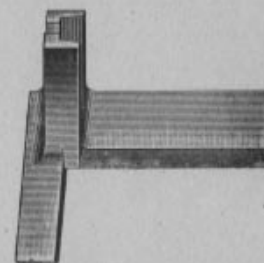


PLATE 1251—FULL SIZE

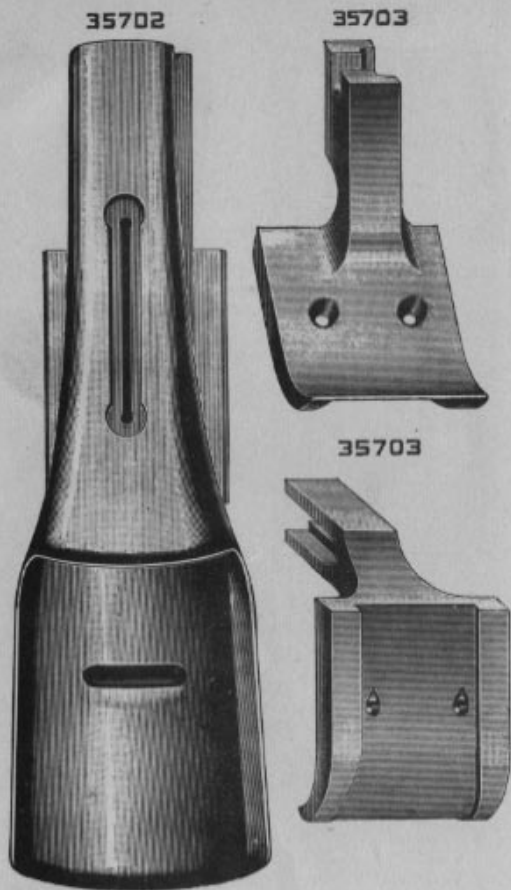


PLATE 1254—FULL SIZE

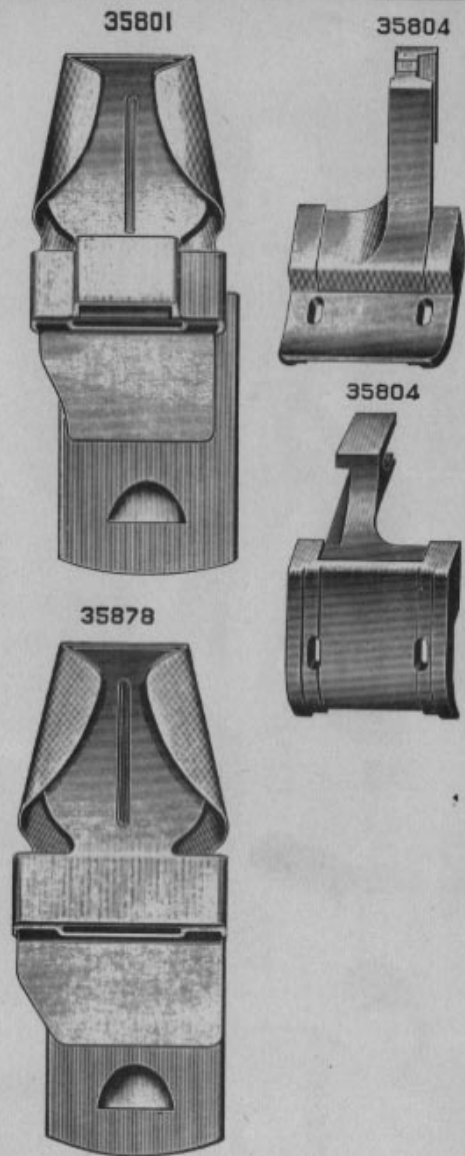


PLATE 1255—FULL SIZE

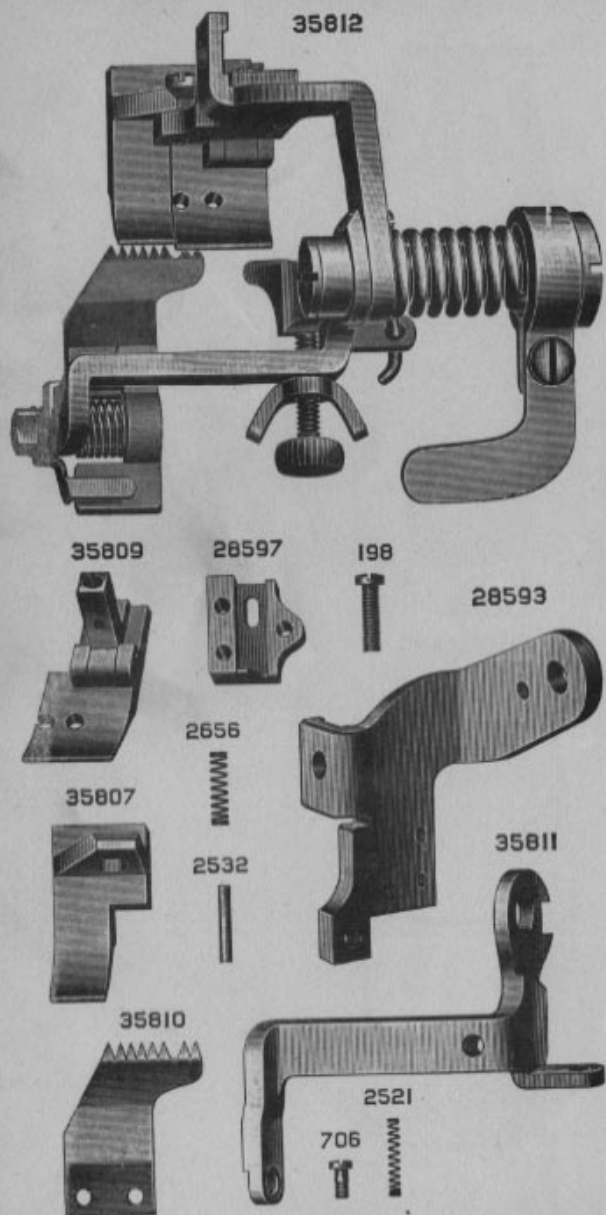


PLATE 1256—FULL SIZE


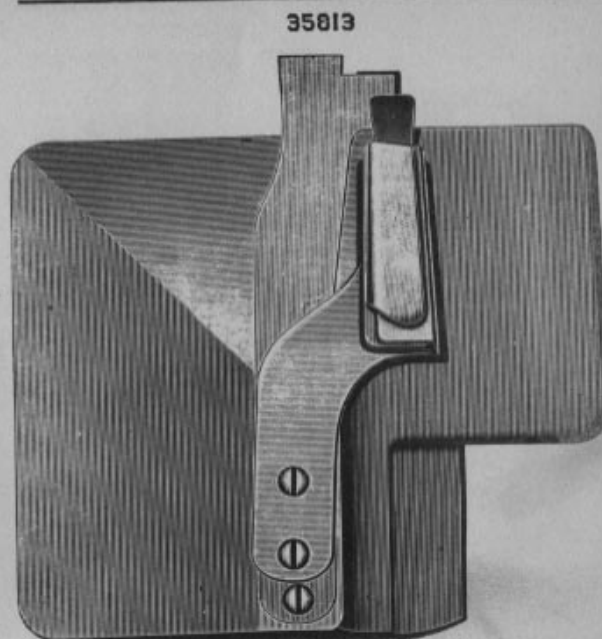


PLATE 1328—FULL SIZE

26725

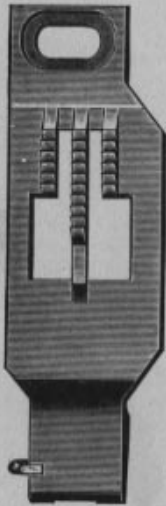

26726


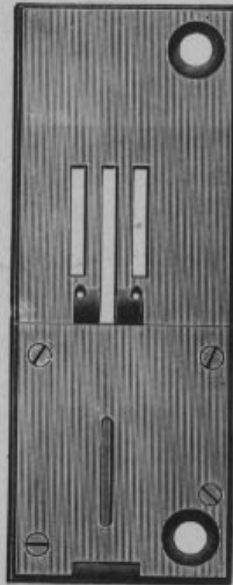


PLATE 2059—FULL SIZE

35287

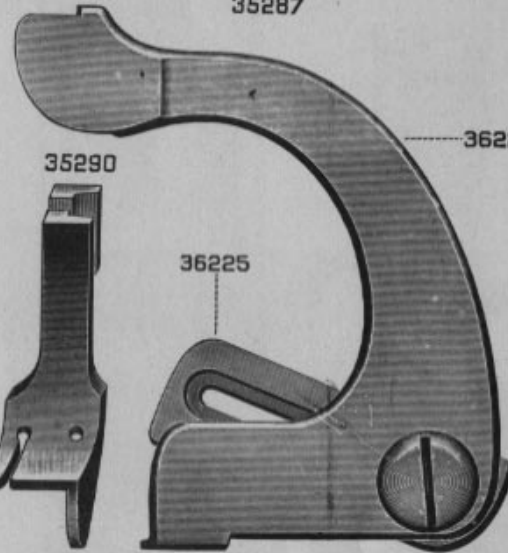

36224

35290




36225



50094

35289

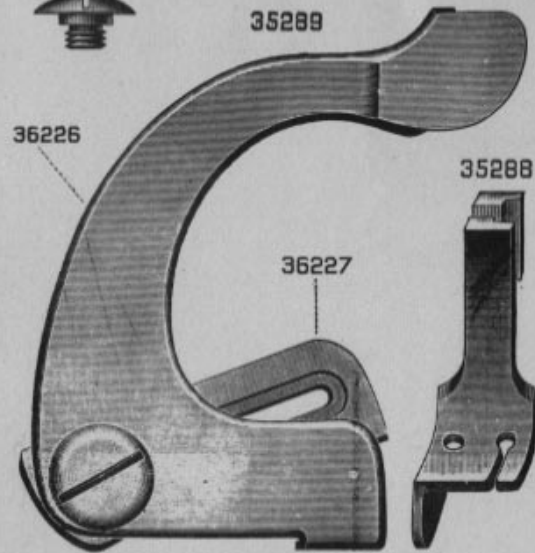

36226

36227

35288



PLATE 2069—FULL SIZE

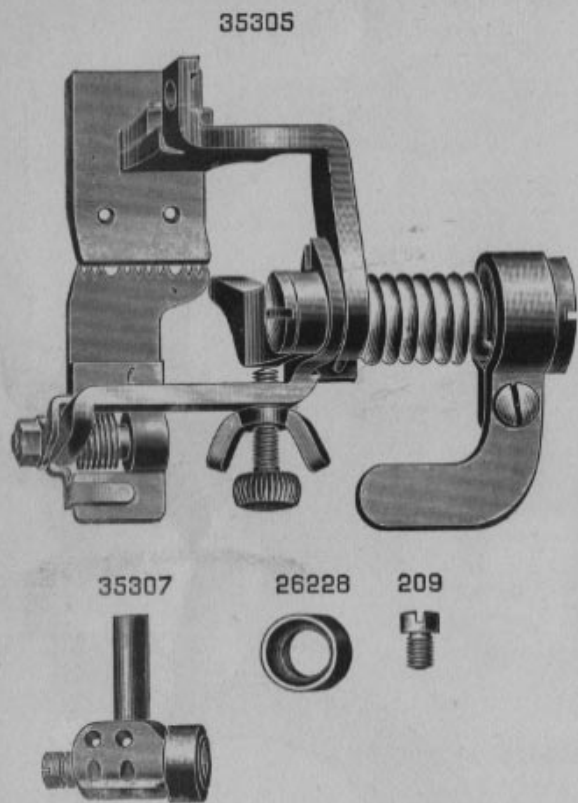


PLATE 2070—FULL SIZE



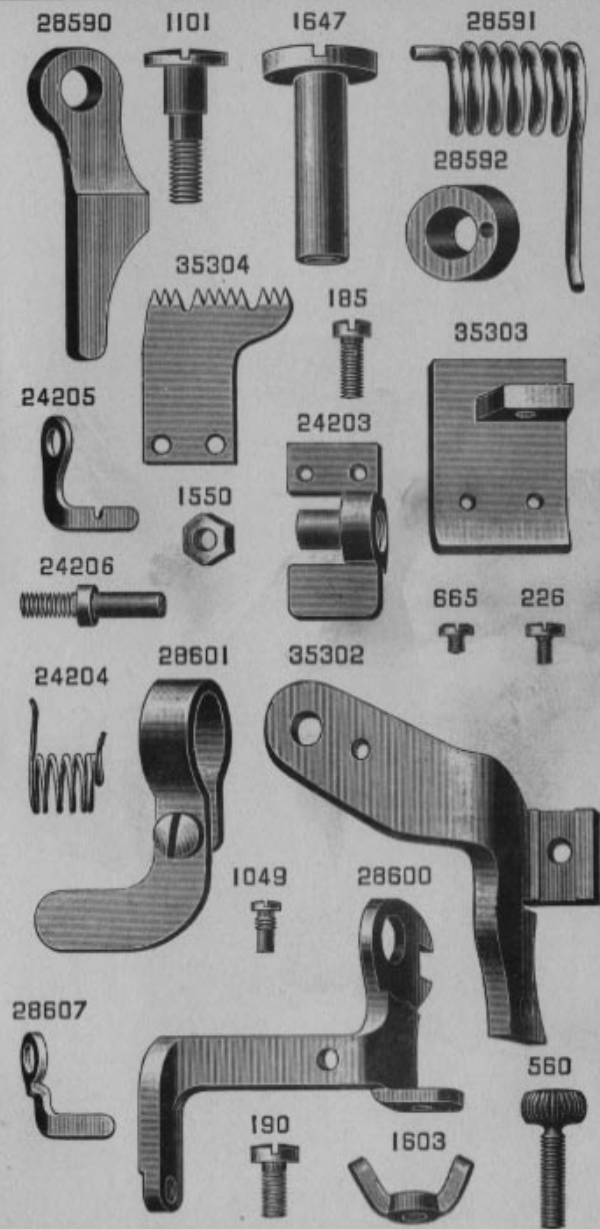


PLATE 2071—FULL SIZE


35308

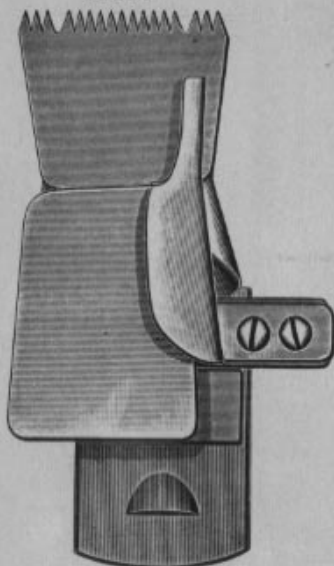

35309

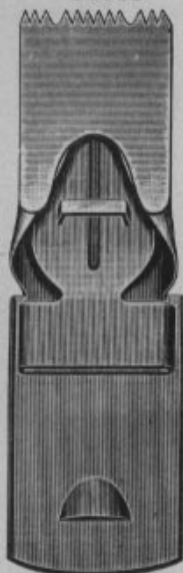

35310

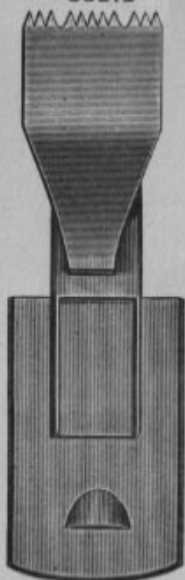

26565


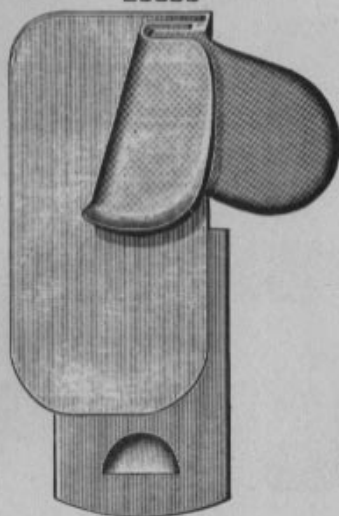


PLATE 2072—FULL SIZE

35311

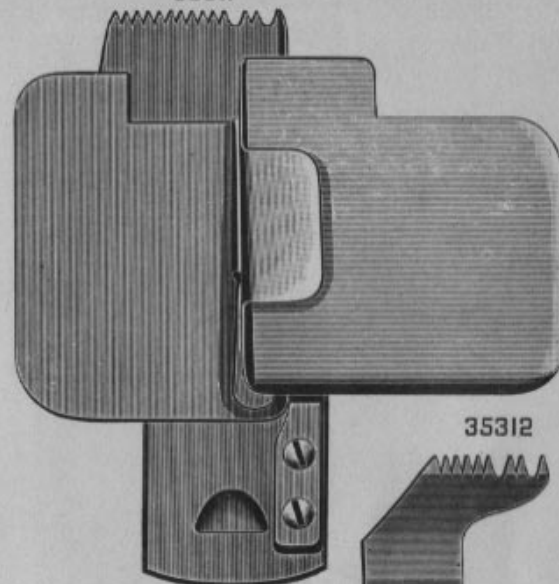

35312


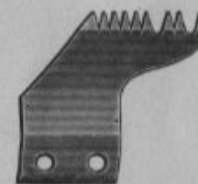


PLATE 2077—FULL SIZE

20279

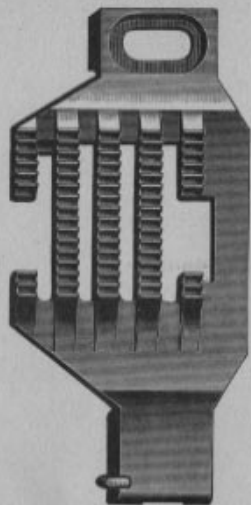


20280



PLATE 2082—FULL SIZE

43964

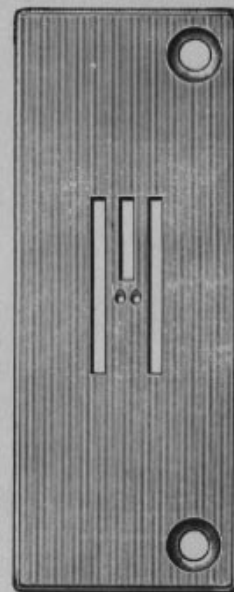

43965


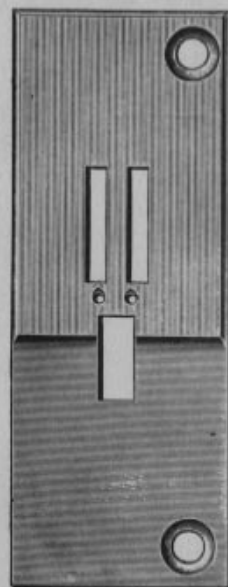


PLATE 2086—FULL SIZE

36310



36311

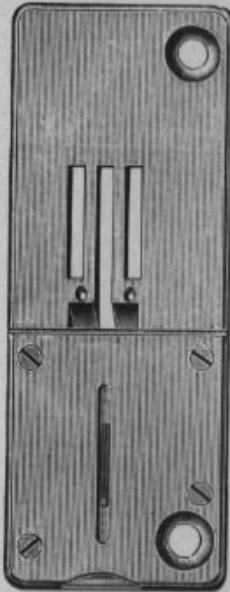

36313



36312


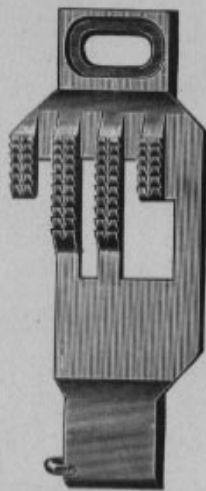


PLATE 2660—FULL SIZE

28934

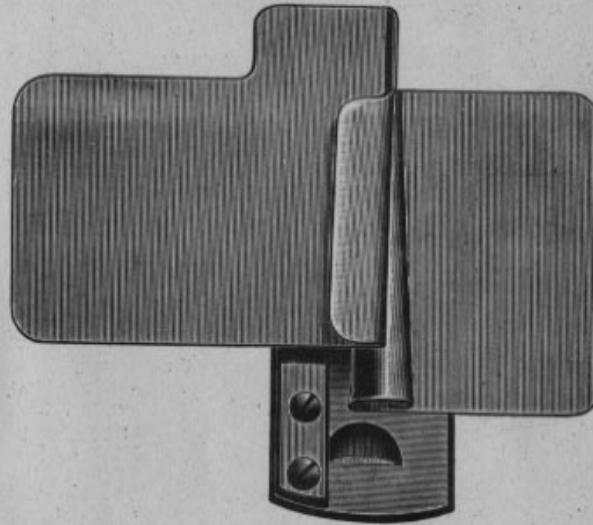

26965

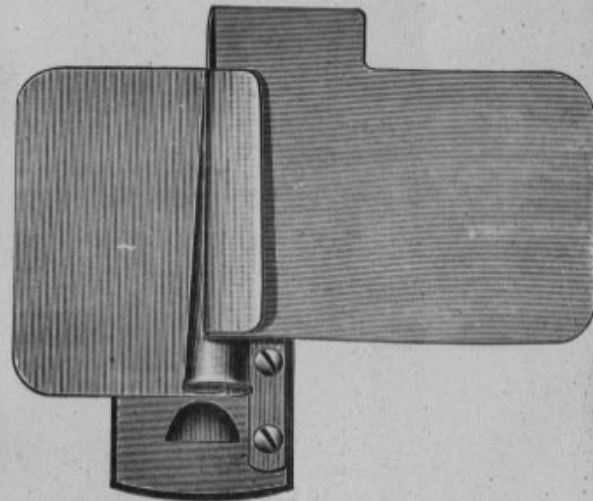


PLATE 2662—FULL SIZE

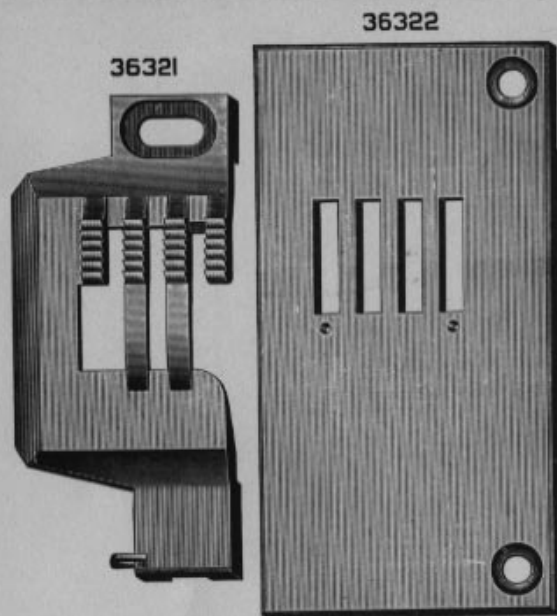


PLATE 2663—FULL SIZE

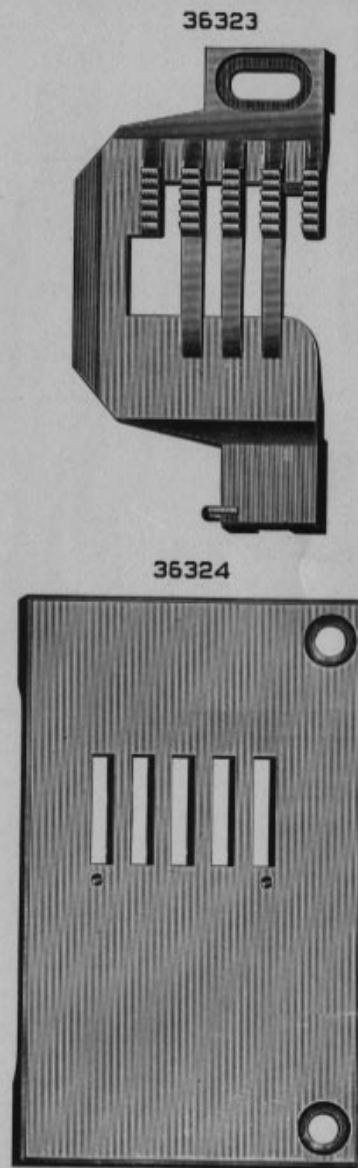


PLATE 2670—FULL SIZE

28995



35071




35111



PLATE 2662—FULL SIZE

36322

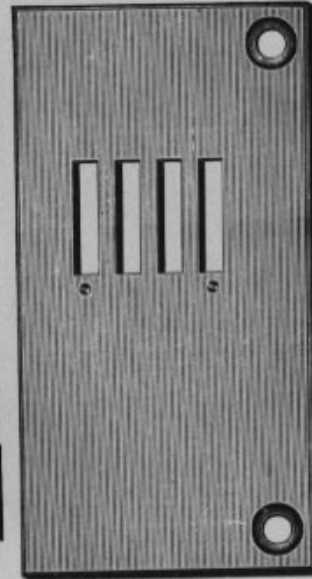

36321


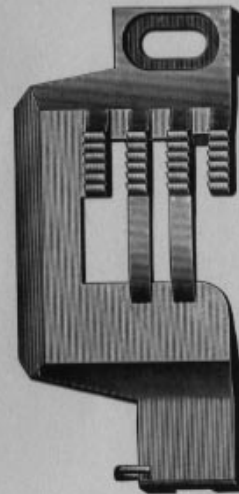


PLATE 2660—FULL SIZE

28934

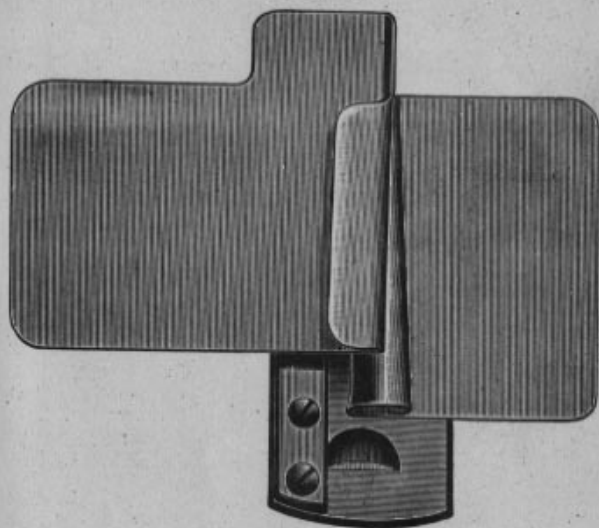

26965


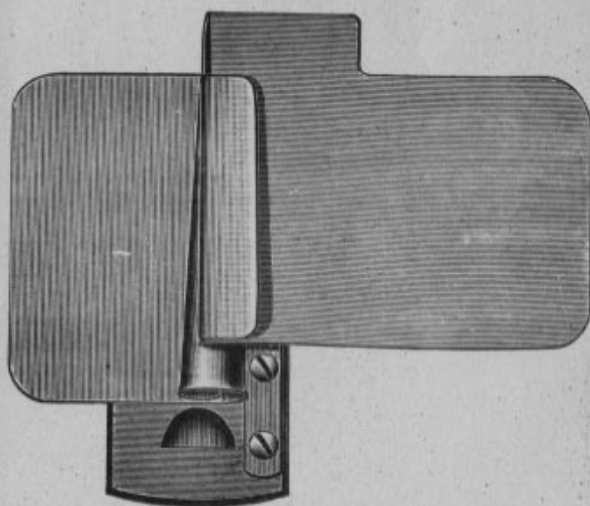


PLATE 2679—FULL SIZE


35081



35259

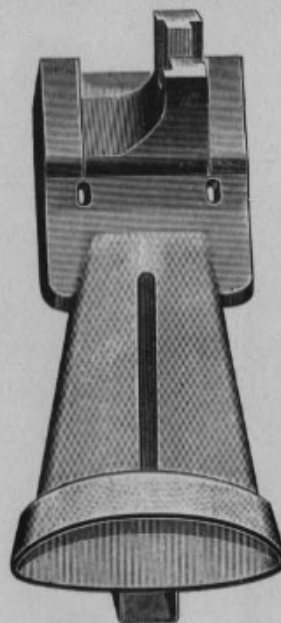

35080

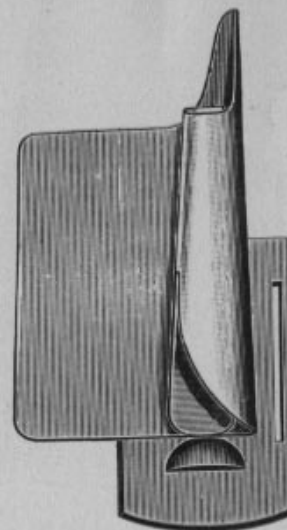


26519




PLATE 2681—FULL SIZE

35083

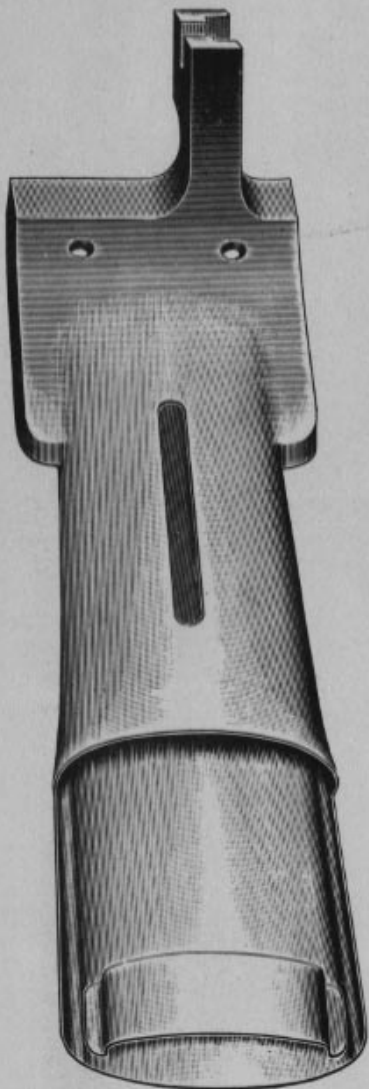

35102

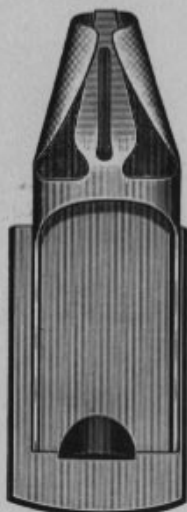


35103



PLATE 2686—FULL SIZE

35133

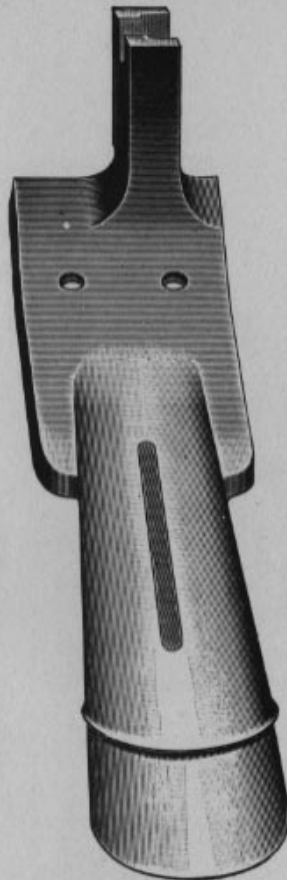

35133


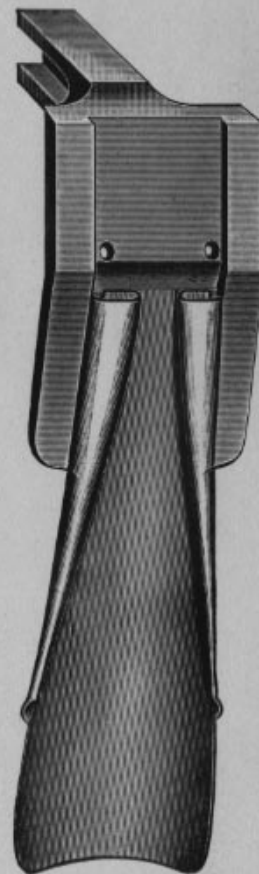


PLATE 5646—FULL SIZE

35194



26887

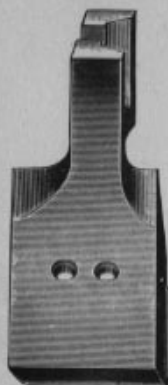

35194



26887

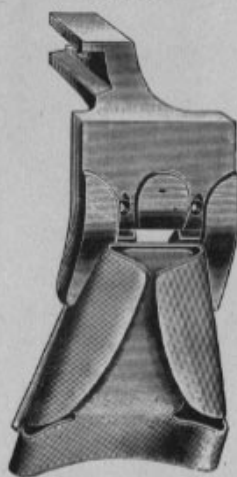


PLATE 5772—FULL SIZE

199




19357




19358



19356

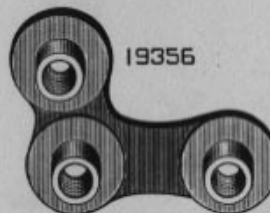

19359

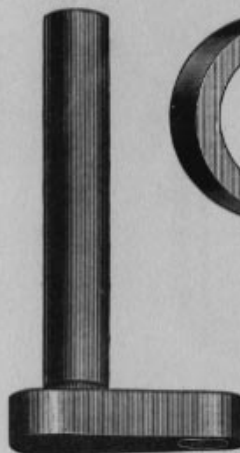

19362



2049



4855



1518



375



PLATE 5773—FULL SIZE

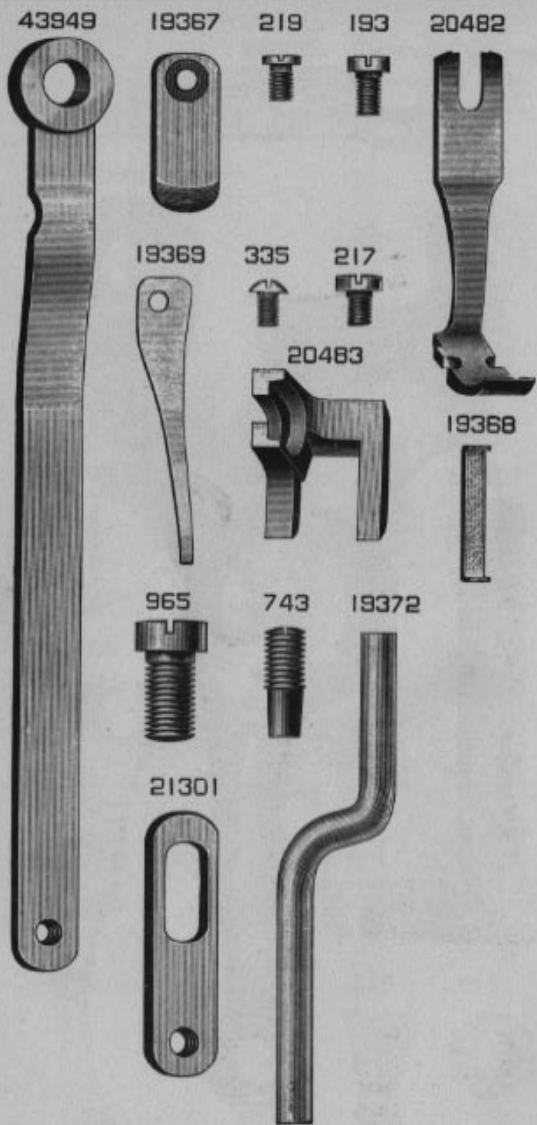


PLATE 5794—FULL SIZE



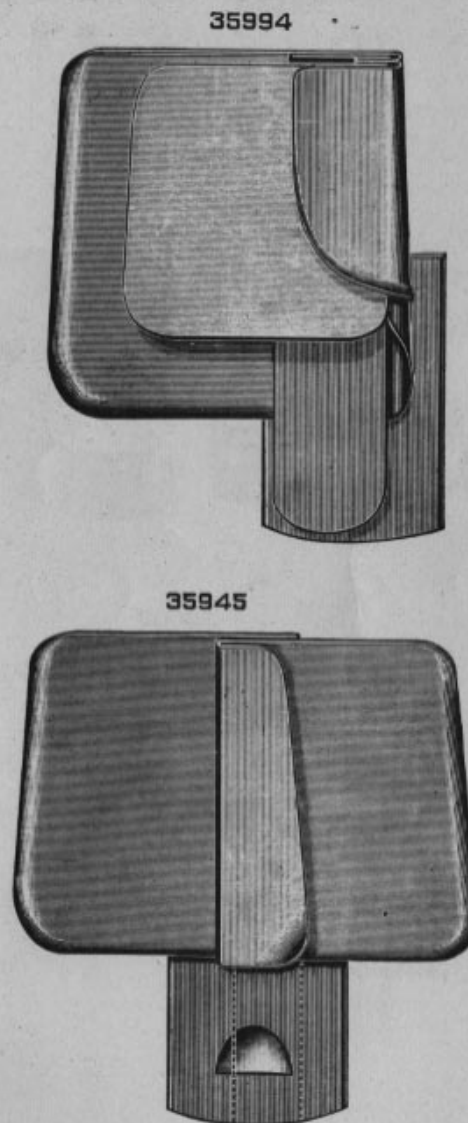


PLATE 5795—FULL SIZE

36004

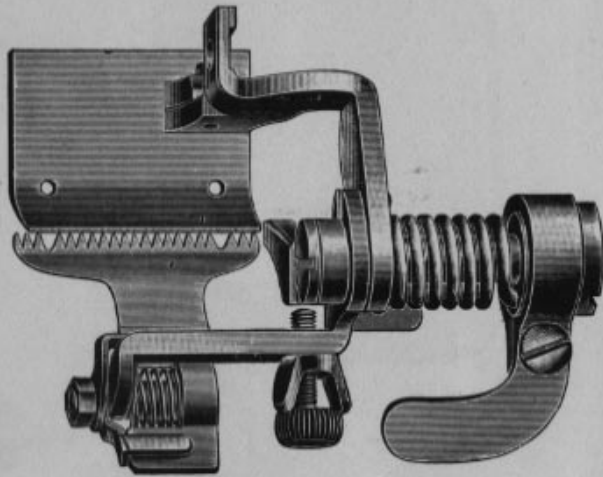

36003

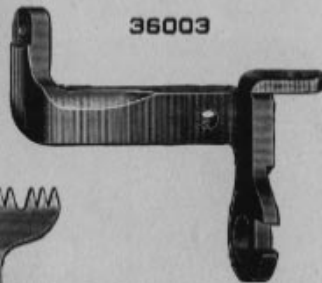

36002


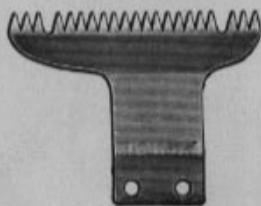


PLATE 5796—FULL SIZE

36078



36078

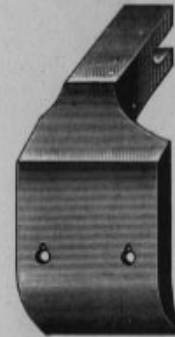


36077




PLATE 5797—FULL SIZE

35887

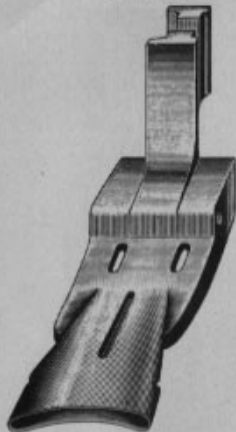

36089

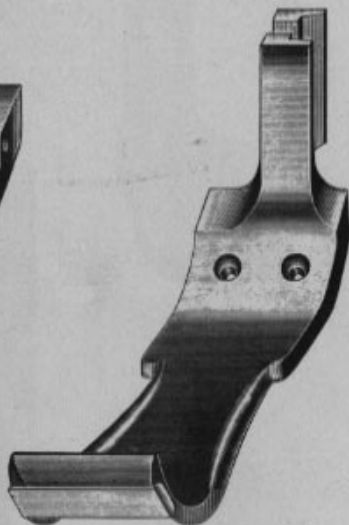

35887




36089



PLATE 5798—FULL SIZE

36297

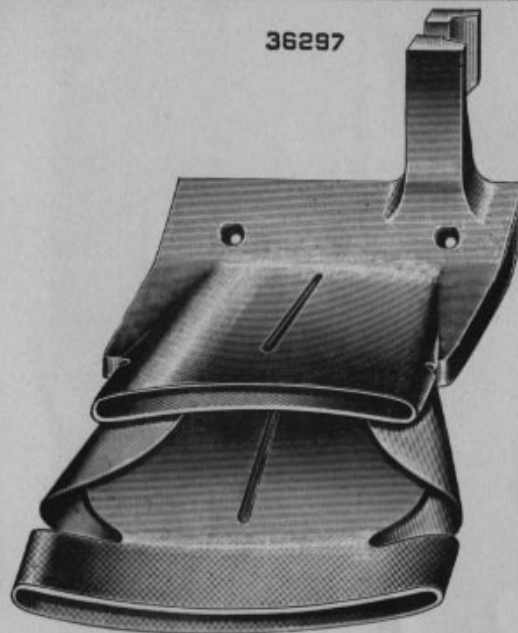

36297


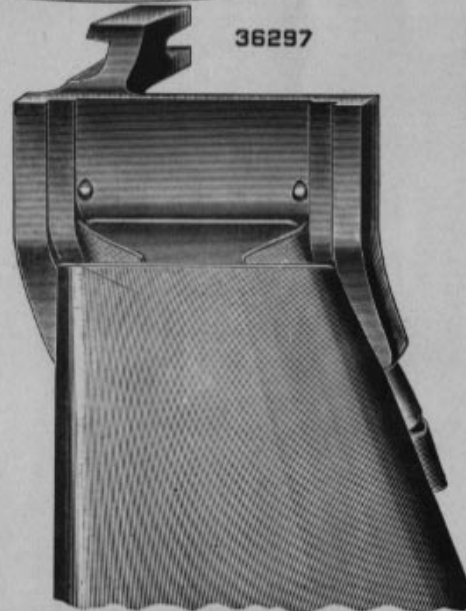


PLATE 5800—FULL SIZE

36314

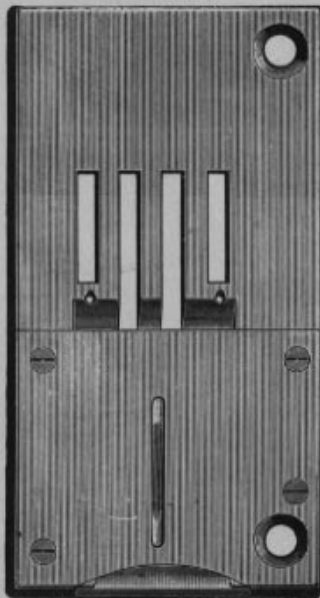

36315


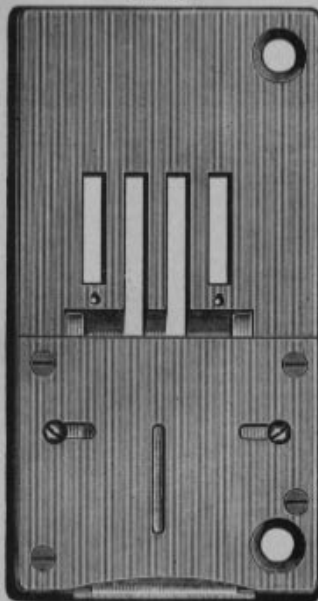


PLATE 5802—FULL SIZE

36317

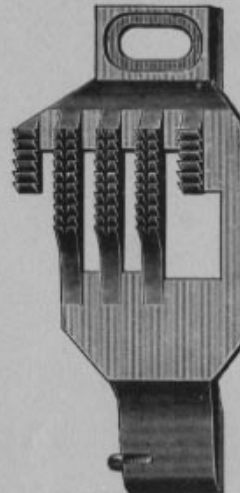

36318

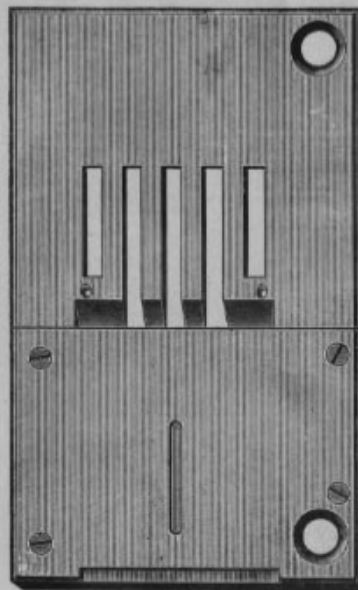


PLATE 8212—FULL SIZE

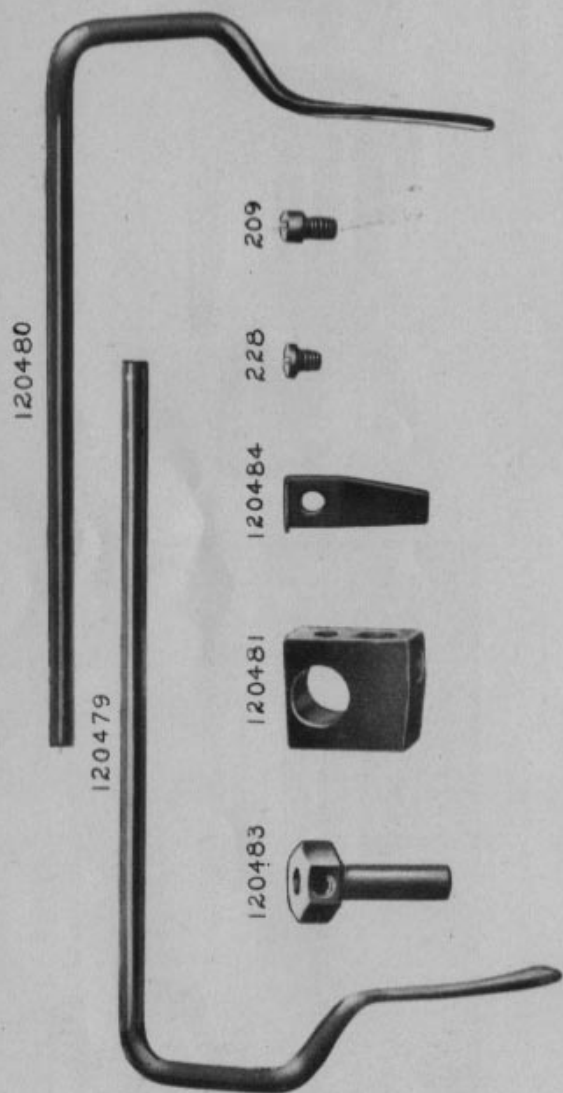


PLATE 8645—FULL SIZE



PLATE 8646-FULL SIZE

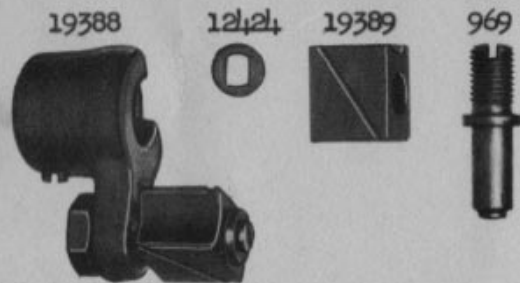
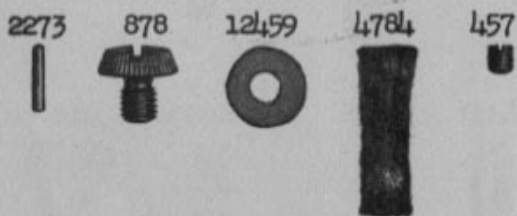


PLATE 8647-FULL SIZE






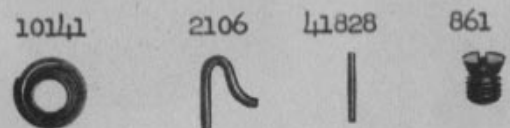


PLATE 8648-ONE-HALF SIZE


20197

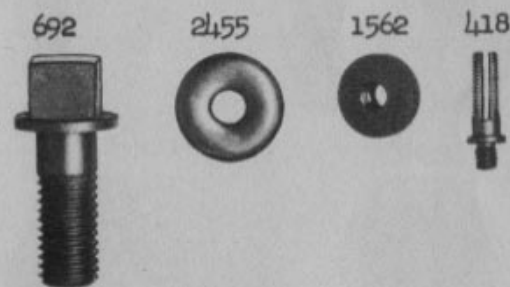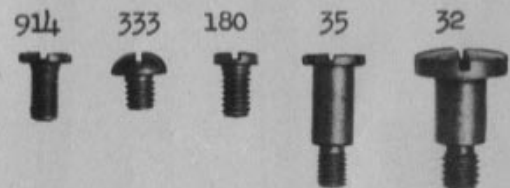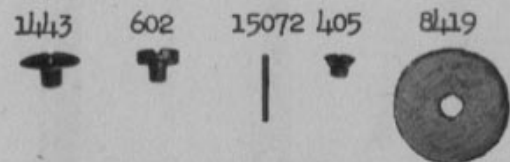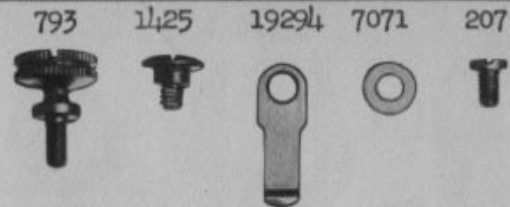

12429

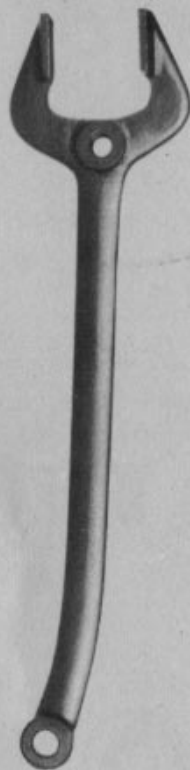

43976

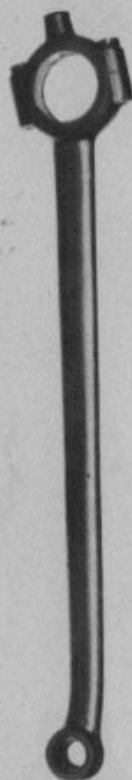

15063



2415

12193

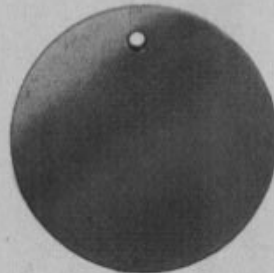


PLATE 8649-ONE-HALF SIZE


12357



3039



19305

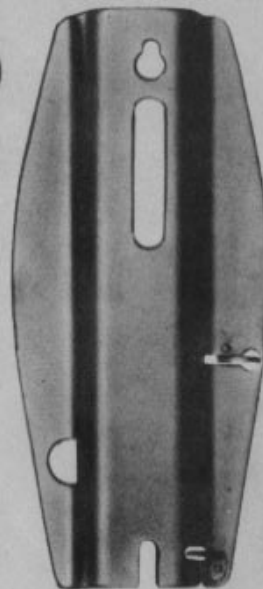

19120



19275



19386




20188



12388



12480

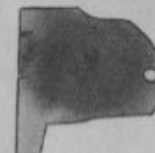

43944



19111

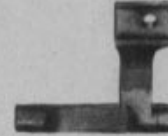


PLATE 8650-FULL SIZE

19171



19137



19172



19326



19325



907



19147



651



134



12398



12329



175



691



62527



PLATE 8651-FULL SIZE

19131



 
19310



19311



591



592



19312



19136



19149



19324




19313





PLATE 8652-FULL SIZE

20375


20373

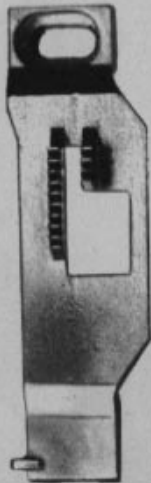

16 Teeth=1 Inch
20384

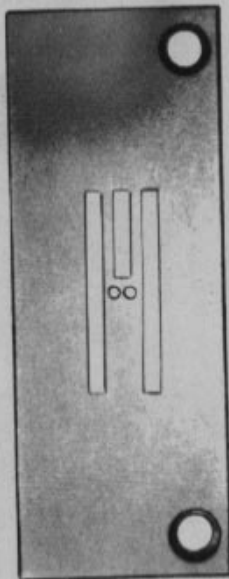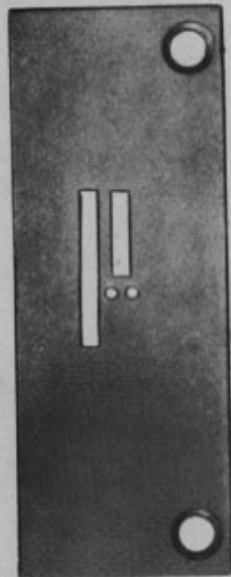

20383

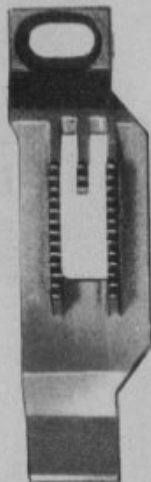


16 Teeth=1 Inch

PLATE 8653-FULL SIZE

20069

20068

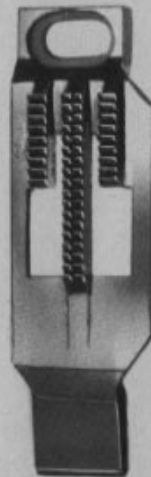


16 Teeth=1 Inch




191

20073

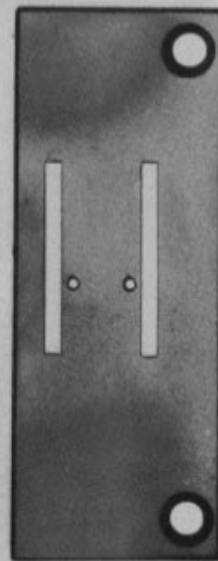

20072

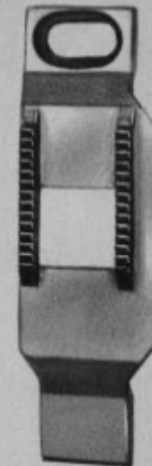


16 Teeth=1 Inch



PLATE 8654-FULL SIZE

20079


20316

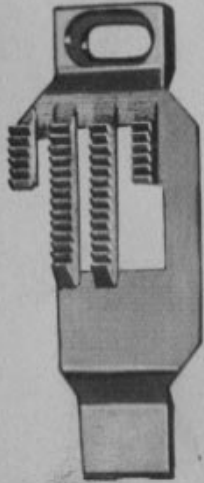

16 Teeth=1 Inch
36496

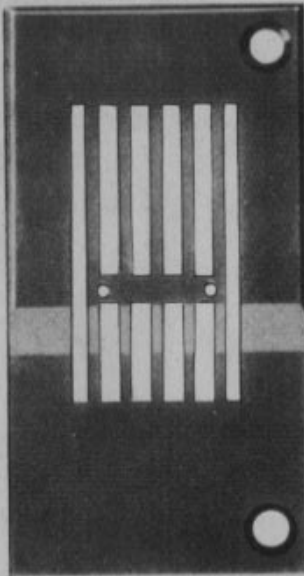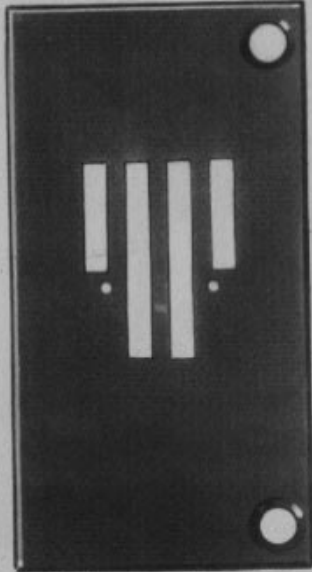

36494

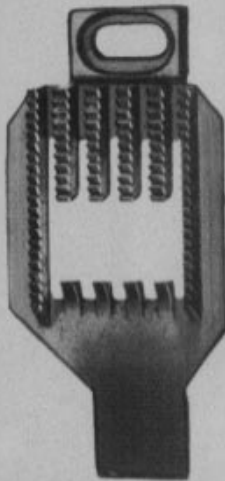


16 Teeth=1 Inch


PLATE 8655-FULL SIZE

36607

36606

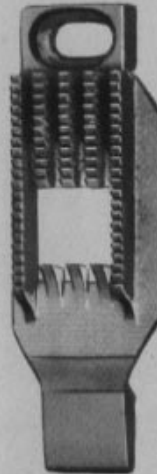

16 Teeth=1 Inch

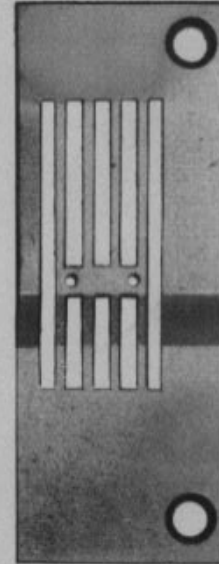

36495



36497



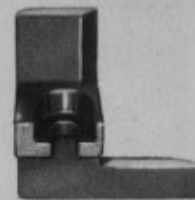


PLATE 8656-FULL SIZE


19190

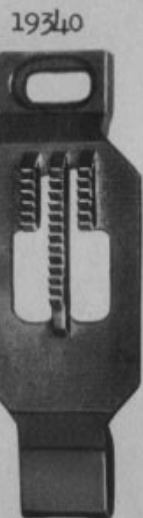

16 Teeth=1 Inch

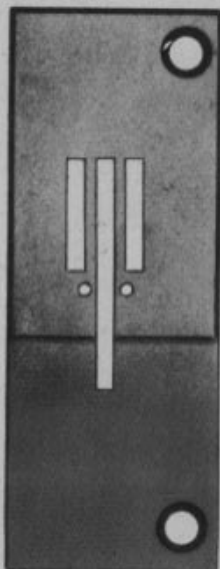


24462

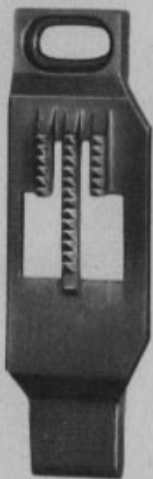

16 Teeth=1 Inch

26383

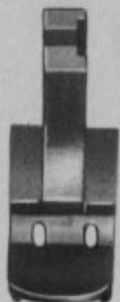

35196


 



PLATE 8657-FULL SIZE

20196

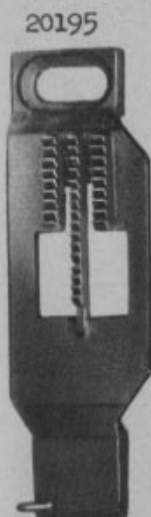


16 Teeth=1 Inch

20388

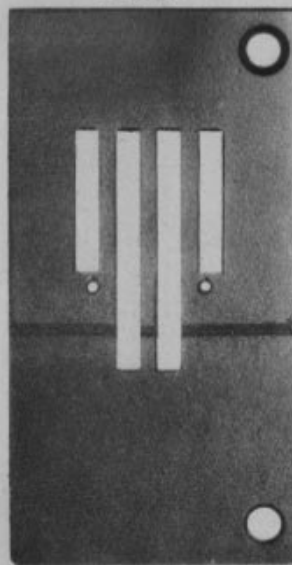


20387

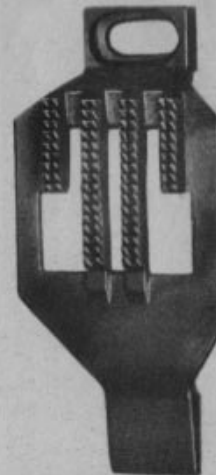

16 Teeth=1 Inch

PLATE 8658-FULL SIZE



19479

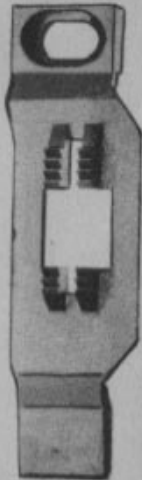

16 Teeth=1 Inch

24450

19481

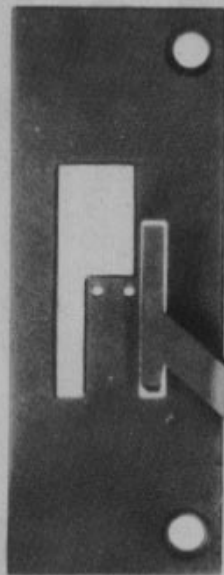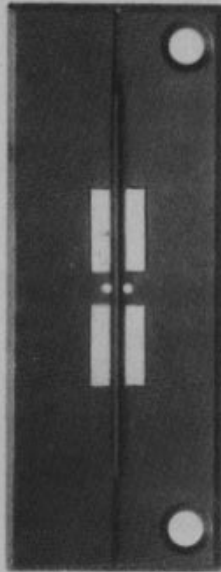

16 Teeth=1 Inch


24449



PLATE 8659-FULL SIZE


20081

20294

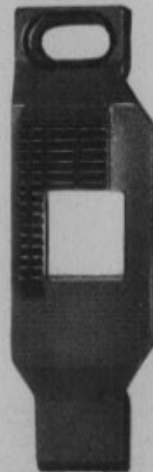

16 Teeth=1 Inch

19484

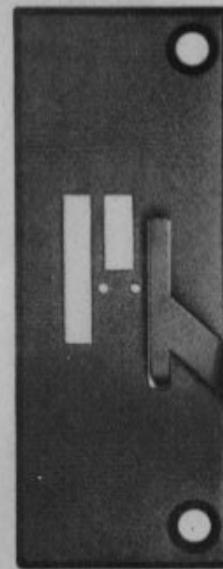


16 Teeth=1 Inch

19482



PLATE 8660-FULL SIZE

36543

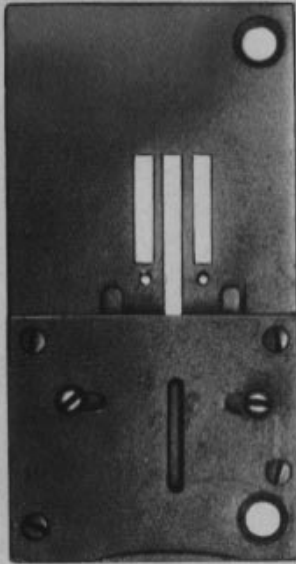

36316


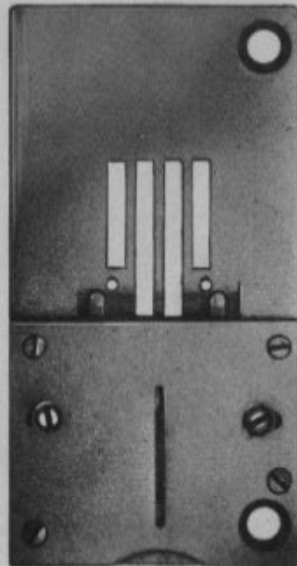



PLATE 8661-FULL SIZE

120193

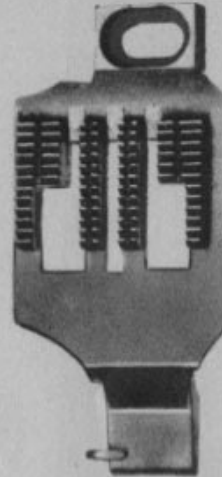


16 Teeth=1 Inch

120196

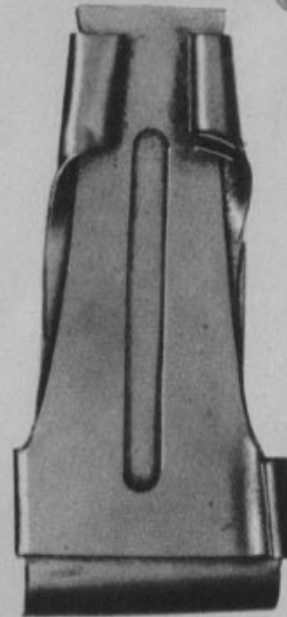

120195

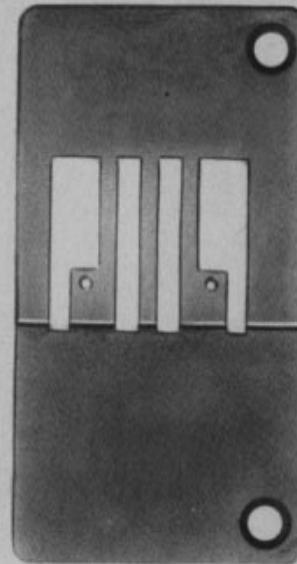

120194


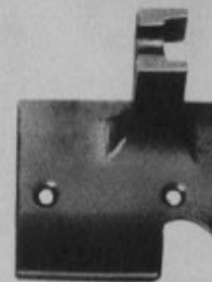



PLATE 8662-FULL SIZE

20317

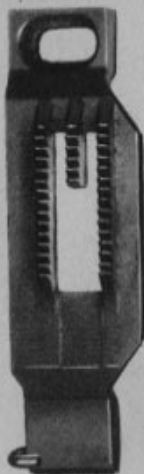


16 Teeth=1 Inch

20318

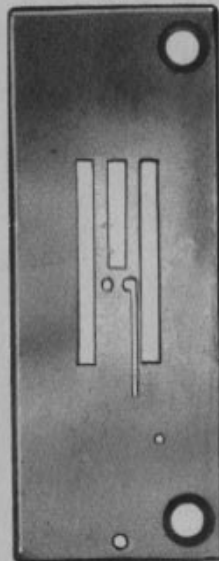

26489

 

26488



26487



6267



25888



102



2653



240




PLATE 8663-FULL SIZE

35814




16 Teeth=1 Inch

35815

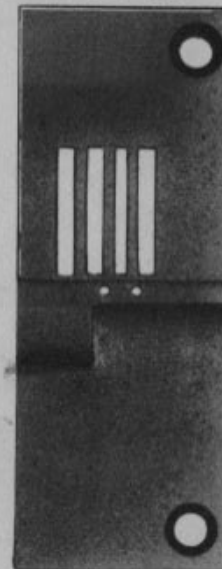

13211

 

736



35925



50053



55



26073


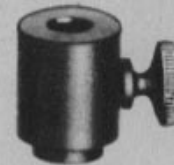


PLATE 8664-ONE-HALF SIZE

19139



19381

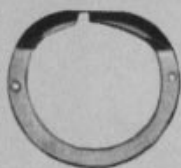

2533



29633



24013



 
12391




18014




12139



11167

 

20023

 

3043



52016



PLATE 8665-FULL SIZE

19128



20374



19480



19483




20171



20046



20302

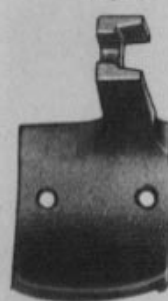

120157


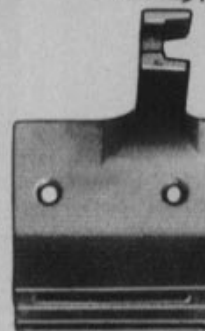


PLATE 8666-FULL SIZE

 26411




28802



26416



26574

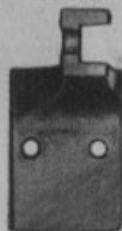

26415



26418



26414



35362




35835



PLATE 8667-FULL SIZE

 
20045




26276



 20131




20170

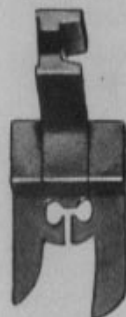


18055



44187

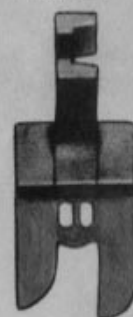

43895

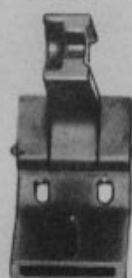

26231



43975



PLATE 8668-FULL SIZE

19216



26279




26280




26281



26282

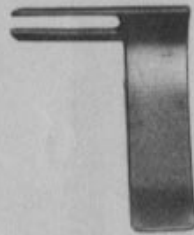

26283

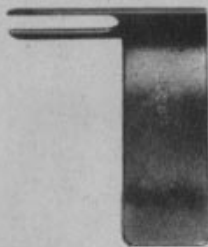

25967



PLATE 8669-ONE-HALF SIZE

19360



19365



24589



24590



27538



26325




27302



26064



27540

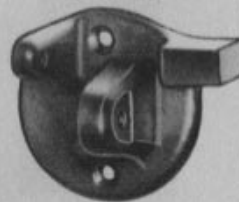


27541




PLATE 8670-ONE-HALF SIZE

20395

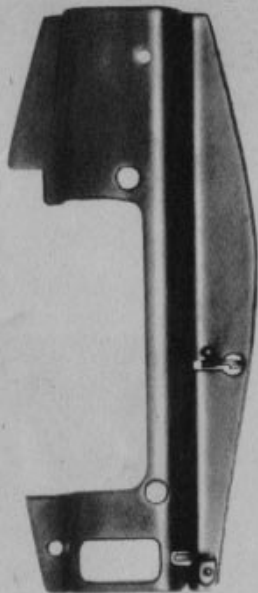

26764

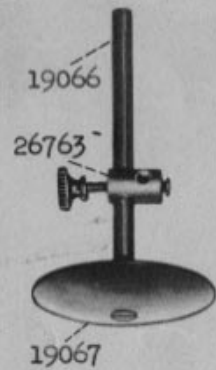

27739



225390


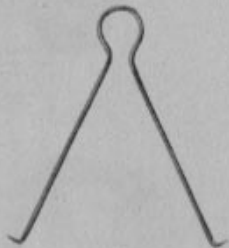


PLATE 8671-FULL SIZE

19159



19161

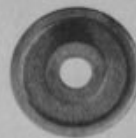

19160



905



435



7336



19158



766



356



200383



201018




201696



225322 208



12327

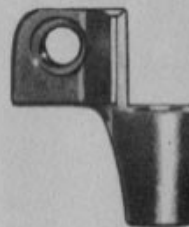

12149



12241



PLATE 8672-FULL SIZE

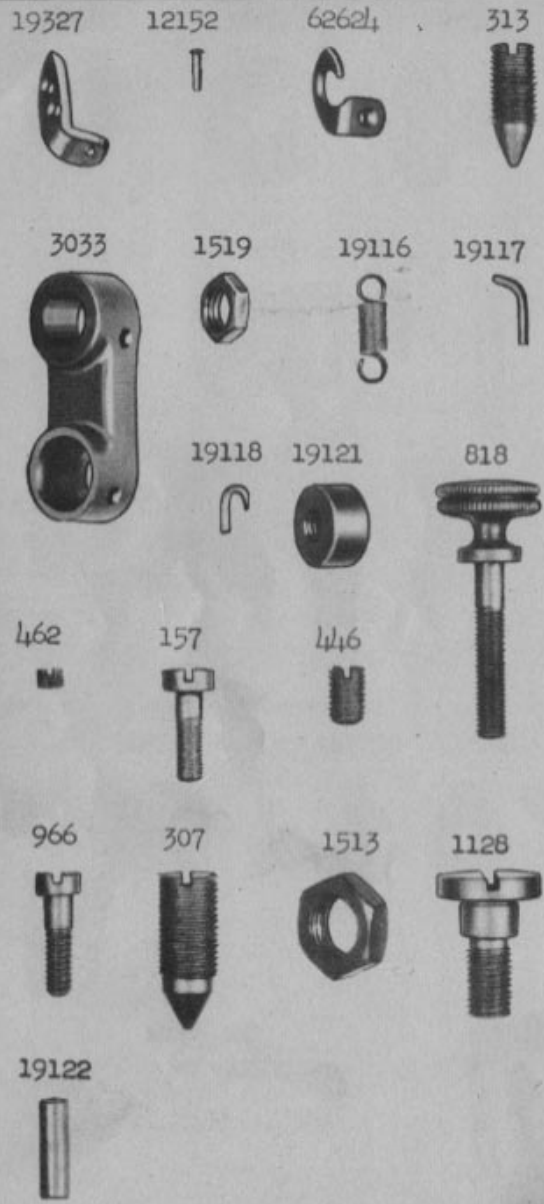


PLATE 8673-ONE-HALF SIZE

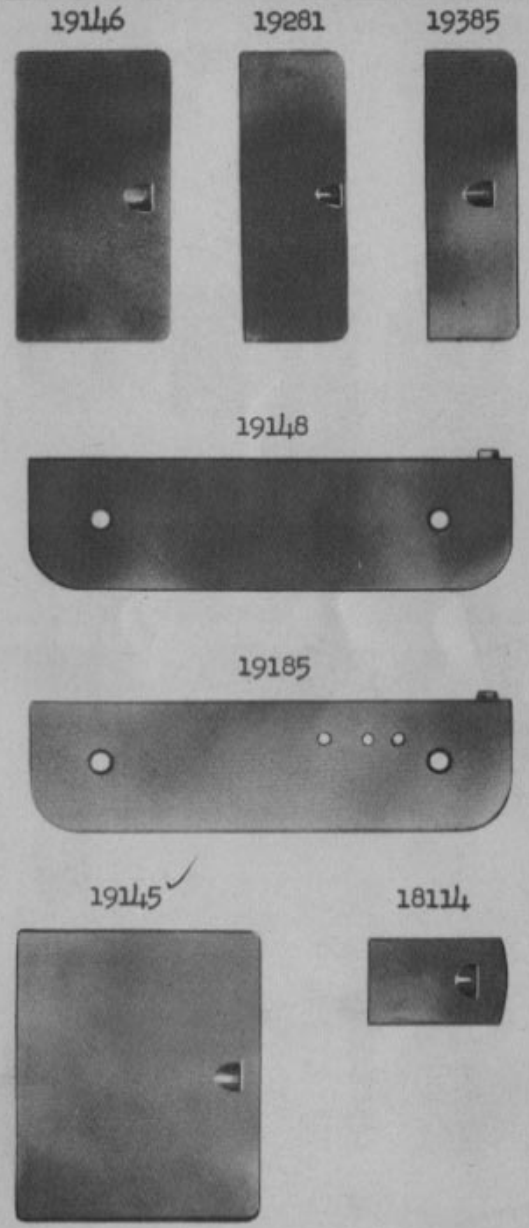


PLATE 8674-FULL SIZE

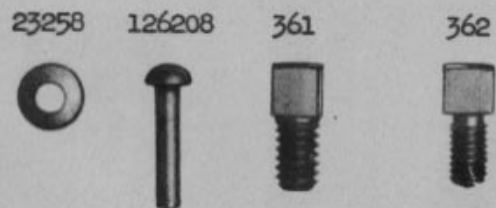
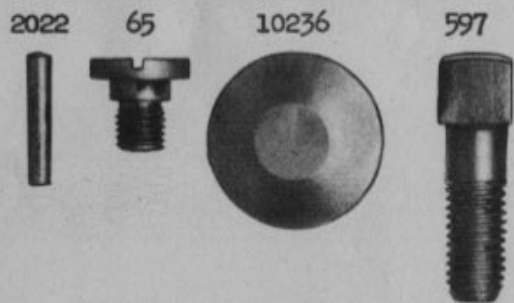
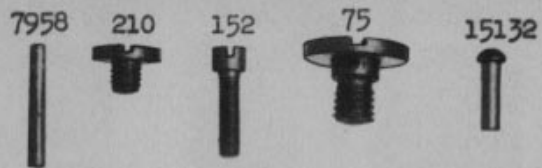


PLATE 8675-FULL SIZE

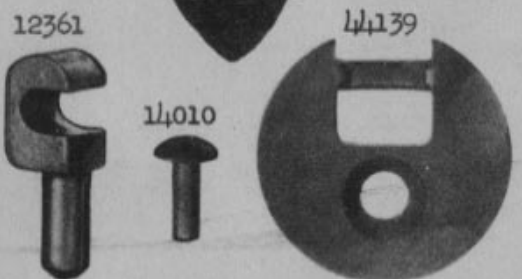
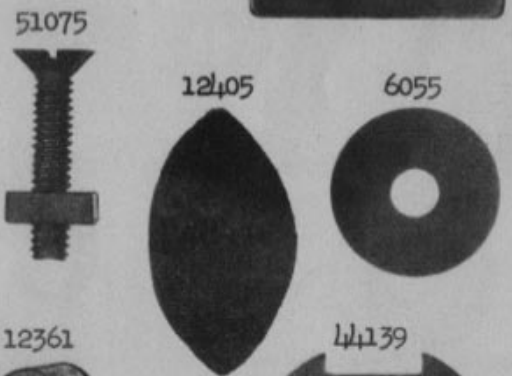
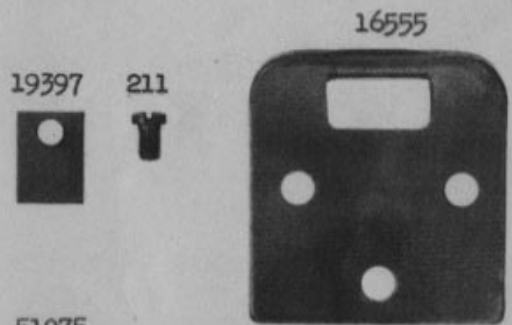
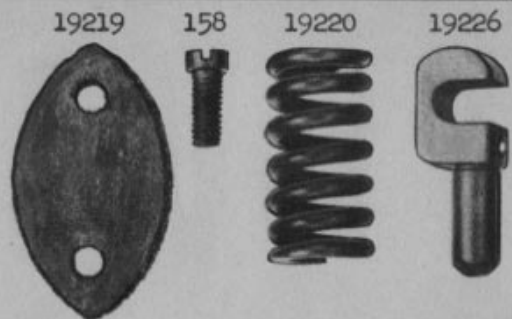


PLATE 8676-FULL SIZE

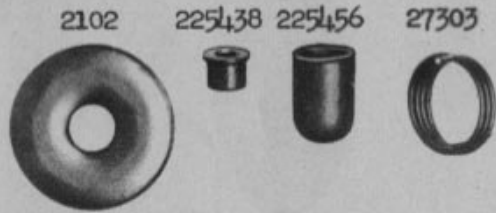
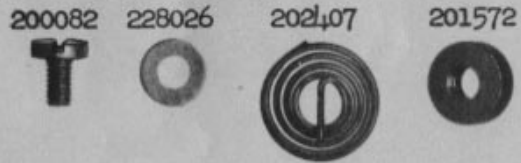
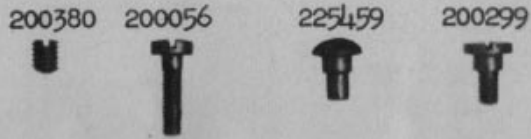
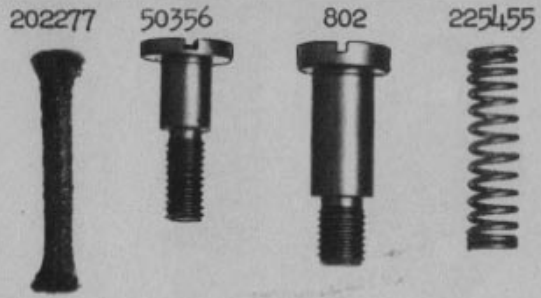


PLATE 8677-ONE-FOURTH SIZE



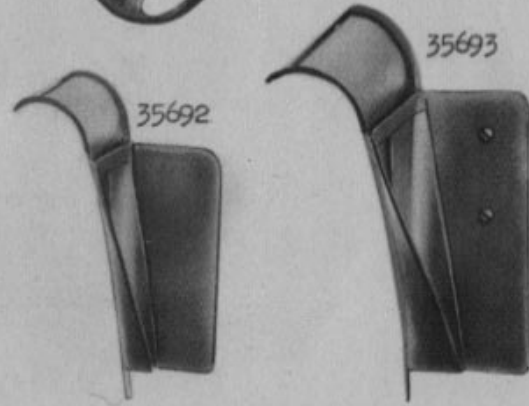


PLATE 8678-ONE-FOURTH SIZE

126036

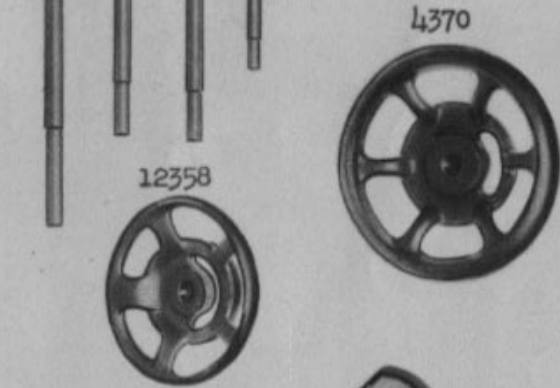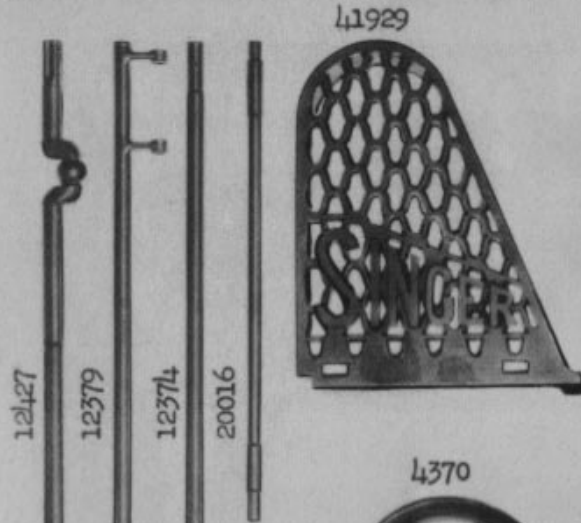

225382

44212

225433

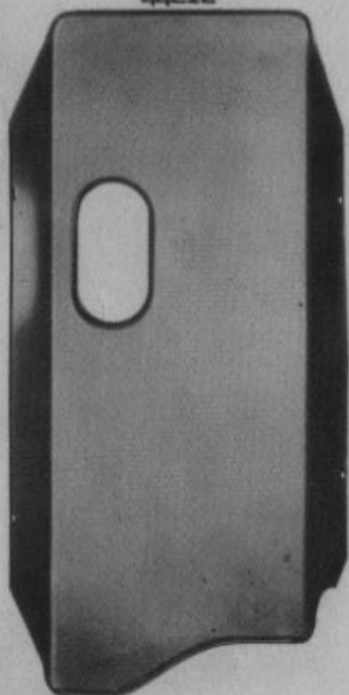



PLATE 8679-ONE-HALF SIZE

35300

26413




19230

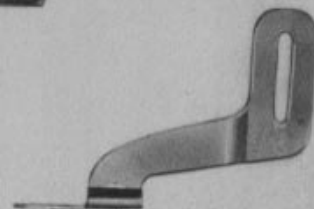

35132



 35301




36490

36493



36492

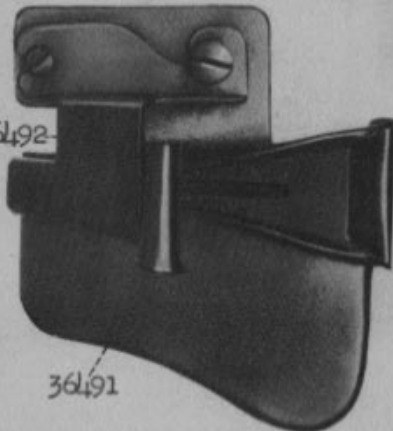

36491

PLATE 8680-ONE-HALF SIZE

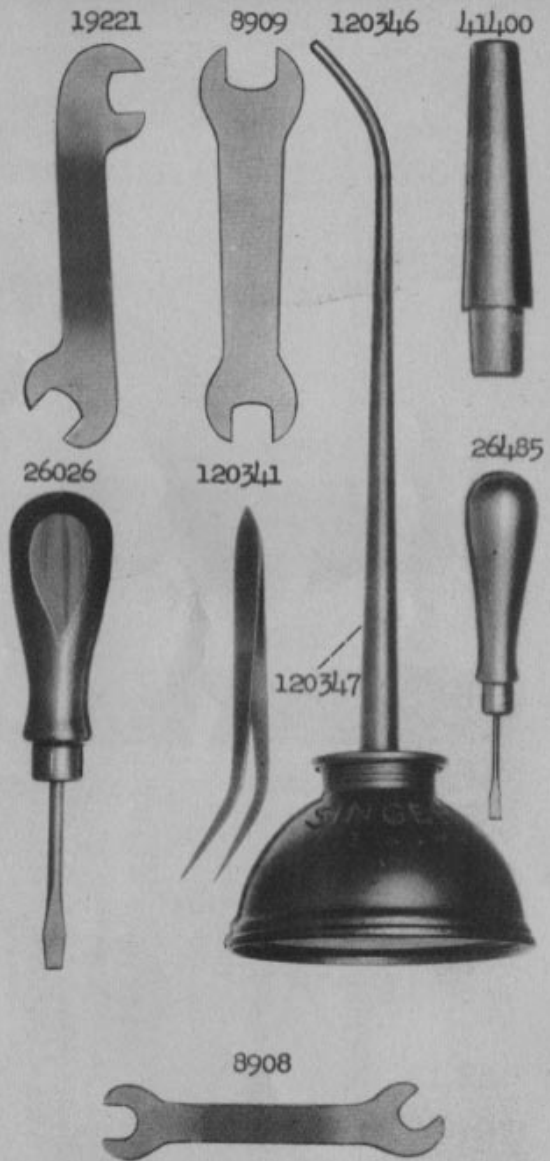


PLATE 8681-ONE-HALF SIZE

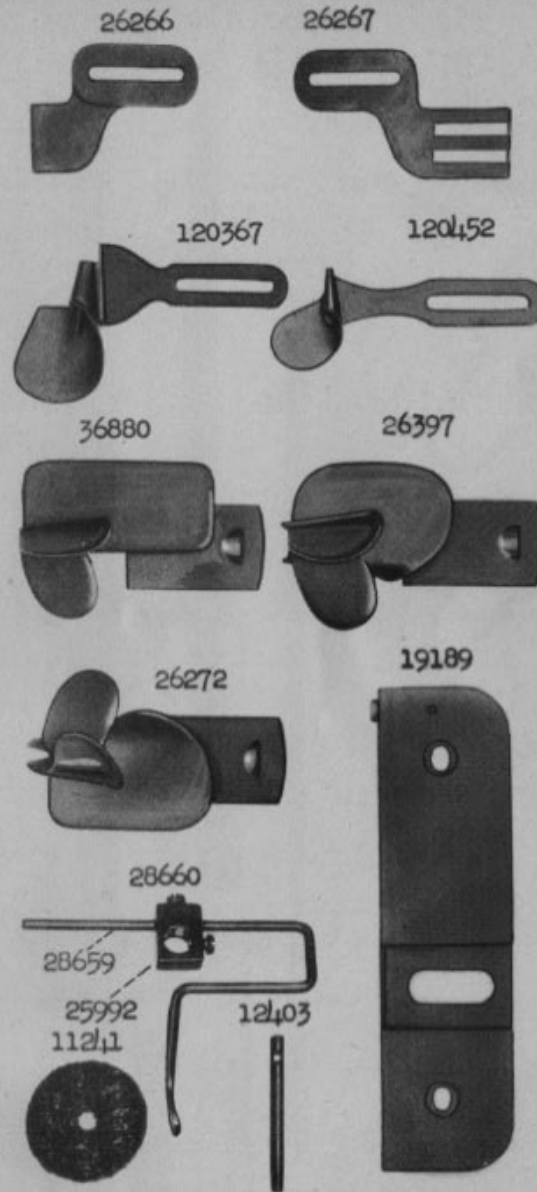


PLATE 8682-ONE-HALF SIZE

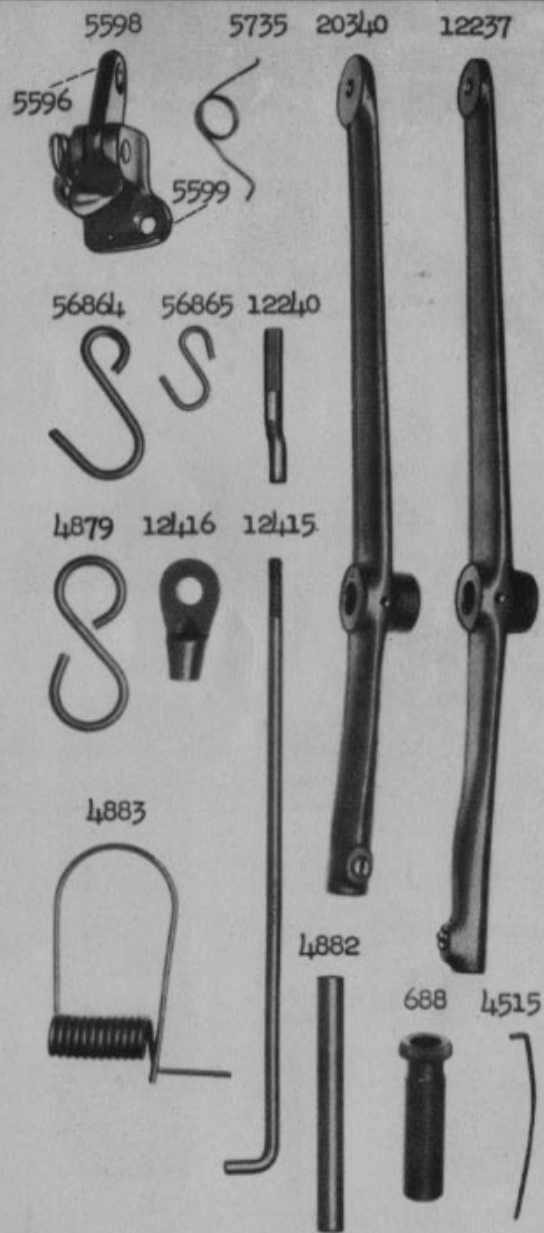


PLATE 8683-ONE-HALF SIZE

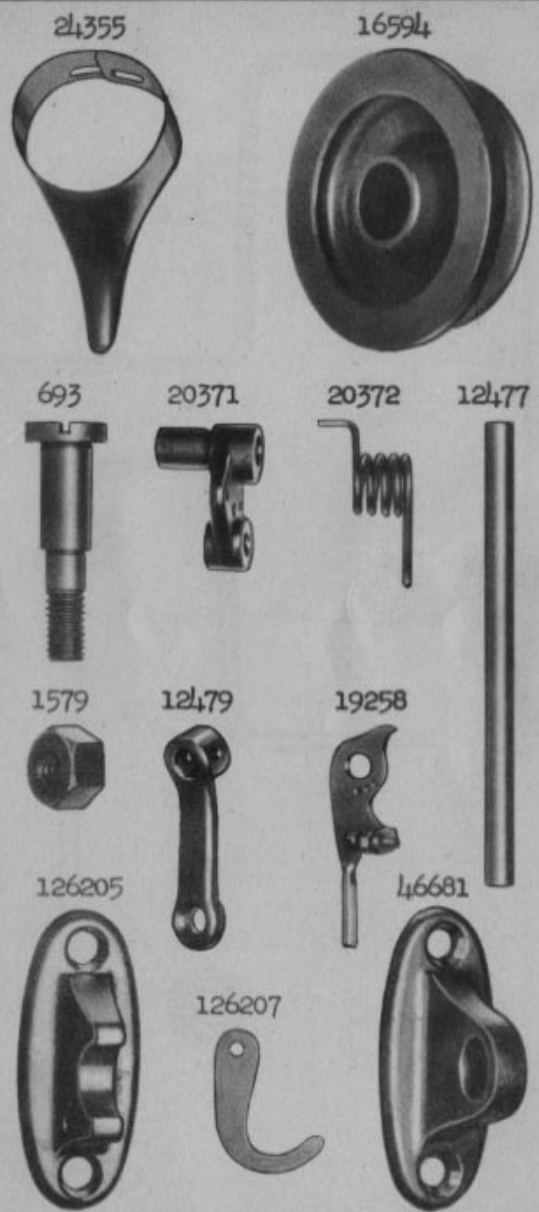


PLATE 8684-ONE-HALF SIZE

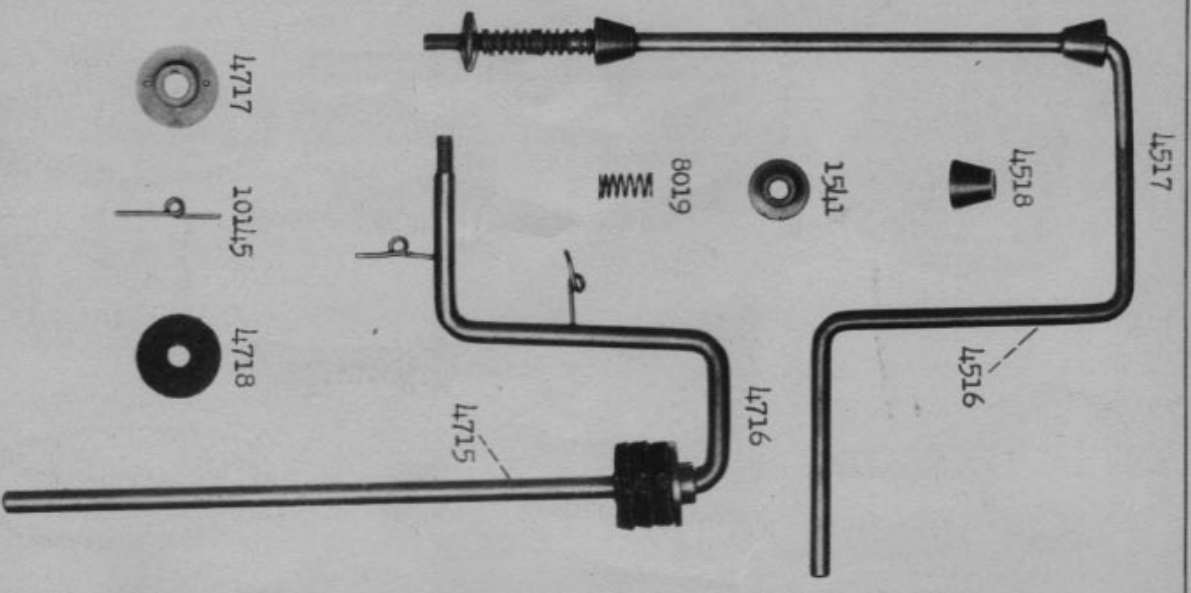


PLATE 8685-ONE-HALF SIZE

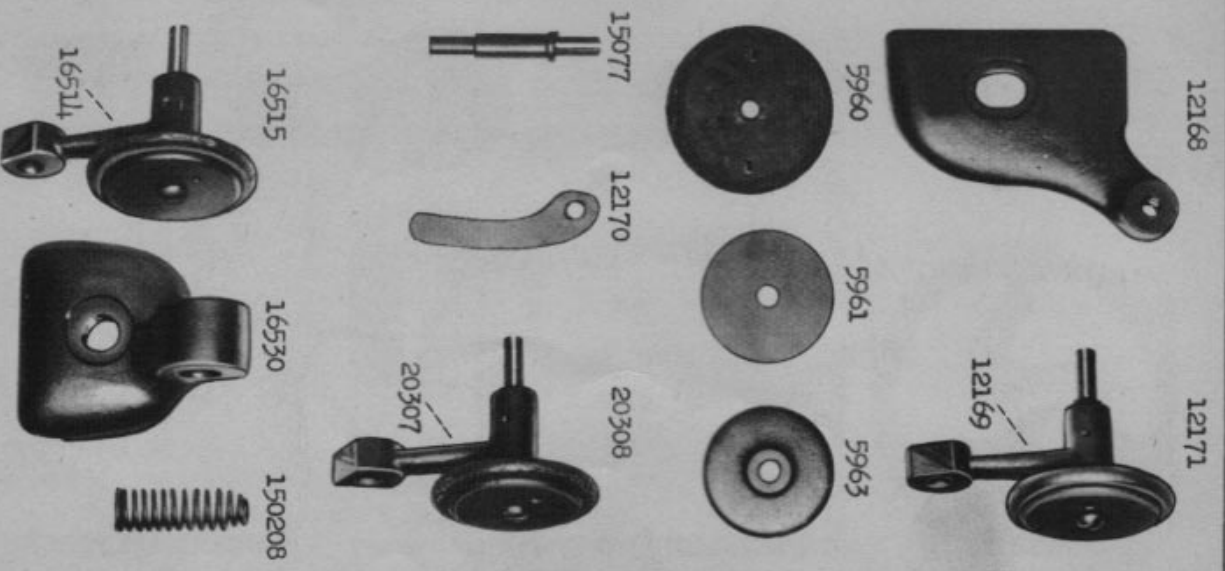


PLATE 8686-ONE-HALF SIZE

202173



 
229453



225154



225381



225444



225458



202178



225461



 
201499

27307



27308

27306



27587



11930



8418



PLATE 8687-ONE-FOURTH SIZE

14233



16518



16992



14081

80223



12475




12458



PLATE 8688-ONE-FOURTH SIZE



12250

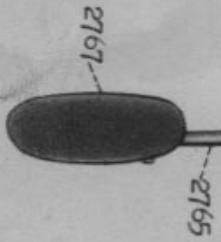

20465


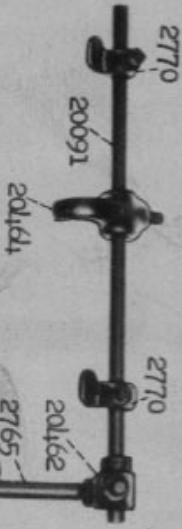


PLATE 20335-ONE-SIXTH SIZE

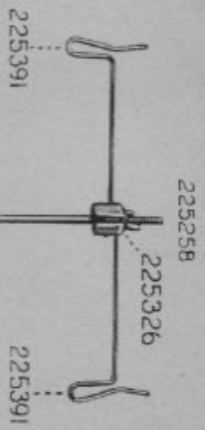

225388.....

225324

150203

225257

