

LIST OF PARTS COMPLETE

-for-

MACHINE NO. 106-7

1008

List of Parts complete
-for-
Machine No. 106-7
Seven Needles, Seven Hooks

No.	Name
*57201	Arm, upper and lower (solid) with 57202
57202	" Oil Tube for oiling 64267
56003	" " " with 52045 for oiling 38458
52045	" " " Packing (braided cotton)
127768	" Rock Shaft
12147	" " " Back Bearing Oil Pad (felt)
64253	" " " Collar with two 624C
624 C 2	" " " " Set Screw
57439	" " " Crank (back) with four 168C
168 C 4	" " " " " Set Screw
38412	" " " " (front) with 443C
127838	" " " " " Pin
443 C	" " " " " Set Screw
12154	" " " Front Bearing Oil Pad (felt)
57207	" Rotary Shaft with 57824
57781	" " " Bushing (intermediate) with 49093 and 64805
49093	Arm Rotary Shaft Bushing (intermediate) Oil Pad (braided cotton) long
64805	Arm Rotary Shaft Bushing (intermediate) Oil Pad (braided cotton) short
332 C	Arm Rotary Shaft Bushing (intermediate) Set Screw
54008	" " " Collar with three 1259C
1259 C	" " " " Set Screw
57782	" " " Flanged Bushing (back) with 49093 64805

(braided cotton) short

159 F	3	Arm Rotary Shaft Flanged Dushing (back) Screw
46200		" " " Intermediate Bearing Oil Pad (felt)
57324		" " " Oil Pad (felt)
144 D		" " " Screw
23933		" Side Cover
286 J		" " " Thumb Screw
64259		Balance Wheel (single belt groove) with two 51283C
51283 C	2	" " Set Screw
57211		Cloth Plate (small) with two 57404
57212		" " " Hook
57404	2	" " " Oil Tube
898 F		" " " Screw (large)
691 F	2	" " " Screw (small)
57213		" " " Slide (large)
57214		Cloth Plate (small) Slide (large) complete, Nos. 57213, 57215 and two 725J
57215		Cloth Plate (small) Slide (large) Spring
725 J	2	" " " " " " Screw
57216		" " " " (small)
57217		Cloth Plate (small) Slide (small) complete, Nos. 57216, 57218, 57219 and four 665J
57218		Cloth Plate (small) Slide (small) Spring (left)
665 J	2	" " " " " " " Screw
57219		" " " " " " " (right)
665 J	2	" " " " " " " " S
57438		Cloth Plate (small) complete, Nos. 57211, 57214 and 57217
57800		Cloth Plate (small) 57438 with four 57218
64137		Crank Connecting Rod
63035 C		" " " Ball Screw Stud (upper)

1087 E							(upper) Screw
57288							Oil Case with 57290, 57291 and four each 185E and 448C
57290							Crank Connecting Rod Oil Case Cap
57291							Packing (felt)
185 E	4						Screw
448 C	4						Set Screw
57223							Face Plate
46111							Pin
286 J							Thumb Screw
57224							Feed Bar with two 457C
57225							Hinge Pin
457 C	2						Set Screw
57783							Feed Dog
57293							Packing .005 in. thick
57294							.012 in. thick
57321							.021 in. thick
1255 D							Screw
*57227							Eccentric
*61020							Body
51061 C	2						Set Screw
217 E							Set Screw
7071							Washer
57228							Feed Eccentric (adjustable) complete, Nos. 217E, 7071, 50653C, 61020, 57227 and two 51061C
57229							Feed Eccentric Connection
57230							Lifting Eccentric with two 624C
57231							Connection
624 C	2						Set Screw
50653 C							Regulating Screw

57234		"	"	"	Hinge Pin
57235	2	"	"	"	Bushing
449 C	2	"	"	"	Set Screw
624 C	2	"	"	"	Set Screw
57441	7	Looper (large shank)			
57563	Looper Carrier with seven 50370F				
157 D		"	"		Screw
57238		"	Eccentric with two 889C		
57239		"	"	Connection	
57240		"	"	"	Oil Pad (felt)
924 E		"	"	"	Stop Screw
889 C	2	"	"	Set Screw	
57868		"	Rock Shaft with two 1147C		
57870	Looper Rock Shaft (adjustable) complete, Nos. 57868 and 87869				
57242	Looper Rock Shaft Bar				
1147 C	2	"	"	"	Set Screw
57838		"	"	"	Connecting Stud with two 1147C
1147 C		"	"	"	Set Screw
57243		"	"	"	Hinge Pin with 860E
860 E		"	"	"	Plug Screw
446 C		"	"	"	Set Screw (left)
446 C		"	"	"	(right)
50370 F	7	"	Set Screw		
57244	Needle Bar (hollow)				
57761		"	"	57244 with 57762	
38456		"	"	Bushing (lower)	
1188 E		"	"	Set Screw	
81042		"	"	(upper)	

57246		"	"	"	"	Hinge Stud
1520 E		"	"	"	"	" Nut
127777		"	"	"	"	Stud with 209F and two 391E
391 E	2	"	"	"	"	Clamping Screw
57762		"				Clamp with seven 50014C
57250		"				Guard (left) with 50239C
50239 C		"	"	"	"	Set Screw
57423		"	"	"	"	(right) with two 50239C
50239 C	2	"	"	"	"	Set Screw
57251		"	"			Bar
57252		"	"	"	"	Bracket (left) with 440C
177 C		"	"	"	"	Screw
57253		"	"	"	"	(right) with 440C
177 C		"	"	"	"	Screw
57254		"	"	"	"	Holder
29627		"	"	"	"	Dowel Pin
50154 D	2	"	"	"	"	Screw
440 C	2	"	"	"	"	Set Screw
50014 F	7	"				Set Screw
57255						Presser Bar with 25303
25303		"	"			Ball size 1/4 in.
61046		"	"			Bushing (lower)
1133 E		"	"	"	"	Set Screw
38456		"	"	"	"	(upper)
1133 E		"				Set Screw
57257		"	"			Lifter
57258		"	"	"	"	Hinge Pin
447 C		"	"	"	"	Set Screw
194 D		"	"	"	"	Stop Screw
57259		"	"			Lifting Bracket with 4530 and 1019

57275	"	"	"	Lever with 193F and 4600
57276	"	"	"	" Connecting Rod
57277	"	"	"	" " Collar with two 465C
465 C	2			Presser Bar Lifting Lever Connecting Rod Collar Set Screw
24122				Presser Bar Lifting Lever Connecting Rod Spring
45057	"	"	"	" " " " " " " " Stop Washer
*57278				Presser Bar Lifting Connecting Stud
57279				Presser Bar Lifting Lever Connecting Stud complete, Nos. 4500, 1423J, 1904 and 57278
1904				Presser Bar Lifting Lever Connecting Stud Roller (roller only)
1423 J				Presser Bar Lifting Lever Connecting Stud Roller Cap Screw
453 C				Presser Bar Lifting Lever Connecting Stud Set Screw
57280	"	"	"	" Hook
460 C	"	"	"	" " Set Screw
302 D	"	"	"	" Hinge Screw
38467	"	"	"	Spring (flat)
38468	"	"	"	Stud
57283	"	"	"	Foot 1/4 in. gauge for Plain work
57287	"	"	"	" (hinged, adjustable) 1/4 in. gauge for gathering
190 J				Presser Foot Screw
574 W				Pressure Regulating Thumb Screw
1539 W	"	"	"	" " " " Lock Nut
57282				Slack Thread Controller
57183	2			" " " " Clamp
50004 F	"	"	"	" " " " Screw
2102	14			Tension Disc
147574	"			Plate with 4500
180 L	"			Position Stud
57113	"			Spring

32573	7	"	Releasing Piece
57263		"	" Lever
57237		"	" " Connection
193 F		"	" " " Set Screw
788 D		"	" " " Hinge Screw
57292	4	"	" " Pin (large)
54734	3	"	" " " (small)
127575		"	" " Plate
301 E	2	"	" " " Screw
50126 C	7	"	" Screw Stud
59534	7	"	" Spring
59537	7	"	" " Bushing (large)
59539	7	"	" " " (small)
17547	7	"	" Thread Guide
57558			Thread Controller
206 D		"	" " Screw
57564	2	"	" Eyelet (side of arm)
190 J	2	"	" " Screw
37559		"	" Take-up
368 E		"	" " Adjusting Screw
57272		"	" " Arm
209 F		"	" " " Set Screw
57764			Throat Plate for 57763
691 F	2	"	" " Screw