

HISTORICAL COPY  
DO NOT REMOVE

MACHINE NO. 300w124

REVISED 9-30-59

Dept. 40  
53 (2)  
61  
70  
83-1  
86-1  
88-1 (2)  
92  
92-7  
92-17

MACHINE NO. 300w124

200078X Arm Side Cover Screw (4 )  
#268751 Bed with 268184 and two 200035E  
268707 Bed Plate (left)  
268018 Bed Plate (right)  
200053X Bed Plate Screw (8)  
268017 Bed Plate Slide with two 268022 and four 200138D  
268022 Bed Plate Slide Spring  
200138D Bed Plate Slide Spring Screw  
268735 Bed Shaft with 268044, 268214, 268711 and 350534C  
268024 Bed Shaft Ball Bearing  
268028 Bed Shaft Connection Belt Pulley with two 201254C  
268261 Bed Shaft Connection Belt Pulley 268028 with 268024  
201254C Bed Shaft Connection Belt Pulley Set Screw  
268029 Bed Shaft Needle Bearing (2)  
268734 Bed Shaft Needle Bearing (center)  
268711 Bed Shaft Oil Control Rod (wood)  
268214 Bed Shaft Oil Stop Ball  
350534C Bed Shaft Oil Stop Ball Screw  
268044 Bed Shaft Oil Stop Ball Spring  
267607 Face Plate with 200353C, 268033 and two 201416C  
268330 Face Plate Hinge Stud (2)  
201416C Face Plate Hinge Stud Set Screw  
200353C Face Plate Hinge Stud Set Screw (long)  
268032 Face Plate Lock Spring

MACHINE NO. 380w124

268064 Feed Driving Eccentric

268065 Feed Driving Eccentric Adjusting Disc

268066 Feed Driving Eccentric Adjusting Disc Spring

268067 Feed Driving Eccentric Adjusting Disc Spring Collar with two  
200382ALX

200382ALX Feed Driving Eccentric Adjusting Disc Spring Collar Set Screw

267623 Feed Driving Eccentric Friction Plate

350548C Feed Driving Eccentric Friction Plate Screw

350477C Feed Driving Eccentric Friction Plate Screw Set Screw

241763 Feed Driving Eccentric Friction Plate Screw Set Screw Packing  
(brass)

268315 Feed Driving Flange with 267623, two each 241763, 350467C,  
350477C and 350548C

350467C Feed Driving Flange Set Screw

268069 Feed Driving Rock Frame with 200354C and 200362C

200354C Feed Driving Rock Frame Position Screw

200362C Feed Driving Rock Frame Set Screw

268733 Feed Driving Rock Shaft

268072 Feed Driving Rock Shaft Collar with two 200386C (2)

200386C Feed Driving Rock Shaft Collar Set Screw

268073 Feed Driving Rock Shaft Crank with two 200061ALX

200061ALX Feed Driving Rock Shaft Crank Pinch Screw

268071 Feed Driving Rock Shaft Needle Bearing (2)

268074 Feed Lifting Connection

268062 Feed Lifting Connection Hinge Stud with 268258

MACHINE NO.300w124

201522E Feed Lifting Connection Hinge Stud Nut  
268258 Feed Lifting Connection Hinge Stud Oil Packing (wick)  
268075 Feed Lifting Crank with 200373C and 201256C  
201256C Feed Lifting Crank Pinch Screw  
268047 Feed Lifting Eccentric with 268077 and two 200394C  
268077 Feed Lifting Eccentric Lubricating Pad (wood)  
200394C Feed Lifting Eccentric Set Screw  
268078 Feed Lifting Link  
268079 Feed Lifting Link Hinge Pin with 268258 (2)  
268258 Feed Lifting Link Hinge Pin Oil Packing (wick)  
200373C Feed Lifting Link Hinge Pin Set Screw  
268713 Feed Lifting Rock Shaft  
268072 Feed Lifting Rock Shaft Collar with two 200386C (2)  
200386C Feed Lifting Rock Shaft Collar Set Screw  
268198 Feed Lifting Rock Shaft Crank with 201418C and two 200061ALX  
200061ALX Feed Lifting Rock Shaft Crank Pinch Screw  
201418C Feed Lifting Rock Shaft Crank Position Screw  
268071 Feed Lifting Rock Shaft Needle Bearing (2)  
268081 Feed Regulating Stud  
240245 Feed Regulating Stud Retaining Spring  
268082 Feed Regulating Stud Socket  
200078F Feed Regulating Stud Socket Screw (2)  
270026 Feed Regulating Stud Spring  
267702 Foot Lifter Arm with 200058C and 200373C

MACHINE NO. 300w124

200058C Foot Lifter Arm Pinch Screw  
200373C Foot Lifter Arm Set Screw  
267612 Foot Lifter Crank  
200650X Foot Lifter Crank Stop Screw Stud  
268714 Foot Lifter Lever (back)  
267613 Foot Lifter Lever (front) with 267614  
267614 Foot Lifter Lever (front) Hinge Pin  
201363C Foot Lifter Lever Hinge Screw  
267704 Foot Lifter Lever Rod with 248423  
248423 Foot Lifter Lever Rod Cotter Pin  
268715 Foot Lifter Lever Rod (rear)  
350548C Foot Lifter Lever Rod (rear) Hinge Screw (long)  
201526E Foot Lifter Lever Rod (rear) Hinge Screw (long) Nut (2)  
206133 Foot Lifter Lever Rod (rear) Hinge Screw (long) Washer  
350524X Foot Lifter Lever Rod (rear) Hinge Screw (short)  
204348 Foot Lifter Lever Spring  
201160C Foot Lifter Lever Spring Screw Eye  
350467C Foot Lifter Lever Spring Screw  
267616 Lifting Crank with 200167E, 200418C and two 200061ALX  
200061ALX Lifting Crank Pinch Screw  
200418C Lifting Crank Set Screw  
268064 Lifting Eccentric  
268065 Lifting Eccentric Adjusting Disc

MACHINE NO. 300w124

267618 Lifting Eccentric Adjusting Disc Spring  
267619 Lifting Eccentric Connection  
267620 Lifting Eccentric Connection 267619 with 268063  
267621 Lifting Eccentric Connection Crank with 201063E and two 200058C  
200058C Lifting Eccentric Connection Crank Pinch Screw  
267617 Lifting Eccentric Connection Hinge Pin with 244071  
244071 Lifting Eccentric Connection Hinge Pin Oil Packing (wick)  
201063E Lifting Eccentric Connection Hinge Pin Pinch Screw  
268063 Lifting Eccentric Connection Needle Bearing  
267622 Lifting Eccentric Flange with 267623, two each 241763, 350467C  
350477C and 350548C  
350467C Lifting Eccentric Flange Set Screw  
267623 Lifting Eccentric Friction Plate  
350548C Lifting Eccentric Friction Plate Screw  
350477C Lifting Eccentric Friction Plate Screw Set Screw  
241763 Lifting Eccentric Friction Plate Screw Set Screw Packing (brass)  
267624 Lifting Eccentric Spacing Collar with two 200380C  
200380C Lifting Eccentric Spacing Collar Set Screw  
267625 Lifting Lever with two 267093  
267626 Lifting Lever Hinge Stud  
200362C Lifting Lever Hinge Stud Set Screw (2)  
267093 Lifting Lever Needle Bearing  
267627 Lifting Link  
267617 Lifting Link Hinge Pin with 244071 (2)

MACHINE NO. 300w124

244071 Lifting Link Hinge Pin Oil Packing (wick)  
200167E Lifting Link Hinge Pin Set Screw  
267628 Lifting Presser Bar  
267629 Lifting Presser Bar Guide Block with 200066D and 200081C  
200081C Lifting Presser Bar Guide Block Adjusting Screw  
200066D Lifting Presser Bar Guide Block Finch Screw  
267630 Lifting Presser Bar Guide Rod  
200417C Lifting Presser Bar Guide Rod Set Screw (lower)  
200351C Lifting Presser Bar Guide Rod Set Screw (upper)  
267631 Lifting Presser Bar Lifting Crank with 268258  
268258 Lifting Presser Bar Lifting Crank Oil Packing (wick)  
267632 Lifting Presser Foot with 200078F  
200078F Lifting Presser Foot Finch Screw  
267633 Lifting Rock Shaft  
267634 Lifting Rock Shaft 267633 with 2022 and 267636  
267635 Lifting Rock Shaft Bracket  
8554 Lifting Rock Shaft Bracket Position Pin  
200030X Lifting Rock Shaft Bracket Screw  
268072 Lifting Rock Shaft Collar with two 200386C  
200386C Lifting Rock Shaft Collar Set Screw  
267636 Lifting Rock Shaft Crank with 200167E  
2022 Lifting Rock Shaft Crank Pin  
267110 Lifting Rock Shaft Needle Bearing (2)  
267665 Loop Deflector

MACHINE NO. 300w124

200907X Loop Deflector Screw

268309 Looper with 200377C

350478C Looper Adjusting Screw

268716 Looper Carrier

268717 Looper Carrier 268716 with two 268099

268307 Looper Carrier Crank with 200089C

268308 Looper Carrier Crank Clamping Stud

201524E Looper Carrier Crank Clamping Stud Nut

67425 Looper Carrier Crank Clamping Stud Washer

268208 Looper Carrier Crank Hinge Pin with 268258

268258 Looper Carrier Crank Hinge Pin Oil Packing (wick)

200089C Looper Carrier Crank Hinge Pin Pinch Screw

268099 Looper Carrier Needle Bearing

268718 Looper Carrier Positioning Sleeve with 200386C

200386C Looper Carrier Positioning Sleeve Set Screw

\*268719 Looper Carrier Shaft

268720 Looper Carrier Shaft 268719 with 268721 and 268722

\*268721 Looper Carrier Shaft Bushing (left) (eccentric) with 200354C  
and 200362C

268096 Looper Carrier Shaft Bushing (left) Position Plate

200085C Looper Carrier Shaft Bushing (left) Position Plate Screw (2)

268311 Looper and Needle Guard complete Nos. 268309 and 268310

268722 Looper Carrier Shaft Bushing (right) (eccentric) with 200354C  
and 200362C

200354C Looper Carrier Shaft Bushing Position Screw



MACHINE NO. 300w124

200362C      Looper Carrier Shaft Bushing Set Screw  
268098      Looper Driving Connection  
268216      Looper Driving Connection 268098 with 268099  
268099      Looper Driving Connection Needle Bearing  
268277      Looper Driving Crank with 200362C, 200573C and two 200344AL  
268102      Looper Driving Crank Oil Hole Cover  
200303X      Looper Driving Crank Oil Hole Cover Screw  
204925      Looper Driving Crank Oil Hole Cover Screw Washer  
200573D      Looper Driving Crank Oil Stop Screw  
200344AL      Looper Driving Crank Position Screw  
200362C      Looper Driving Crank Set Screw  
268602      Looper Holder with two 350478C  
350267E      Looper Holder Screw  
208636      Looper Holder Screw Washer  
350478C      Looper Set Screw  
268051      Looper Thread Guide  
200578XC      Looper Thread Guide (top of Arm) Bracket Screw (2)  
268296      Looper Thread Guide (on Bed at Looper)  
350468E      Looper Thread Guide (on Bed at Looper) Screw  
268723      Looper Thread Guide (rear) (2)  
200035D      Looper Thread Guide (rear) Screw (4)  
200035D      Looper Thread Guide Screw  
268052      Looper Thread Take-up Rod  
200064F      Looper Thread Take-up Rod Set Screw

MACHINE NO. 300w124

268331 Looper Thread Tension Bracket  
200562E Looper Thread Tension Bracket Screw (2)  
268121 Looper Thread Tension Bracket Spacing Collar (2)  
244048 Looper Thread Tension Disc  
10148 Looper Thread Tension Spring  
200987X Looper Thread Tension Stud  
268333 Looper Thread Tension Thread Guide  
201572X Looper Thread Tension Thumb Nut  
268332 Looper Thread Tension complete, Nos. 10148, 200987X, 201572X  
and two 244048  
268123 Looper Thread Tube with two 268125  
268124 Looper Thread Tube Clamp (2)  
200054C Looper Thread Tube Clamp Screw (4)  
268125 Looper Thread Tube Thread Bushing  
268126 Looper Throw-out Gear with two 200362D  
268127 Looper Throw-out Gear Locking Plunger  
268313 Looper Throw-out Gear Locking Plunger Handle  
201477C Looper Throw-out Gear Locking Plunger Screw Bushing  
250265 Looper Throw-out Gear Locking Plunger Spring  
200444C Looper Throw-out Gear Locking Plunger Stop Screw  
200364C Looper Throw-out Gear Locking Plunger Stop Screw Set Screw  
201620D Looper Throw-out Gear Locking Plunger Thumb Nut  
200362C Looper Throw-out Gear Set Screw  
268129 Looper Throw-out Rack Rod

MACHINE NO. 300w124

268314 Looper Throw-out Rack Rod 268129 with 201553D  
201553D Looper Throw-out Rack Rod Thumb Nut  
268131 Looper Throw-out Safety Latch  
268199 Looper Throw-out Safety Latch Collar with two 200386C  
200386C Looper Throw-out Safety Latch Collar Set Screw  
268132 Looper Throw-out Safety Latch Spring  
268133 Looper Throw-out Safety Latch Spring Bracket  
200098F Looper Throw-out Safety Latch Spring Bracket Screw (2)  
228448 Machine Locating Stud (4)  
268048 Machine Pulley "V" belt groove, (outside diam. of belt groove  
2.9 in.) with 200327C and 200328C  
268049 Machine Pulley 268048 with 268024  
200328C Machine Pulley Position Screw  
200327C Machine Pulley Set Screw  
268603 Needle Bar with 200125ALX  
\*268055 Needle Bar Connecting Link  
268056 Needle Bar Connecting Link 268055 with two 270266  
268139 Needle Bar Connecting Link Cap Washer  
200095X Needle Bar Connecting Link Cap Washer Screw  
270266 Needle Bar Connecting Link Needle Bearing  
268141 Needle Bar Connecting Stud with 201188C, 202423 and two 200069C  
202423 Needle Bar Connecting Stud Oil Packing (wick)  
200069C Needle Bar Connecting Stud Pinch Screw  
267705 Needle Bar Crank with 200346C, 200354C and 200378C

MACHINE NO. 300w124

267706 Needle Bar Crank 267705 with 268005

200354C Needle Bar Crank Position Screw

200378C Needle Bar Crank Position Screw Check Screw

200346C Needle Bar Crank Set Screw

268144 Needle Bar Oiling Felt (2)

268278 Needle Bar Oiling Felt Holder (2)

200173D Needle Bar Oiling Felt Holder Screw (2)

267637 Needle Bar Rock Frame

267638 Needle Bar Rock Frame Driving Arm with two 200043C

200043C Needle Bar Rock Frame Driving Arm Pinch Screw

268060 Needle Bar Rock Frame Driving Connection

268061 Needle Bar Rock Frame Driving Connection 268060 with 268063

200123D Needle Bar Rock Frame Driving Connection Cap Screw

268062 Needle Bar Rock Frame Driving Connection Hinge Stud with 268258

201522E Needle Bar Rock Frame Driving Connection Hinge Stud Nut

268258 Needle Bar Rock Frame Driving Connection Hinge Stud Oil Packing  
(wick)

268063 Needle Bar Rock Frame Driving Connection Needle Bearing

268064 Needle Bar Rock Frame Driving Eccentric

268065 Needle Bar Rock Frame Driving Eccentric Adjusting Disc

267618 Needle Bar Rock Frame Driving Eccentric Adjusting Disc Spring

267639 Needle Bar Rock Frame Driving Eccentric Flange with 267623,  
two each 241763, 350467C, 350477C and  
350548C

350467C Needle Bar Rock Frame Driving Eccentric Flange Set Screw

MACHINE NO. 300w124

267623 Needle Bar Rock Frame Driving Eccentric Friction Plate  
350548E Needle Bar Rock Frame Driving Eccentric Friction Plate Screw  
350477C Needle Bar Rock Frame Driving Eccentric Friction Plate Screw  
Set Screw  
241763 Needle Bar Rock Frame Driving Eccentric Friction Plate Screw  
Set Screw Packing (brass)  
268029 Needle Bar Rock Frame Needle Bearing (2)  
268148 Needle Bar Rock Frame Regulating Stud  
264709 Needle Bar Rock Frame Regulating Stud Cap with 200364C  
200364C Needle Bar Rock Frame Regulating Stud Cap Set Screw  
268149 Needle Bar Rock Frame Regulating Stud Sleeve  
200337C Needle Bar Rock Frame Regulating Stud Sleeve Set Screw  
214529 Needle Bar Rock Frame Regulating Stud Spring  
268150 Needle Bar Rock Frame Regulating Stud complete, Nos. 214529,  
264709, 268148 and 268149  
268219 Needle Bar Rock Frame Thread Guide  
200583X Needle Bar Rock Frame Thread Guide Screw (2)  
268310 Needle Guard  
200377C Needle Guard Set Screw  
200125ALX Needle Set Screw  
268312 Needle Thread Guide (on Arm Head)  
268512 Needle Thread Guide (on Needle Bar Connecting Stud)  
201188C Needle Thread Guide (on Needle Bar Connecting Stud) Set Screw  
268513 Needle Thread Guide (on side of Arm) (2)  
200082D Needle Thread Guide Screw (3)

MACHINE NO. 300w124

268167 Needle Thread Tension Bracket  
200047E Needle Thread Tension Bracket Screw (2)  
268121 Needle Thread Tension Bracket Spacing Collar (2)  
2102 Needle Thread Tension Disc  
268168 Needle Thread Tension Releaser  
268169 Needle Thread Tension Releaser Cap with 201052ALX  
201052ALX Needle Thread Tension Releaser Cap Set Screw  
204365 Needle Thread Tension Releaser Spring  
268725 Needle Thread Tension Releasing Arm with 201160E and 238089  
201363C Needle Thread Tension Releasing Arm Hinge Screw  
32572 Needle Thread Tension Releasing Disc  
226206 Needle Thread Tension Releasing Pin  
267707 Needle Thread Tension Releasing Plate (adjustable)  
238089 Needle Thread Tension Releasing Plate Pin  
131741 Needle Thread Tension Spring  
59538 Needle Thread Tension Spring Bushing (back)  
59537 Needle Thread Tension Spring Bushing (front)  
50326C Needle Thread Tension Stud  
59539 Needle Thread Tension Stud 50326C with 51570C  
54279 Needle Thread Tension Thread Guide (double)  
51570C Needle Thread Tension Thumb Nut  
268263 Needle Thread Tension complete, Nos. 32572, 59537 to 59539,  
131741 and two 2102  
267708 Presser Bar Pressure Cylinder with 267653

MACHINE NO. 300w124

267709 Presser Bar Pressure Cylinder Cap  
201110X Presser Bar Pressure Cylinder Cap Screw  
994778 Presser Bar Pressure Cylinder Hose Connection  
931758 Presser Bar Pressure Cylinder Hose Connection Washer  
267710 Presser Bar Pressure Cylinder Plunger  
267653 Presser Bar Pressure Cylinder Plunger Bearing  
267711 Presser Bar Pressure Cylinder Plunger Disc  
1517C Presser Bar Pressure Cylinder Plunger Nut  
267712 Presser Bar Pressure Cylinder Plunger Washer (leather)  
267713 Presser Bar Pressure Cylinder Plunger Washer (steel)  
267714 Presser Bar Pressure Cylinder Support  
267650 Presser Bar Pressure Cylinder Support Retainer  
200098F Presser Bar Pressure Cylinder Support Retainer Screw (2)  
350579X Presser Bar Pressure Cylinder Support Stud  
201746X Presser Bar Pressure Cylinder Support Stud Nut  
67425 Presser Bar Pressure Cylinder Support Stud Nut Lock Washer  
267715 Presser Bar Pressure Cylinder complete, Nos. 67425, 267644,  
267645, 267708 to 267713, 267716, 350579X,  
931758, 994778, two each 1517C, 201110X  
and three 201746X  
267716 Presser Bar Spring  
267717 Presser Bar Spring Arm  
276025 Presser Bar Spring Arm Ball Bearing  
267718 Presser Bar Spring Arm Ball Bearing Retainer  
201409F Presser Bar Spring Arm Ball Bearing Retainer Screw (2)

MACHINE NO. 300w124

267644 Presser Bar Spring Arm Fork  
267645 Presser Bar Spring Arm Fork Lock Washer (nylon)  
267719 Presser Bar Spring Arm Fulcrum  
201254C Presser Bar Spring Arm Fulcrum Set Screw (2)  
267647 Presser Bar Spring Arm Hinge Buffer (leather)  
268620 Spreader with 268162  
268181 Spreader Bar  
268184 Spreader Bar Bearing  
200035E Spreader Bar Bearing Screw  
268186 Spreader Driving Connection with two 201020E  
268233 Spreader Driving Connection 268186 with 268063 and 351876  
201020E Spreader Driving Connection Cap Screw  
268063 Spreader Driving Connection Needle Bearing  
268187 Spreader Driving Crank with 200373C and 200403C  
200373C Spreader Driving Crank Position Screw  
200403C Spreader Driving Crank Set Screw  
268045 Spreader Driving Eccentric with two 200364C  
268046 Spreader Driving Eccentric Counter Balance with two 200364C  
200364C Spreader Driving Eccentric Counter Balance Set Screw  
200364C Spreader Driving Eccentric Set Screw  
268220 Spreader Driving Eccentric Thrust Washer (2)  
268190 Spreader Driving Pin  
268053 Spreader Driving Rock Shaft with 200064F  
268072 Spreader Driving Rock Shaft Collar with two 200386C (2)



MACHINE NO. 300w124

200386C Spreader Driving Rock Shaft Collar Set Screw  
268071 Spreader Driving Rock Shaft Needle Bearing (2)  
350466C Spreader Driving Rock Shaft Screw Stud  
351876 Spreader Driving Rock Shaft Screw Stud Ball Roller  
201736E Spreader Driving Rock Shaft Screw Stud Nut  
268730 Spreader Holder with two 200380C  
200380C Spreader Holder Set Screw  
268162 Spreader Point  
200544C Spreader Screw  
204925 Spreader Screw Washer  
267656 Thread Lubricator with 50608R, 139017, 350549C and three 236957  
236957 Thread Lubricator Oil Pad (felt)  
350549C Thread Lubricator Oil Pad Regulating Screw  
50608R Thread Lubricator Plug Screw  
139017 Thread Lubricator Plug Screw Washer  
200064D Thread Lubricator Screw  
267663 Throat Plate, for 267664  
200100E Throat Plate Screw (3)  
267657 Vibrating Presser Bar  
267658 Vibrating Presser Bar Hinge Stud  
267659 Vibrating Presser Foot with 200078F  
200078F Vibrating Presser Foot Finch Screw

ACCESSORIES  
FOR  
MACHINE NO. 300w124

994719	Air Compressor for Electric Transmitters S47 and S69
995475	Air Filter
160137	Air Hose
228732	Drip Pan
200019E	Drip Pan Screw (2)
52843	Drip Pan Screw Washer (leather) (4)
265306	Foot Lifter and Starting Treadle complete
268340	Looper Threading Wire
228452	Machine Base Oil Drain Jar complete
228444	Machine Cushion (neoprene) (4)
41400	Machine Rest Pin (wood)
228733	Machine Support (left)
228734	Machine Support (right)
62x59	Needles #23 (6)
228491	Pressure Oiler with 228715
225498	Screw Driver
228476	Screw Driver (Bobbin Case)
255542	Screw Driver
228745	Thread Unwinder complete
228451	Tweezers
202511	Wrench
249820	Wrench
255540	Wrench

ACCESSORIES  
FOR  
MACHINE NO. 300w124

267722      Presser Bar Pressure Control Valve complete  
265307      Bed Hinge Connection (2)  
350598E     Bed Hinge Connection Screw (4)  
228715      Nozzle Tip, for Pressure Oiler 228491  
268506      Looper Thread Guide (top of Arm) Bracket 263111  
   with 268505 and two 50169J