

SINGER
109-300

List of Parts Complete

for

Machine No. 109-300

List of Parts Complete

for

Machine No. 109-300

No.	Name
61001	Arm, Upper and Lower (solid) with 948E and 61038
57202	" Oil Tube for oiling 64267
56003	" " " with 52045, for oiling 61093
52045	" " " Packing (wick)
127768	" Rock Shaft
127769	" " " 127768 with 64253, 64254 and 127772
12147	" " " Back Bearing Oil Pad (felt)
64253	" " " Collar with two 624AL
624 AL	" " " " Set Screw
64254	" " " Crank (back) with four 1149AL
1149 AL	" " " " " Set Screw
127772	" " " " (front) with 448AL
127838	" " " " " Pin
448 AL	" " " " " Set Screw
18154	" " " Front Bearing Oil Pad (felt)
61003	" Rotary Shaft with 1498C and 57824
127854	" " " 61003 with 64366 and 127783
57781	" " " Bushing with 49093 and 64805
49093	" " " " Oil Pad (braided cotton) long
64805	" " " " " " " " short
832 C	" " " " Set Screw
54450	" " " Collar with two 1258AL
1258 AL	" " " " Set Screw

No.	NAME
61441	Arm Rotary Shaft Flanged Bushing with 49093 and 64805
49093	" " " " " Oil Pad (braided Cotton) long
64805	Arm Rotary Shaft Flanged Bushing Oil Pad (braided cotton) short
159 F	Arm Rotary Shaft Flanged Bushing SCrew
57824	" " " Oil Pad (felt)
144 D	" " " Screw
4288	" Side Cover
51224 D	" " " Thumb Screw
61082	Cloth Plate
1178 E	" " Adjusting Screw
1662 C	" " " " Lock Nut
61083	" " Slide
61085	Cloth Plate Slide complete, Nos. 61083, two 52683 and four 725J
52683	Cloth Plate Slide Spring
57334	" " " " Bracket
193 E	" " " " " Screw
725 J	" " " " Screw
61087	" " complete, Nos. 1178E, 1662C, 61082, 61085, two 57334 and four 193E
898 F	Cloth Plate Screw (large)
1011 F	" " " (small)
64267	Crank Connecting Rod with two each 896AL and 1057AL
64366	" " " 64267 with 50069C
50069 C	" " " Ball Screw Stud (upper)
1516 E	" " " " " " " Nut
64268	" " " " " " " Washer
896 AL	" " " Cap (lower) Screw

No.	Name
1057 AL	Crank Connecting Rod Cap (upper) Screw
57288	" " " Oil Case with 57290, 133190 and four each 185E and 448AL
57290	Crank Connecting Rod Oil Case Cap
133190	" " " " " " Packing
185 E	" " " " " " Screw
448 AL	" " " " " " Set Screw
57223	Face Plate
46111	" " Pin
51224 D	" " Thumb Screw
61018	Feed Bar with two 624AL
61459	" " 61018 with 127744
57225	" " Hinge Pin
624 AL	" " " " Set Screw
127554	" Dog, 17 teeth (13 teeth to the inch) for 127555
61298	" " 11 teeth (9 teeth to the inch) for 61299
61303	" " 11 teeth (9 teeth to the inch) for 61304
61431	" " 17 teeth (13 teeth to the inch) for 61432
57293	" " Packing, .005 in. thick
57294	" " " .012 in. thick
57321	" " " .021 in thick
1255 C	" " Screw
51061 AL	" Eccentric Body set screw
217 J	" " Set Screw
7071	" " " " Washer
57228	Feed Eccentric (adjustable) complete, Nos. 217J, 7071, 506530 and two 51061AL
130324	Feed Eccentric Connection with 127851 and 130328
130328	" " " Oil Cup

No.	Name
127851	Feed Eccentric Connection Oil Cup Oil Pad (braided cotton)
12774 ^h	" Lifting Connection
127730	" " Eccentric with 457AL
457 AL	" " " Set Screw
50653 C	" Regulating Screw
127509	" Rocking Frame with four 624AL
127787	" " " Bar
624 AL	" " " " Set Screw
57234	" " " Hinge Pin
57235	" " " " " Bushing
449 AL	" " " " " " Set Screw
624 AL	" " " " " Set Screw
61345	Looper, 5/32 in. shank
61297	" Carrier with three 503790
61474	" " Packing
Note: No. 61474 is furnished in thicknesses of .030 in., .046 in., .075 in., .085 in., .090 in. and .120 in. When ordering, state thickness required.	
127746	Looper Carrier Rock Shaft with 177C
61461	" " " " 127746 with 61361
127790	" " " " Connection with two 171AL, and four 1057AL
133131	Looper Carrier Rock Shaft Connection 127790 with 133130
133130	" " " " " Ball Stud
177 C	" " " " " " " Set Screw
171 AL	" " " " " Cap (lower) Screw
1057 AL	" " " " " " (upper) Screw (left)
1057 AL	" " " " " " " (right)
61361	" " " " Hinge Pin (eccentric)

No.	Name
61031	Looper Carrier Rock Shaft Hinge Pin Bushing
1299 AL	" " " " " " " " Set Screw
127760	" " " " " " " " Handle with 453AL and 1299AL
127761	Looper Carrier Rock Shaft Hinge Pin Handle 127760 with 1094D and 127762
1299 AL	Looper Carrier Rock Shaft Hinge Pin Handle Position Screw
453 AL	" " " " " " " " Set Screw
61034	" " " " " " " " Lock Pin
127762	" " " " " " " " Plate
1094 D	" " " " " " " " " " Screw
43566	" " " " " " " " " " Spring
12147	" " " " " " " " Oil Pad (felt)
717 C	" " " " " " " " Position Screw
1650 C	" " " " " " " " " " Nut
50448 C	" " " " " " " " " " Screw
1547 J	" " " " " " " " " " Nut
127597	" " " " " " " " " " Driving Shaft with two 61039
127783	" " " " " " " " " " 127597 with 127730
*61038	" " " " " " " " " " Bracket
948 E	" " " " " " " " " " Screw
59225	" " " " " " " " " " Hole Plug
46200	" " " " " " " " " " Oil Pad (felt) for oiling 127597
12147	" " " " " " " " " " " " 61361 and 127597
2117	Looper Driving Shaft Pin
61039	" " " " " " " " " " Plug
1498 C	" " " " " " " " " " Set Screw
61279	! Protector Stud

No.	Name
453 AL	Looper Protector Stud Set Screw
50379 C	" Set Screw
64259	Machine Pulley with two 51283AL
51283 AL	" " Set Screw
57244	Needle Bar (hollow)
133195	" " 57244 with 133196, for 1/8 in. gauge only
127559	" " 57244 with 127560, for 3/16 in. to 9/32 in. gauges
61421	Needle Bar 57244 with 61422, for 5/16 in. to 1 1/2 in. gauges
38456	Needle Bar Bushing (lower)
1133 AL	" " " " Set Screw
61042	" " " (upper)
1133 AL	" " " " Set Screw
61093	" " Connecting Link
12776	" " " " 61093 with 57940 and 133111
57940	" " " " Hinge Stud
1820 E	" " " " " " Nut
133111	" " " Stud with 50379C and two 187E
187 E	" " " " Clamping Screw
133196	" Clamp with three 904F, for 133195
127560	" " with three 50014F, for 127559
61422	" " with three 460F, for 61421
57314	" Guard with two 50239C
57251	" " Bar
57252	" " " Bracket (left) with 440AL
177 C	" " " " " Screw
57253	" " " " (right) with 440AL
177 C	" " " " " Screw

No.	Name
57254	Needle Guard Bar Bracket Holder
29627	" " " " " Dowel Pin
50154 D	" " " " " Screw
440 AL	" " " Set Screw
50239 C	" " Set Screw
904 F	" Set Screw for 133196
50014 F	" " " " 127560
460 F	" " " " 61422
57255	Presser Bar
61046	" " Bushing (lower)
1133 AL	" " " " Set Screw
38456	" " " (upper)
1133 AL	" " " " Set Screw
127836	" " Guide
61049	" " " Connecting Stud with 453AL
453 AL	" " " " " Set Screw
57257	" " Lifter
57258	" " " Hinge Pin
447 AL	" " " " " Set Screw
1872	" " " Roller And Stud
194 D	" " " Stop Screw
61047	" " Lifting Bracket with 460AL and 1872
61074	" " " Lever with 193F
57276	" " " " Connecting Rod
57277	" " " " " " Collar with twp 465 C
465 C	Presser Bar Lifting Lever Connecting Rod Collar Set Screw
24122	" " " " " " Spring

No.	Name
45057	Presser Bar Lifting Lever Connecting Rod Spring Stop Washer
61075	Presser Bar Lifting Lever Connecting Stud
460 AL	" " " " " " Set Screw
802 D	" " " " Hinge Screw
38467	" " Spring (flat)
38468	" " Stud
57815	" Foot (solid)
61347	" " (strip Folding)
18055	" " Hinge Pin
61370	" " Plate
61371	" " Shank
61372	Presser Foot (hinged) complete, Nos. 18055, 61370 and 61371
18055	" " Hinge Pin
61433	" " Plate
61413	" " Shank
35250	" " Spring
61434	" " (spring hinged) with Tape Guide complete, Nos. 18055, 35250, 61413 and 61433
18055	Presser Foot Hinge Pin
61454	" " Plate
61413	" " Shank
35250	" " Spring
61455	" " (spring hinged) complete, Nos. 18055, 35250, 61413 and 61454
18055	Presser Foot Hinge Pin
61412	" " Plate
61413	" " Shank
35250	" " Spring

No.	Name
61414	Presser Foot (spring hinged) complete, Nos. 18055, 35250, 61412 and 61413
176 J	Presser Foot Screw
574 W	Pressure Regulating Thumb Screw
1539 J	" " " " Lock Nut
61254	Slack Thread Controller
207 J	" " " Screw
127964	" " Regulator
127758	" " " Holder with 624AL
61281	" " " " Crank with 187E and 1963
187 E	" " " " " Clamping Screw
1963	" " " " " Roller and Stud
624 AL	" " " Set Screw
2102	Tension (under thread) Disc
51570 C	" " " Regulating Thumb Nut
50326 C	" " " Screw Stud
59539	" " " " " 50326C with 51570C
59534	" " " Spring
59537	" " " " Bushing (large)
59538	" " " " " (small)
17547	" " " Thread Guide
2102	" (upper thread) Disc
51570 C	" " " Regulating Thumb Nut
50326 C	" " " Screw Stud
59539	" " " " " 50326C with 51570C
59535	" " " Spring
59537	" " " " Bushing (large)
59538	" " " " " (small)

No.	Name
17547	Tension (upper thread) Thread Guide
57310	" Plate with 439D
439 D	" " Position Stud
57265	" " Spring
665 J	" " " Screw
32572	" Releasing Disc
57266	" " Lever
57267	" " " Connection
193 F	" " " " Set Screw
788 D	" " " Hinge Screw
57292	" " Pin (large)
54734	" " " (small)
57311	" " Plate
691 J	" " " Screw
61268	Thread (under) Controller
1521 E	" " " Nut
61255	" " Eyelet (back)
691 J	" " " " Screw
127578	" " " (front) and Regulator Stripper
208 J	" " " " " " " " Screw
61103	" " Protector
397 F	" " " Screw
127579	" " Regulator
208 J	" " " Screw
61270	" " Take-up
61105	" " " Driving Shaft
127580	" " " " " Bracket

No.	Name
127598	Thread (under) Take-up Driving Shaft Bracket 127580 with 61105
129 E	Thread (under) Take-up Driving Shaft Bracket Screw
61240	" " " " " Crank with 1019AL and 1454E
1454 E	Thread (under) Take-up Driving Shaft Crank Clamping Screw
61107	" " " Eccentric with two 448AL
61437	" " " " 61107 with 1131C, 1520E and 61108
61108	Thread (under) Take-up Eccentric Connection
1131 C	" " " " " Hinge Screw
1520 E	" " " " " " " Nut
448 AL	" " " " " Set Screw
61193	" " " Shaft
61067	" " " " Collar with 1034F
1034 F	" " " " " Set Screw
127581	" " " " Connecting Link
127584	" " " " " " 127581 with 61240, 61241 and two 40247
40247	Thread (under) Take-up Shaft Connecting Link Hinge Pin
1019 AL	" " " " " " " " " Set Screw
61241	Thread (under) Take-up Shaft Crank with 1019AL and 1454E
1454 E	" " " " " Clamping Screw
208 J	" " " Screw
61249	" (upper) Eyelet
190 J	" " " Screw
61250	" " Take-up
50379 C	" " " Set Screw
127555	Throat Plate for 127554

No.	Name
61299	Throat Plate for 61298
61304	" " extra large needle hole, for 61303
61432	" " for 61431
691 F	" " Screw