

Singer 71-42

HISTORICAL

DO NOT REMOVE

**LIST OF PARTS
COMPLETE**



NO. 71-42 MACHINE

The Singer Manufacturing Co.

LIST OF PARTS COMPLETE

FOR

NO. 71-42 MACHINE

Makes whip stitch, has no barring device,
knives from $\frac{3}{8}$ in. to 1 in. long, cuts
both threads and the hole auto-
matically after stitching

| | |
|--------|---------------------------------|
| *39644 | Arm with 24081..... |
| 8582 | " Dowel Pin..... |
| 748E | " Screw (back)..... |
| 868E | " " (front)..... |
| 23352 | " Shaft..... |
| *24081 | " " Bushing (front)..... |
| 12357 | " " Flanged Bushing (back)..... |
| 446C | " " " " " Set Screw..... |
| 4784 | " " Oil Pad..... |
| 1069D | " " Screw..... |
| 12193 | " Side Cover..... |
| 236D | " " " Thumb Screw..... |
| 23671 | " Top Cover..... |
| 808 | " " " Screw..... |
| *39603 | Bed with two 23372..... |
| 39538 | " Oil Guard..... |
| 1235 | " " " Screw..... |
| 23372 | " Support Stud..... |
| 23373 | Belt Cover..... |
| 39582 | " " Bracket..... |
| 183 | " " " Screw..... |
| 23375 | " " Hinge Block with 460C..... |
| 23376 | " " " " Pin..... |
| 460C | " " " " " Set Screw..... |
| 217 | " " Screw..... |
| 23567 | Clamp Arm..... |
| 625 | " " Adjusting Screw..... |
| 1547 | " " " " Nut..... |
| 39584 | " " Bracket with 196..... |
| 40003 | " " " Guide (left)..... |
| 217 | " " " " " Screw..... |
| 40004 | " " " " " (right)..... |

| | |
|-------|---|
| 217 | Clamp Arm Bracket Guide (right) Screw..... |
| 191c | " " " " Screw..... |
| 39541 | " " " " Washer..... |
| 23379 | " " " " Hinge Block..... |
| 23380 | " " " " Pin..... |
| 196 | " " " " Set Screw..... |
| 1231 | " " " " Screw..... |
| 40005 | Carrier..... |
| 40006 | " " Block with 40007 and four 404D..... |
| 40007 | " " " " Plate..... |
| 404D | " " " " Screw..... |
| 23384 | " " Connecting Rod..... |
| 52 | " " " " Hinge Screw..... |
| 39591 | " " Guide (left)..... |
| 756D | " " " " Screw (long)..... |
| 1345D | " " " " (short)..... |
| 40008 | " " " " (right)..... |
| 1230 | " " " " Screw..... |
| 39604 | " " Plate..... |
| 1231 | " " " " Screw (back)..... |
| 404D | " " " " (front)..... |
| 40010 | " " Regulator with 240D, 1960 and 39583..... |
| 1232c | " " " " Hinge Screw..... |
| 1960 | " " " " Roller and Screw Stud with 1520E..... |
| 1520E | Clamp Carrier Regulator Roller and Screw Stud Nut..... |
| 39544 | " " " " Slide..... |
| 1347c | " " " " Stud (to regulate length of button hole)..... |
| 1671c | Clamp Carrier Regulator Stud Nut..... |
| 39582 | " " " " Sleeve..... |
| 39583 | " " " " Stop..... |
| 240D | " " " " " " Screw..... |
| 39605 | " " Slide with 1345D, 39591 and two 756D..... |
| 23392 | " " " " Guide (left)..... |
| 914 | " " " " " " Screw..... |
| 23393 | " " " " " " (right)..... |
| 914 | " " " " " " Screw..... |
| 23394 | " " " " Lever with 1960..... |
| 23395 | " " " " Regulator..... |
| 23396 | " " " " " " Cap..... |
| 223D | " " " " " " " " Screw..... |
| 67D | " " " " " " " " Screw..... |
| 1960 | " " " " " " Roller and Screw Stud with 1520E..... |
| 1520E | Clamp Carrier Slide Lever Roller and Screw Stud Nut..... |
| 7278 | Clamp Carrier Slide Lever Socket Joint..... |

| | |
|--------|---|
| 1234c | Clamp Carrier Slide Regulating Stud..... |
| 23397 | " " " " " " Bushing..... |
| 1658c | " " " " " " Thumb Nut..... |
| 1256D | " " " " " " Screw..... |
| 39606 | " Check with 39607 and two each 237 and 1348c, for $\frac{3}{8}$ in. to $\frac{1}{4}$ in. button hole..... |
| 39639 | Clamp Check with 39607 and two each 237 and 1348c, for $\frac{3}{8}$ in. to 1 in. button hole..... |
| 39607 | Clamp Check Section and Cutting Plate..... |
| 237 | " " " " " " " " Screw..... |
| 1348c | " " " " " " " " Support Stud..... |
| 1297 | Clamp Check Screw..... |
| 40014 | " Lifting Arm..... |
| 40015 | " " " Connection..... |
| 41D | " " " " " " Hinge Screw..... |
| 1520D | " " " " " " " " Nut..... |
| 1901 | " " " " " " Roller and Screw Stud with 229D and 12424..... |
| 40016 | Clamp Lifting Arm Connection Roller and Screw Stud Bracket..... |
| 157 | Clamp Lifting Arm Connection Roller and Screw Stud Bracket Screw..... |
| 39541 | Clamp Lifting Arm Connection Roller and Screw Stud Bracket Screw Washer..... |
| 229D | Clamp Lifting Arm Connection Roller Cap Screw..... |
| 12424 | " " " " " " " " " " Washer..... |
| 199 | Clamp Lifting Arm Screw..... |
| 40017 | " " " " Stop..... |
| 40018 | " " " " Bracket..... |
| 162D | " " " " " " Screw..... |
| 38 | " " " " " " Hinge Screw..... |
| 1611E | " " " " " " Nut..... |
| 40019 | " " " " " " Pitman..... |
| 59D | " " " " " " Hinge Screw..... |
| 40020 | " Plate..... |
| 1235 | " " Screw..... |
| 23573 | " " Support..... |
| 402D | " " " " Screw..... |
| 23574 | " Post..... |
| 1659c | " Pressure Regulating Thumb Nut..... |
| 23404 | " Spring..... |
| 23693 | " " Bushing..... |
| 1294 | " " " " Position Stud..... |
| 1550 | " " " " " " Nut..... |
| 24028 | Crank Connecting Rod..... |
| *24085 | " " " " Cap..... |

| | | |
|-------|--|--|
| 23451 | Knife, 3/4 in. | |
| 23452 | " 1 3/16 " | |
| 23453 | " 7/8 " | |
| 23454 | " 1 5/16 " | |
| 23455 | " 1 " | |
| 23460 | " Bar | |
| 23461 | " " Connecting Link | |
| 1239 | " " " " Hinge Cap Screw | |
| 1240C | " " " " " Screw | |
| 23462 | " " " " Stud with 1319C | |
| 1319C | " " " " " Clamping Screw | |
| 23463 | " " Disengaging Lever | |
| 23464 | " " " " " Catch with 1963 | |
| 23465 | " " " " " Bracket | |
| 157 | " " " " " " Screw | |
| 90C | " " " " " " Hinge Screw | |
| 1963 | " " " " " " Roller and Stud | |
| 23468 | " " " " " " Spring | |
| 1241E | " " " " " " " Screw | |
| | Stud | |
| 23466 | Knife Bar Disengaging Lever Catch Tripping Point | |
| 23467 | " " " " " " " " | |
| | Collar with two 448C | |
| 448C | Knife Bar Disengaging Lever Catch Tripping Point Collar Set Screw | |
| 175D | Knife Bar Disengaging Lever Catch Tripping Point Screw | |
| 90C | Knife Bar Disengaging Lever Hinge Screw | |
| 23606 | " " " " " " Spring | |
| 1242E | " " " " " " " Screw | |
| 240D | " " " " " " " Stop Screw | |
| 23469 | " " Driving Lever | |
| 1290C | " " " " " " Hinge Screw | |
| 598C | " " " " " " Screw Stud | |
| 1520E | " " " " " " " Nut | |
| 23681 | " " " " " " Spring | |
| 805C | " " " " " " " Screw | |
| 23470 | " " " " " " (intermediate) | |
| 23471 | " " " " " " " Connecting Link | |
| 54C | Knife Bar Driving Lever (intermediate) Connecting Link Hinge Screw | |
| 1222C | Knife Bar Driving Lever (intermediate) Hinge Screw | |
| 1959 | " " " " " " " Roller and Screw Stud with 229D and 12424 | |
| 229D | Knife Bar Driving Lever (intermediate) Roller Cap Screw | |

| | | |
|-------|---|--|
| 12424 | Knife Bar Driving Lever (intermediate) Roller Cap Screw Washer | |
| 1287E | Knife Bar Plug Screw | |
| 12495 | " " " " " Rivet | |
| 23682 | " " Spring | |
| 39566 | " " Stop | |
| 39565 | Knife Bar Stop complete, Nos. 1673C, 23548 and 39566 | |
| 1673C | Knife Bar Stop Lock Nut | |
| 23548 | " " " " " Plug (fibre) | |
| 23473 | " Holder | |
| 1243C | " " Guide Stud | |
| 1608E | " " " " " Nut | |
| 157C | " " " " " Screw | |
| 1547D | " " " " " Nut | |
| 191C | " " " " " Screw | |
| 23390 | " " " " " Washer | |
| 39600 | Needle Bar (hollow) with 904 | |
| 23476 | " " " " " Connecting Link with 794E | |
| 794E | " " " " " " Adjusting Screw | |
| 1021E | " " " " " " Cap Screw | |
| 39601 | " " " " " " Stud with 1341C | |
| 1341C | " " " " " " " Set Screw | |
| 23477 | " " " " " " Crank with 858C, 1036C, 1065C and 1258C | |
| 1065C | " " " " " " Position Screw | |
| 858C | " " " " " " Set Screw | |
| 23478 | " " " " " " Frame with 4784 | |
| 23674 | " " " " " " " Cam and Bevel Gear | |
| 1244C | " " " " " " " " " Screw | |
| 23486 | " " " " " " " Driving Bevel Pinion with two 453C | |
| 453C | Needle Bar Frame Driving Bevel Pinion Set Screw | |
| 23675 | " " " " " " Pitman (regulator end) | |
| 23610 | " " " " " " (hinge screw end) | |
| 190C | " " " " " " " Adjusting Screw | |
| 7071 | " " " " " " " " " Washer | |
| 23676 | Needle Bar Frame Pitman (adjustable) complete, Nos. 23610, 23675 and two each 190C and 7071 | |
| 1042C | Needle Bar Frame Pitman Hinge Screw | |
| 1547D | " " " " " " " " " Nut | |
| 23677 | " " " " " " " Regulator with 1956 | |
| 1038C | " " " " " " " Adjusting Screw | |
| 7070 | " " " " " " " " " Sleeve | |
| 1589C | " " " " " " " " " Thumb Nut | |
| 1956 | Needle Bar Frame Regulator Roller and Screw Stud with 229D, 1655E and 23389 | |

| | |
|-------|--|
| 1655E | Needle Bar Frame Regulator Roller and Screw Stud Nut..... |
| 229D | Needle Bar Frame Regulator Roller Cap Screw |
| 23389 | " " " " " " " " Washer..... |
| 23667 | Needle Bar Frame Regulator Stud..... |
| 673 | " " " " " " " " Screw Centre..... |
| 1517D | " " " " " " " " Nut..... |
| 39608 | " " " " " " " " Plate..... |
| 404 | " " " " " " " " Screw..... |
| 904 | " " " " " " " " Set Screw..... |
| 24043 | Oscillating Rock Shaft..... |
| 23493 | Oscillating Rock Shaft complete, Nos. 4784, 23494 and 24043..... |
| 23494 | Oscillating Rock Shaft Hinge Pin with 23421..... |
| 23421 | " " " " " " " " Oil Hole Plug (leather)..... |
| 878D | Oscillating Rock Shaft Hinge Pin Oil Hole Stop Screw..... |
| 12459 | Oscillating Rock Shaft Hinge Pin Oil Hole Stop Screw Washer (leather)..... |
| 448C | Oscillating Rock Shaft Hinge Pin Set Screw..... |
| 4784 | " " " " " " " " Oil Pad..... |
| 23417 | " " " " " " " " Shaft..... |
| 24046 | " " " " " " " " Bushing (back)..... |
| 24047 | " " " " " " " " (front)..... |
| 23495 | " " " " " " " " Crank..... |
| 23496 | Oscillating Shaft Crank complete, Nos. 231C, 1636E, 23495 and 24050..... |
| 2269 | Oscillating Shaft Crank Pin..... |
| 231C | " " " " " " " " Set Screw..... |
| 19448 | " " " " " " " " Slide Block..... |
| 229D | " " " " " " " " Cap Screw..... |
| 12424 | " " " " " " " " " " Washer..... |
| 1035C | Oscillating Shaft Crank Slide Block Screw Stud..... |
| 1636E | " " " " " " " " " " Nut..... |
| 24050 | Oscillating Shaft Crank Slide Block complete, Nos. 229D, 1035C, 12424 and 19448..... |
| 23497 | Pulley (loose)..... |
| 40024 | " (tight)..... |
| 23499 | " " " " " " " " Counterbalance..... |
| 23034 | " " " " " " " " Rivet..... |
| 40025 | " " " " " " " " Pin..... |
| 23500 | Shuttle Bobbin..... |
| 15140 | " " " " " " " " Case Latch..... |
| 2973 | " " " " " " " " Lever..... |
| 2974 | " " " " " " " " Fulcrum Pin..... |

| | |
|-------|--|
| 2975 | Shuttle Bobbin-Case Latch Spring..... |
| 592E | " " " " " " " " Stop Screw..... |
| 15141 | " " " " " " " " Hinge, Nos. 2973, 2974 and 15140..... |
| 40026 | Shuttle Bobbin Case Position Finger..... |
| 2523 | " " " " " " " " Rivet..... |
| 40027 | Shuttle Bobbin Case complete, Nos. 591, 592E, 2523, 2975, 15141, 23680 and 40026..... |
| 40028 | Shuttle Body..... |
| 591 | " " " " " " " " Tension Regulating Screw..... |
| 23680 | " " " " " " " " Spring..... |
| 40029 | Shuttle, 1 1/16 in. diam., Nos. 23500, 40027 and 40028..... |
| 23505 | " " " " " " " " Driver with 462C..... |
| 2269 | " " " " " " " " Pin..... |
| 462C | " " " " " " " " Set Screw..... |
| 14049 | " " " " " " " " Race Back..... |
| 2532 | " " " " " " " " Position Pin..... |
| 2533 | " " " " " " " " Spring..... |
| 648D | " " " " " " " " Screw..... |
| 23506 | " " " " " " " " Body..... |
| 7326 | " " " " " " " " Cap..... |
| 662D | " " " " " " " " Screw..... |
| 23621 | Shuttle Race complete, Nos. 648D, 2533, 7326, 14049, 23506 and two each 662D and 2532..... |
| 145 | Shuttle Race Screw..... |
| 39627 | Starting Lever..... |
| 717C | " " " " " " " " Adjusting Screw..... |
| 1520E | " " " " " " " " " " Nut..... |
| 21643 | " " " " " " " " Belt Shifter..... |
| 159 | " " " " " " " " " " Screw..... |
| 23510 | " " " " " " " " Bracket..... |
| 8582 | " " " " " " " " " " Dowel Pin..... |
| 123E | " " " " " " " " " " Screw..... |
| 23511 | " " " " " " " " Rod..... |
| 61C | " " " " " " " " " " Hinge Screw..... |
| 564C | " " " " " " " " " " Screw Centre..... |
| 1508E | " " " " " " " " " " Nut..... |
| 14174 | " " " " " " " " " " Spring..... |
| 124 | " " " " " " " " " " Stop Screw..... |
| 1518E | " " " " " " " " " " Nut..... |
| 39628 | Stop Cam with 39629..... |
| 39580 | " " " " " " " " " " Interlocking Rod..... |
| 23514 | " " " " " " " " " " Guide with 1070C and 1959..... |
| 1070C | Stop Cam Interlocking Rod Guide Set Screw..... |
| 21650 | " " " " " " " " " " Washer (raw hide)..... |
| 21651 | Stop Cam Interlocking Rod Spring..... |

| | |
|-------|---|
| 913C | Stop Cam Interlocking Rod Spring Regulating Thumb Screw |
| 1638E | Stop Cam Interlocking Rod Spring Regulating Thumb Screw Nut |
| 39629 | Stop Cam Pin |
| 23515 | " " Spring (long) |
| 23516 | " " " (short) |
| 23517 | " " Cover with 23499 and two each 9780 and 28034 |
| 9780 | Stop Cam Spring Cover Position Pin |
| 997E | " " " " Screw |
| 39637 | " " " " Stop Block |
| 1349C | " " " " Screw |
| 39638 | " " " " Block |
| 457C | " " " " Set Screw |
| 23518 | " Lever |
| 78D | " " Hinge Screw |
| 9540 | " " Spring |
| 2102 | Tension Disc |
| 1560C | " Regulating Thumb Nut |
| 23519 | " Releaser with 200 |
| 40033 | " " Arm with 641C |
| 12538 | " " " Pin |
| 641C | " " " Set Screw |
| 200 | " " " Set Screw |
| 23520 | " " Shaft |
| 40034 | " " " Crank |
| 679C | " " " " Ball Screw Stud |
| 1520E | " " " " " " Nut |
| 2269 | " " " " Pin |
| 413 | " Screw Stud |
| 8238 | " Spring |
| 23669 | " Thread Guard |
| 460C | " " " Set Screw |
| 40035 | Thread (lower) Cutting Blade |
| 40036 | " " " " Carrier with 40038 |
| 40037 | " " " " " Lever |
| 32D | " " " " " " Hinge Screw |
| 15514 | Thread (lower) Cutting Blade Carrier Lever Spring |
| 1241E | " " " " " " " Screw Stud |
| 435C | Thread (lower) Cutting Blade Carrier Lever Stop Screw |
| 1520E | Thread (lower) Cutting Blade Carrier Lever Stop Screw Nut |
| 40038 | Thread (lower) Cutting Blade Carrier Stud |
| 240D | " " " " " Screw |

| | |
|-------|--|
| 40040 | Thread (lower) Cutting Lever |
| 1351C | " " " " Ball Screw |
| 1520E | " " " " " " Nut |
| 40039 | " " " " Pull-off Finger |
| 106D | " " " " Guide Screw |
| 1350C | " " " " Hinge Screw |
| 40048 | " (upper) Clamping Blade |
| 39609 | " " Cutting Blade |
| 39610 | " " " " Connecting Rod |
| 40043 | " " " " " " Collar (back) with 237 |
| 237 | Thread (upper) Cutting Blade Connecting Rod Collar (back) Set Screw |
| 40044 | Thread (upper) Cutting Blade Connecting Rod Collar (front) with 237 |
| 2273 | Thread (upper) Cutting Blade Connecting Rod Collar (front) Pin |
| 237 | Thread (upper) Cutting Blade Connecting Rod Collar (front) Set Screw |
| 40045 | Thread (upper) Cutting Blade Connecting Rod Collar (front) Washer (raw hide) |
| 106 | Thread (upper) Cutting Blade Connecting Rod Hinge Screw |
| 23606 | Thread (upper) Cutting Blade Connecting Rod Spring |
| 39611 | Thread (upper) Cutting Blade Connecting Rod Spring Bracket |
| 203 | Thread (upper) Cutting Blade Connecting Rod Spring Bracket Screw |
| 7071 | Thread (upper) Cutting Blade Connecting Rod Spring Bracket Screw Washer |
| 40047 | Thread (upper) Cutting Blade Connecting Rod Spring Collar with 646 |
| 646 | Thread (upper) Cutting Blade Connecting Rod Spring Collar Set Screw |
| 21699 | Thread (upper) Cutting Blade Position Pin |
| 219 | " " " " " Screw |
| 40049 | " " " " " Shaft with 21699 |
| 40050 | " " " " " Crank with 906C |
| 2269 | Thread (upper) Cutting Blade Shaft Crank Pin |
| 906C | " " " " " " Set Screw |
| 40051 | Thread (upper) Cutting Lever with 641C |
| 40052 | " " " " " Lock Pin |
| 40053 | " " " " " " Spring |
| 1352C | " " " " " " Screw Bushing |

| | |
|-------|--|
| 2117 | Thread (upper) Cutting Lever Pin..... |
| 641c | " " " " Set Screw..... |
| 40054 | " " " " Shaft..... |
| 40067 | " " " " Bracket..... |
| 966D | " " " " " Screw |
| 39612 | " " " " " Crank with two |
| | each 200 and 40059..... |
| 40057 | Thread (upper) Cutting Lever Shaft Crank Latch |
| 766D | " " " " " " " " |
| | Hinge Screw..... |
| 40058 | Thread (upper) Cutting Lever Shaft Crank Latch |
| | Spring..... |
| 206 | Thread (upper) Cutting Lever Shaft Crank Latch |
| | Spring Screw for 39612..... |
| 1144 | Thread (upper) Cutting Lever Shaft Crank Latch |
| | Spring Screw for 40057..... |
| 40059 | Thread (upper) Cutting Lever Shaft Crank Latch |
| | Stop Pin..... |
| 200 | Thread (upper) Cutting Lever Shaft Crank Set Screw |
| 40060 | " " " " Spring..... |
| 1241 | " " " " " Screw Stud.... |
| 717C | " " " " " Stop Screw..... |
| 1520E | " " " " " Nut..... |
| 12400 | " Retainer Sleeve..... |
| 12401 | " " Spring..... |
| 12402 | " " Stud..... |
| 460C | " " " Set Screw..... |
| 12399 | Thread Retainer complete, Nos. 12400 to 12402..... |
| 23523 | " Take-up Crank..... |
| 1036C | " " " Position Screw..... |
| 1258C | " " " Set Screw..... |
| 23524 | " " Lever..... |
| 12166 | " " " Hinge Pin..... |
| 23543 | " " " Link..... |
| 11204 | " " " " Hinge Pin..... |
| 430C | " " " " " Set Screw.... |
| 4784 | " " " " Oil Pad..... |
| 23525 | Thread Take-up Lever complete, Nos. 12166, 23524 |
| | and 23543..... |
| 7335 | Thread Take-up Spring..... |
| 23526 | " " " Regulator..... |
| 446C | " " " " Set Screw..... |
| 23527 | Drip Pan with two wood screws 1/2 in. No. 5 R. H. B. |
| 23679 | " " 1/8 in. deep..... |

IRON BASE FOR MACHINE

| | |
|-------|--|
| 23528 | Bed Frame Clamp Lifting Arm Stop..... |
| 162D | " " " " " Screw..... |
| 24106 | " " Cushion (felt)..... |
| 158E | " " " Screw..... |
| 19226 | " " Hinge Connection..... |
| 19397 | " " " " Cap..... |
| 211 | " " " " " Screw..... |
| 19398 | Bed Frame Hinge Connection complete, Nos. 211, |
| | 19226 and 19397..... |
| 16555 | Bed Frame Hinge Plate..... |
| 14010 | " " " Rivet..... |
| 23529 | Bed Frame with 23528, two each 162D, 16555, 19398, |
| | four each 158E, 24106 and six each 14010 and |
| | wood screws 1 1/4 in. No. 10..... |

ATTACHMENTS AND ACCESSORIES

| | |
|-------|---|
| 23530 | Gauge, for 1/4 in. to 1 in., for setting length of button |
| | hole..... |
| 23436 | Guide (back) for cuffs..... |
| 23437 | " (left) " "..... |
| 23438 | " (right) " "..... |
| 23439 | " (left) " collars..... |
| 23440 | " (right) " "..... |
| 23441 | " (corner) " "..... |
| 23549 | " for shirt bosoms..... |
| 23550 | " " " bands..... |
| 1238 | " Screw..... |
| 27133 | Machine Rest Pin (wood) 6 in. long, with 25070..... |
| 25070 | " " " Cushion Tack (rubber)..... |
| 25955 | Oiler with 25956..... |
| 25956 | " Spout, 8 1/2 in. long..... |
| 11831 | Screw Driver (machine) large..... |
| 26026 | " " " small..... |
| 26485 | " " (shuttle tension)..... |
| 14209 | Treadle..... |
| 39569 | " Chain, 45 in. long, with 39575 and 39576..... |
| 39570 | " Guide Bracket..... |
| 39571 | " " " Pulley..... |
| 1064D | " " " " Screw..... |
| 39575 | " " Hook (lower)..... |
| 39576 | " " " (upper)..... |
| 39572 | Treadle Chain Guide complete, Nos. 39570 and two |
| | each 1064D, 39571 and wood screws 1 1/4 in. |
| | No. 12 R. H. B..... |

| | |
|-------|---|
| 23551 | Treadle Chain Screw Eye..... |
| 7585 | “ Shaft..... |
| 14210 | “ Stand..... |
| 14211 | Treadle complete, Nos. 7585, 14209, 14210 and four wood screws 1¼ in. No. 12..... |
| 10875 | Wrench for 1518 and 1520..... |
| 21654 | “ “ 1508 and 1638..... |
| 23535 | “ “ 1671, for regulating length of button hole..... |

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

FOR NO. 23500

| | |
|-------|---|
| 27914 | Base with 27916 and two 28084..... |
| 27915 | “ Plate..... |
| 389 | “ “ Screw..... |
| 389 | “ Screw..... |
| 15072 | Bobbin Position Pin..... |
| 27916 | Brake (leather)..... |
| 28084 | “ Rivet..... |
| 27302 | Frame..... |
| 32D | “ Hinge Screw..... |
| 27917 | “ Spring..... |
| 27918 | Pulley..... |
| 27538 | Spindle with 15072..... |
| 27919 | Stop Latch..... |
| 35D | “ “ Hinge Screw..... |
| 27920 | Tension Bracket with 452C..... |
| 27921 | Tension Bracket complete, Nos. 5989, 10145, 27920 and 27922..... |
| 135D | Tension Bracket Screw..... |
| 2455 | “ Disc..... |
| 1562D | “ Regulating Thumb Nut..... |
| 418D | “ Screw Stud..... |
| 10141 | “ Spring..... |
| 10145 | “ Thread Guide..... |
| 5989 | Tension complete, Nos. 418D, 1562D, 10141 and two 2455..... |
| 27922 | Thread Eyelet Rod..... |
| 452C | “ “ “ Set Screw..... |
| 27923 | Bobbin Winder for 27924, Nos. 32D, 35D, 27302, 27538, 27914 and 27917 to 27919..... |
| 27924 | Bobbin Winder (swinging automatic, right hand) complete for 23500, Nos. 135D, 27915, 27921, 27923 and four 389..... |

TABLE BELT GUIDE

| | |
|-------|--|
| 23536 | Belt Guide with two 168E..... |
| 168E | “ “ Set Screw..... |
| 23537 | Bracket with 448C..... |
| 23538 | Pulley..... |
| 23539 | “ Shaft with 436C..... |
| 436C | “ “ Plug Screw..... |
| 448C | “ “ Set Screw..... |
| 23540 | Table Belt Guide complete, Nos. 23537, 23539, two each 23536, 23538 and three wood screws 1¼ in. No. 12 R. H. B..... |

THREAD UNWINDER

FOR TWO LARGE SPOOLS

| | |
|-------|---|
| 27555 | Spool Pin..... |
| 27583 | “ Rest..... |
| 27556 | “ “ 27583 with 138B and two 27555..... |
| 138B | “ “ Set Screw..... |
| 27557 | “ Stand with 138B..... |
| 27558 | “ Weight, 4 in. diam., with 27592..... |
| 27592 | “ “ Centre Pin..... |
| 27559 | Thread Guard..... |
| 27563 | “ “ “ Hub..... |
| 330B | “ “ “ Set Screw..... |
| 27560 | “ “ Rod, 26 in. long..... |
| 138B | “ “ “ Set Screw..... |
| 449C | “ “ Set Screw..... |
| 27561 | Thread Guard complete, Nos. 330B, 449C, 27559 and 27563..... |
| 27562 | Thread Unwinder complete, Nos. 27556, 27557, 27560, 27561, two 27558 and three wood screws 1¼ in. No. 12..... |