

PRICE LIST

OF

PARTS



MACHINES

Nos. 94-1, 94-2 and 94-10

THE SINGER MANUFACTURING COMPANY

COPYRIGHT
U. S. A.,
1914 AND 1918
BY
THE SINGER MANUFACTURING CO.
ALL RIGHTS RESERVED FOR ALL COUNTRIES

INDEX

	PAGE
ACCESSORIES.....	21
IRON BASE.....	21
MACHINE NO. 94-1.....	5
" " 94-2.....	10
" " 94-10.....	15
NUMERICAL LIST OF PARTS.....	23
OBSOLETE PARTS.....	21

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the part NUMBER in the **FIRST** column.

The number stamped on a Sewing Machine part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated
- C. Hardened only.
- D. Polished only.
- E. Soft, not Polished.
- F. Hardened and Polished.
- G.
- H. Blued.
- J. Plated only.
- K. Hardened and Plated.
- L. Brass or Gilt.
- M. Oxidized.
- P. Japanned.

These letters **MUST BE USED** when they appear in the list, and **AFTER** the number *as* in the list.

In this series

1 to 1500 and 50001 to 51500 are Screw Numbers.

1501 to 1800 are Nut Numbers.

1801 to 2000 are Roller Numbers.

2001 to 50000 and 52001 and upward are numbers of Machine Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are **NOT TO BE USED** in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

LIST OF PARTS COMPLETE

FOR

MACHINE No. 94-1

FOR GLOVE WORK. HAS ONE NEEDLE, ONE LOOPER, MAKES TWO-THREAD ELASTIC CHAIN STITCH, DROP FEED. MAXIMUM STITCH, 12 TO THE INCH. OBSOLETE

NO.	PLATE	NAME	EACH
*55751	—	Arm, upper and lower (solid).....	\$10 00
55752	6675	“ Rotary Shaft.....	1 00
55753	6675	“ Spool Pin.....	10
55754	6675	“ “ “ Bracket with 175D.....	30
	129D	6683 “ “ “ “ Screw.....	04
	175D	6678 “ “ “ Set Screw.....	02
55755	6675	Balance Wheel (2 in. pulley) and Needle Bar Lever Eccentric with two 425c.....	1 25
55756	6678	Balance Wheel and Needle Bar Lever Eccentric Handle (wood).....	03
50095D	6678	Balance Wheel and Needle Bar Lever Eccentric Handle Screw.....	08
	425c	6683 Balance Wheel and Needle Bar Lever Eccentric Set Screw.....	08
55757	6676	Cloth Plate with 55758 and two 401D.....	1 75
55758	6675	“ “ Extension.....	10
	401D	6683 “ “ “ Screw.....	02
55759	6675	“ “ Slide.....	20
55760	—	Cloth Plate complete, Nos. 176D, 195D, 55757, 55759, 55785 to 55788 and two 641D.....	3 25
	1008B	6683 Cloth Plate Screw.....	05
55761	6675	Feed Bar.....	75
55762	6678	“ “ Adjusting Collar with 209F.....	15
	209F	6678 “ “ “ “ Set Screw.....	02
55763	6678	“ “ Extension.....	1 00
	1394D	6678 “ “ “ Adjusting Screw.....	05
	175D	6678 “ “ “ Screw.....	02
55764	6678	“ “ “ Slide Block.....	30
55765	6675	“ “ Hinge Pin.....	10
	209F	6678 “ “ “ “ Set Screw.....	02
55766	6675	“ Connecting Rod with 152D.....	85
	152D	6683 “ “ “ Adjusting Screw.....	03
55767	6678	“ “ “ Hinge Stud.....	15

 
NO.	PLATE	NAME	EACH
209F	6678	Feed Connecting Rod Hinge Stud Set Screw.....	\$ 02
55768	6677	Feed Dog with 55827.....	50
50152D	6683	" " Screw.....	04
*55834	—	" Eccentric.....	1 00
*55770	—	" " Body.....	1 00
1186c	6678	" " " Set Screw.....	04
55771	6678	" " Indicator.....	30
50096D	6678	" " Thumb Screw.....	08
55835	6678	Feed Eccentric (adjustable) complete, Nos. 50096D, 55770, 55771, 55834 and two 1186c.....	2 50
55773	6675	Feed Rocking Frame with four 209F.....	1 00
304c	6683	" " " Screw Centre.....	06
1513J	6683	" " " " " Nut..	05
55774	6679	Looper.....	75
55775	6679	" Carrier with 171D and 1279F.....	1 50
50097c	6679	" " Hinge Screw.....	15
1655E	6679	" " " " Nut.....	04
55776	6680	Looper Carrier Pitman complete, Nos. 1708E, 1709E and 55778 to 55780.....	3 15
55777	6679	Looper Carrier Pitman Ball Stud (left). 171D 6679	25
		Clamping Screw.....	03
55777	6679	Looper Carrier Pitman Ball Stud (right). 1186D 6678	25
		Clamping Screw.....	04
*46238	—	Looper Carrier Pitman Cap (left).....	—
171E	6679	" " " " " Screw..	03
*46238	—	" " " " (right).....	—
171E	6679	" " " " " Screw.	03
*46239	—	" " " End Bearing (left).....	—
*46240	—	Looper Carrier Pitman End Bearing (right).....	—
55778	6680	Looper Carrier Pitman Head (left) Nos. 46238, 46239, 55777 and two 171E.....	1 50
55779	6680	Looper Carrier Pitman Head (right) Nos. 46238, 46240, 55777 and two 171E.....	1 50
55780	6680	Looper Carrier Pitman Rod.....	10
1708E	6683	" " " " Nut (left)...	03
1709E	6683	" " " " " (right)...	03
46244	6679	" " " Washer (fibre)...	02
55781	6679	" " Rock Shaft.....	3 00
55782	6679	" " " " Collar with two 209F.....	15

NO.	PLATE	NAME	EACH
209F	6679	Looper Carrier Rock Shaft Collar Set Screw.....	\$ 02
55783	6679	Looper Carrier Rock Shaft Crank (forked) with 1394D and two 200F.....	1 25
1394D	6679	Looper Carrier Rock Shaft Crank Adjusting Screw.....	05
200F	6679	Looper Carrier Rock Shaft Crank Set Screw.....	03
55840	6679	Looper Eccentric with two 882c.....	50
882c	6679	" " Set Screw.....	02
55785	6676	" Gate.....	75
176D	6679	" " Cap Screw.....	03
55786	6679	" " " Washer.....	05
55787	6679	" " Hinge Stud.....	25
55788	6680	" " Spring.....	15
641D	6683	" " " Screw.....	03
195D	6683	" " Stop Screw.....	02
1279F	6679	" Set Screw.....	02
55789	6681	Needle Bar.....	40
55790	6681	" " Connecting Bracket with 460c and two 237F.....	75
237F	6681	Needle Bar Connecting Bracket Set Screw	02
55791	6681	" " " Link.....	1 25
55792	6681	" " " " Hinge Pin..	30
460c	6681	" " " " " " Set Screw.....	02
55793	6676	Needle Bar Lever with 460c, 575D, 1186D and two 46289.....	2 50
55794	6680	Needle Bar Lever Connection complete, Nos. 1715c, 1716c and 55799 to 55801.	3 25
50098c	6683	Needle Bar Lever Connection Ball Screw Stud.....	20
575D	6683	Needle Bar Lever Connection Ball Screw Stud Clamping Screw.....	05
*55795	—	Needle Bar Lever Connection Cap (lower)	—
127D	6683	" " " " " " " Screw.....	04
*55796	—	Needle Bar Lever Connection Cap (upper)	—
127D	6683	" " " " " " " Screw.....	04
46289	6681	Needle Bar Lever Connection Cushion (rawhide).....	01
*55797	—	Needle Bar Lever Connection End Bearing (lower).....	—
*55798	—	Needle Bar Lever Connection End Bearing (upper).....	—

NO.	PLATE	NAME	EACH
55799	6680	Needle Bar Lever Connection Head (lower) Nos. 55795, 55797 and two 127b	\$1 50
55800	6680	Needle Bar Lever Connection Head (upper) Nos. 50098c, 55796, 55798 and two 127b	1 50
55801	6680	Needle Bar Lever Connection Rod	15
1715c	6683	" " " " Nut (lower)	05
1716c	6683	Needle Bar Lever Connection Rod Nut (upper)	05
55802	6680	Needle Bar Lever Hinge Stud with 457c	1 00
1507j	6683	" " " " Nut	05
457c	6683	" " " " Oil Hole Stop Screw	02
55803	6681	Needle Clamp with 552c and 55804	75
55804	6681	" " Thread Guard	02
552c	6681	" " Thumb Screw	10
55805	6681	Presser Bar	30
55806	6681	" " Guide Bracket with 1253f	40
1253f	6681	" " " " Set Screw	03
55807	6681	" " Lifter	30
648d	6681	" " " Screw	07
50099d	6681	" " Screw Stud	05
55808	6681	" " Spring	02
55809	6677	" Foot with 175d	60
175d	6678	" " Clamping Screw	02
55810	6678	Tension (under thread) Disc	05
1717j	6678	" " " Regulating Thumb Nut	12
50100e	6678	Tension (under thread) Screw Stud	25
55811	6678	" " " Spring	02
55812	6678	" " " Bushing	15
55810	6678	" (upper thread) Disc	05
55813	6678	" " " Eyelet (double)	05
190d	6678	" " " " Screw	03
1717j	6678	" " " Regulating Thumb Nut	12
50100e	6678	Tension (upper thread) Screw Stud	25
55811	6678	" " " Spring	02
55812	6678	" " " Bushing	15
55814	6681	Thread (under) Eyelet	05
55815	6682	" " Take-up with 460c	1 00
460c	6682	" " " Set Screw	02
55816	6682	" " " Staple	50
55817	6682	" " " Bracket	60
647d	6682	" " " " Screw	03

NO.	PLATE	NAME	EACH
55818	6682	Thread (under) Take-up Staple Spring	\$ 05
164d	6682	" " " " " "	
		Screw	04
55832	6682	Thread (under) Take-up Stripper	50
50128f	6682	" " " " Screw	04
55820	6682	" " " Thread Guard	15
203d	6682	" " " " " "	
		Screw	03
55830	6681	Thread (upper) Controller Post	50
1279f	6681	" " " " Set Screw	02
55831	6681	" " " Spring	05
229d	6681	" " " " Screw	02
55824	6681	" " Eyelet (front of arm)	05
190d	6681	" " " " " " Screw	03
55825	6681	" " " for 55793	05
190d	6681	" " " Screw	03
7071	6681	" " " Washer	01
55826	6681	" " Take-up	40
190d	6681	" " " Screw	03
55827	6677	" Retainer for 55768	05
55833	6677	Throat Plate for 55768	60
211f	6683	" " " Screw	02

**LIST OF PARTS COMPLETE
FOR**

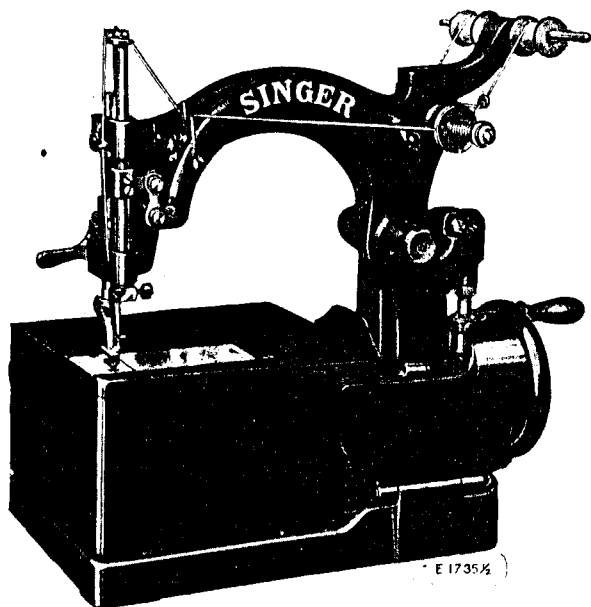

MACHINE No. 94-2

**FOR GLOVE WORK. HAS ONE NEEDLE, ONE LOOPER, MAKES TWO-
THREAD ELASTIC CHAIN STITCH. DROP FEED. MAXIMUM
STITCH, 8 TO THE INCH.**

NO.	PLATE	NAME	EACH
*55751	—	Arm, upper and lower (solid)	\$10 00
55752	6675	" Rotary Shaft	1 00
55753	6675	" Spool Pin	10
55754	6675	" " " Bracket with 175d	30
	129d 6683	" " " " Screw	04
	175d 6678	" " " " Set Screw	02
55755	6675	Balance Wheel (2 in. pulley) and Needle Bar Lever Eccentric with two 425c	1 25
55756	6678	Balance Wheel and Needle Bar Lever Eccentric Handle (wood)	03
50095d	6678	Balance Wheel and Needle Bar Lever Eccentric Handle Screw	08

NO.	PLATE	NAME	EACH
425c	6683	Balance Wheel and Needle Bar Lever Eccentric Set Screw	\$ 08
55757	6676	Cloth Plate with 55758 and two 401d	1 75
55758	6675	" " Extension	10
	401d 6683	" " " " Screw	02
55759	6675	" " Slide	20
55760	—	Cloth Plate complete, Nos. 176d, 195d, 55757, 55759, 55785 to 55788 and two 641d	3 25
	1008d 6683	Cloth Plate Screw	05
55836	6685	Feed Bar	75
55762	6678	" " Adjusting Collar with 209F	15
	209F 6678	" " " " Set Screw	02
55763	6678	" " Extension	1 00
	1394d 6678	" " " " Adjusting Screw	05
	175d 6678	" " " " Screw	02
55764	6678	" " " " Slide Block	30
55765	6675	" " Hinge Pin	10
	209F 6678	" " " " Set Screw	02
55766	6675	" Connecting Rod with 152d	85
	152d 6683	" " " " Adjusting Screw	03
55767	6678	" " " " Hinge Stud	15
	209F 6678	" " " " " " Set Screw	02
55837	6686	Feed Dog	50
	190d 6678	" " " " Screw	03
*55834	—	" Eccentric	1 00
*55770	—	" " " " Body	1 00
	1186c 6678	" " " " Set Screw	04
55771	6678	" " Indicator	30
50096d	6678	" " Thumb Screw	08
55835	6678	Feed Eccentric (adjustable) complete, Nos. 50096d, 55770, 55771, 55834 and two 1186c	2 50
55773	6675	Feed Rocking Frame with four 209F	1 00
	304c 6683	" " " " " " Screw Centre	06
	1513J 6683	" " " " " " Nut	05
55774	6679	Looper	75
55775	6679	" Carrier with 171d and 1279F	1 50
50097c	6679	" " " " Hinge Screw	15
	1655E 6679	" " " " " " Nut	04
55776	6680	Looper Carrier Pitman complete, Nos. 1708E, 1709E and 55778 to 55780	3 15
55777	6679	Looper Carrier Pitman Ball Stud (left)	25
	171d 6679	" " " " " " " "	
		Clamping Screw	03
55777	6679	Looper Carrier Pitman Ball Stud (right)	25


NO.	PLATE	NAME	EACH
1186D	6678	Looper Carrier Pitman Ball Stud (right)	
		Clamping Screw	\$ 04
*46238	—	Looper Carrier Pitman Cap (left)	—
171E	6679	“ “ “ “ “ Screw	03
*46238	—	“ “ “ “ (right)	—
171E	6679	“ “ “ “ “ Screw	03
*46239	—	“ “ “ End Bearing (left)	—
*46240	—	Looper Carrier Pitman End Bearing (right)	—
55778	6680	Looper Carrier Pitman Head (left) Nos. 46238, 46239, 55777 and two 171E	1 50
55779	6680	Looper Carrier Pitman Head (right) Nos. 46238, 46240, 55777 and two 171E	1 50
55780	6680	Looper Carrier Pitman Rod	10
1708E	6683	“ “ “ “ Nut (left)	03
1709E	6683	“ “ “ “ “ (right)	03
46244	6679	“ “ “ Washer (fibre)	02
55781	6679	“ “ “ Rock Shaft	3 00
55782	6679	“ “ “ “ Collar with two 209F	15
209F	6679	Looper Carrier Rock Shaft Collar Set Screw	02
55873	6685	Looper Carrier Rock Shaft Crank with two 200F	30
200F	6679	Looper Carrier Rock Shaft Crank Set Screw	03
55874	6685	Looper Eccentric with two 457c	50
55875	6685	“ “ “ Connection with 152J	75
152J	6683	“ “ “ “ Adjusting Screw	03
386C	6685	Looper Eccentric Connection Hinge Screw	08
1718E	6685	“ “ “ “ “ Nut	03
457C	6683	Looper Eccentric Set Screw	02
55785	6676	“ Gate	75
176D	6679	“ “ “ Cap Screw	03
55786	6679	“ “ “ “ Washer	05
55787	6679	“ “ “ Hinge Stud	25
55788	6680	“ “ “ Spring	15
641D	6683	“ “ “ “ Screw	03
195D	6683	“ “ “ Stop Screw	02
1279F	6679	“ “ “ Set Screw	02
55789	6681	Needle Bar	40
55790	6681	“ “ “ Connecting Bracket with 460c and two 237F	75

NO.	PLATE	NAME	EACH
237F	6681	Needle Bar Connecting Bracket Set Screw	\$ 02
55791	6681	“ “ “ “ Link	1 25
55792	6681	“ “ “ “ “ Hinge Pin	30
460C	6681	“ “ “ “ “ “ “ Set Screw	02
55793	6676	Needle Bar Lever with 460c, 575D, 1186D and two 46289	2 50
55794	6680	Needle Bar Lever Connection complete, Nos. 1715c, 1716c and 55799 to 55801	3 25
50098C	6683	Needle Bar Lever Connection Ball Screw Stud	20
575D	6683	Needle Bar Lever Connection Ball Screw Stud Clamping Screw	05
*55795	—	Needle Bar Lever Connection Cap (lower)	—
127D	6683	“ “ “ “ “ “ “ Screw	04
*55796	—	Needle Bar Lever Connection Cap (upper)	—
127D	6683	“ “ “ “ “ “ “ Screw	04
46289	6681	Needle Bar Lever Connection Cushion (rawhide)	01
*55797	—	Needle Bar Lever Connection End Bearing (lower)	—
*55798	—	Needle Bar Lever Connection End Bearing (upper)	—
55799	6680	Needle Bar Lever Connection Head (lower) Nos. 55795, 55797 and two 127D	1 50
55800	6680	Needle Bar Lever Connection Head (upper) Nos. 50098c, 55796, 55798 and two 127D	1 50
55801	6680	Needle Bar Lever Connection Rod	15
1715C	6683	“ “ “ “ “ Nut (lower)	05
1716C	6683	Needle Bar Lever Connection Rod Nut (upper)	05
55802	6680	Needle Bar Lever Hinge Stud with 457c	1 00
1507J	6683	“ “ “ “ “ Nut	05
457C	6683	“ “ “ “ “ “ Oil Hole Stop Screw	02
55803	6681	Needle Clamp with 552c and 55804	75
55804	6681	“ “ “ Thread Guard	02
552C	6681	“ “ “ Thumb Screw	10
55805	6681	Presser Bar	30
55806	6681	“ “ “ Guide Bracket with 1253F	40
1253F	6681	“ “ “ “ “ Set Screw	03
55807	6681	“ “ “ Lifter	30
648D	6681	“ “ “ “ “ Screw	07

NO.	PLATE	NAME	EACH
50099D	6681	Presser Bar Screw Stud.....	\$ 05
55808	6681	" " Spring.....	02
55809	6677	" Foot with 175D.....	60
	175D	" " Clamping Screw.....	02
55810	6678	Tension (under thread) Disc.....	05
	1717J	" " " Regulating Thumb Nut.....	12
50100E	6678	Tension (under thread) Screw Stud.....	25
55811	6678	" " " Spring.....	02
55812	6678	" " " " Bushing..	15
55810	6678	" (upper thread) Disc.....	05
55813	6678	" " " Eyelet (double)..	05
	190D	" " " " Screw....	03
	1717J	" " " Regulating Thumb Nut.....	12
50100E	6678	Tension (upper thread) Screw Stud.....	25
55811	6678	" " " Spring.....	02
55812	6678	" " " " Bushing..	15
55814	6681	Thread (under) Eyelet.....	05
55844	6685	" " Take-up with 50150c....	1 00
50150c	6685	" " " Set Screw.....	02
55842	6688	" " " Staple.....	50
55817	6682	" " " " Bracket	60
	647D	" " " " " "	
		Screw.....	03
55843	6688	Thread (under) Take-up Staple Spring	05
	164D	" " " " " "	
		Screw.....	04
55832	6682	Thread (under) Take-up Stripper.....	50
50128F	6682	" " " " Screw..	04
55820	6682	" " " Thread Guard	15
	203D	" " " " " "	
		Screw.....	03
55830	6681	Thread (upper) Controller Post.....	50
	1279F	" " " " Set Screw	02
55831	6681	" " " Spring.....	05
	229D	" " " " Screw..	02
55824	6681	" " Eyelet (front of arm)...	05
	190D	" " " " " " Screw	03
55825	6681	" " " for 55793.....	05
	190D	" " " Screw.....	03
	7071	" " " Washer....	01
55826	6681	" " Take-up.....	40
	190D	" " " Screw.....	03
55838	6686	" Retainer for 55837.....	20
	1161D	" " " Screw.....	02
55839	6686	Throat Plate for 55837.....	60
	211F	" " " Screw.....	02

LIST OF PARTS COMPLETE

 FOR

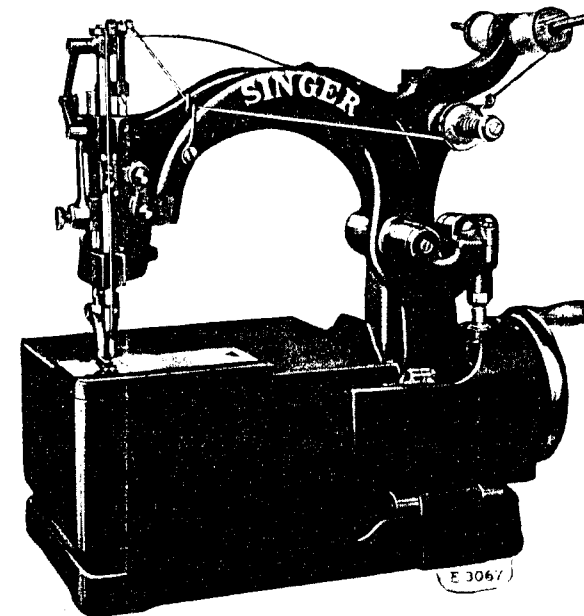

MACHINE No. 94-10

FOR MAKING GLOVES FROM SILK LISLE THREAD, TRICOT, MILANESE, ETC. ONE NEEDLE, ONE LOOPER. MAKES TWO-THREAD ELASTIC CHAIN STITCH. DROP FEED. VERTICAL TRIMMING ATTACHMENT TO TRIM FROM $\frac{3}{8}$ TO $\frac{5}{8}$ INCH FROM THE LINE OF STITCHING. MAKES 12 TO 30 STITCHES TO THE INCH.

NO.	PLATE	NAME	EACH
*55853	—	Arm, upper and lower (solid).....	\$12 00
55752	6675	" Rotary Shaft.....	1 00
55753	6675	" Spool Pin.....	10
55754	6675	" " " Bracket with 175D.....	30
	129D	" " " " Screw.....	04
	175D	" " " Set Screw.....	02
55755	6675	Balance Wheel (2 in. pulley) and Needle Bar Lever Eccentric with two 425c....	1 25
55756	6678	Balance Wheel and Needle Bar Lever Eccentric Handle (wood).....	03

NO.	PLATE	NAME	EACH
50095d	6678	Balance Wheel and Needle Bar Lever Eccentric Handle Screw.....	\$ 08
425c	6683	Balance Wheel and Needle Bar Lever Eccentric Set Screw.....	08
55854	6689	Cloth Plate with 55758 and two 401d....	1 75
55758	6675	" " Extension.....	10
401d	6683	" " " Screw.....	02
55855	6688	" " Slide.....	50
55856	—	Cloth Plate complete, Nos. 176d, 195d, 55785 to 55788, 55854, 55855 and two 641d.....	3 55
1008B	6683	Cloth Plate Screw.....	05
55836	6685	Feed Bar.....	75
55762	6678	" " Adjusting Collar with 209F.....	15
209F	6678	" " " " Set Screw.....	02
55763	6678	" " Extension.....	1 00
1394d	6678	" " " Adjusting Screw.....	05
175d	6678	" " " Screw.....	02
55764	6678	" " " Slide Block.....	30
55765	6675	" " Hinge Pin.....	10
209F	6678	" " " " Set Screw.....	02
55766	6675	" Connecting Rod with 152d.....	85
152d	6683	" " " Adjusting Screw....	03
55767	6678	" " " Hinge Stud.....	15
209F	6678	" " " " " S e t Screw.....	02
55857	6686	Feed Dog.....	50
190d	6678	" " Screw.....	03
*55834	—	" Eccentric.....	1 00
*55770	—	" " Body.....	1 00
1186c	6678	" " " Set Screw.....	04
55771	6678	" " Indicator.....	30
50096d	6678	" " Thumb Screw.....	08
55835	6678	Feed Eccentric (adjustable) complete, Nos. 50096d, 55770, 55771, 55834 and two 1186c.....	2 50
55773	6675	Feed Rocking Frame with four 209F.....	1 00
304c	6683	" " " Screw Centre.....	06
1513J	6683	" " " " " Nut..	05
55858	6687	Knife.....	08
NOTE: Five No. 55858 are sent with this machine.			
55859	6687	Knife Bar.....	40
55860	6687	" " Driving Crank.....	1 00
55861	6687	" " " " Hinge Stud....	15
624c	6687	" " " " " " Set Screw.....	03

NO.	PLATE	NAME	EACH
55862	6687	Knife Bar Driving Slide.....	\$ 50
55863	6687	" " " " Connecting Link.....	1 00
55864	6687	Knife Bar Driving Slide Coupling Pin	10
733d	6687	" " " " " " "	08
1563d	6687	Bushing.....	08
55865	6687	Knife Bar Driving Slide Coupling Pin Head.....	04
55866	6687	Knife Bar Driving Slide Coupling Pin Spring.....	01
55866	6687	Knife Bar Connecting Link.....	1 00
243F	6687	" " " " Cap Screw...	03
93c	6687	" " " " Hinge Screw.	04
55867	6687	" " " Stud with 211F...	50
211F	6683	" " " " Cl a m p i n g Screw.....	02
55868	6687	Knife Bar Guide with 904c.....	50
55869	6687	" " " Pin.....	02
910c	6687	" " " " Set Screw.....	03
904c	6687	" " " Set Screw.....	02
55870	6687	" " Lifting Spring.....	15
1423d	6687	" " " " Screw.....	04
287d	6687	" " Thumb Screw.....	10
55871	6687	" Clamp.....	40
50117d	6687	" " Screw.....	02
55872	6687	" Holder.....	75
1100d	6687	" " Screw.....	02
55774	6679	Looper.....	75
55775	6679	" Carrier with 171d and 1279F.....	1 50
50097c	6679	" " Hinge Screw.....	15
1655E	6679	" " " " Nut.....	04
55776	6680	Looper Carrier Pitman complete, Nos. 1708E, 1709E and 55778 to 55780.....	3 15
55777	6679	Looper Carrier Pitman Ball Stud (left). " " " " " "	25
171d	6679	" " " " " "	03
55777	6679	Clamping Screw.....	03
55777	6679	Looper Carrier Pitman Ball Stud (right). " " " " " "	25
1186d	6678	" " " " " "	04
46238	—	Clamping Screw.....	01
*46238	—	Looper Carrier Pitman Cap (left).....	—
171E	6679	" " " " " Screw..	03
*46238	—	" " " " (right).....	—
171E	6679	" " " " " Screw.	03
*46239	—	" " " " E n d B e a r i n g (left).....	—
*46240	—	Looper Carrier Pitman End Bearing (right).....	—

PARTS FOR MACHINE NO. 94-10

NO.	PLATE	NAME	EACH
55778	6680	Looper Carrier Pitman Head (left) Nos. 46238, 46239, 55777 and two 171E.....	\$1 50
55779	6680	Looper Carrier Pitman Head (right) Nos. 46238, 46240, 55777 and two 171E.....	1 50
55780	6680	Looper Carrier Pitman Rod.....	10
1708E	6683	" " " " Nut (left).....	03
1709E	6683	" " " " " (right).....	03
46244	6679	" " " Washer (fibre).....	02
55781	6679	" " Rock Shaft.....	3 00
55782	6679	" " " " Collar with two 209F.....	15
209F	6679	Looper Carrier Rock Shaft Collar Set Screw.....	02
55873	6685	Looper Carrier Rock Shaft Crank with two 200F.....	30
200F	6679	Looper Carrier Rock Shaft Crank Set Screw.....	03
55874	6685	Looper Eccentric with two 457c.....	50
55875	6685	" " Connection with 152J.....	75
152J	6683	" " " Adjusting Screw.....	03
386c	6685	Looper Eccentric Connection Hinge Screw	08
1718E	6685	" " " " " "	
		Nut.....	03
457C	6683	Looper Eccentric Set Screw.....	02
55785	6676	" Gate.....	75
176D	6679	" " Cap Screw.....	03
55786	6679	" " " Washer.....	05
55787	6679	" " Hinge Stud.....	25
55788	6680	" " Spring.....	15
641D	6683	" " " Screw.....	03
195D	6683	" " Stop Screw.....	02
1279F	6679	" Set Screw.....	02
55876	6685	Needle Bar.....	40
55790	6681	" " Connecting Bracket with 460c and two 237F.....	75
237F	6681	Needle Bar Connecting Bracket Set Screw	02
55791	6681	" " " Link.....	1 25
55792	6681	" " " " Hinge Pin.....	30
460C	6681	" " " " " " Set Screw.....	02
55793	6676	Needle Bar Lever with 460c, 575D, 1186D and two 46289.....	2 50
55794	6680	Needle Bar Lever Connection complete, Nos. 1715c, 1716c and 55799 to 55801.....	3 25
50098c	6683	Needle Bar Lever Connection Ball Screw Stud.....	20

PARTS FOR MACHINE NO. 94-10

NO.	PLATE	NAME	EACH
575D	6683	Needle Bar Lever Connection Ball Screw Stud Clamping Screw.....	\$ 05
*55795	—	Needle Bar Lever Connection Cap (lower)	—
127D	6683	" " " " " "	
		Screw.....	04
*55796	—	Needle Bar Lever Connection Cap (upper)	—
127D	6683	" " " " " "	
		Screw.....	04
46289	6681	Needle Bar Lever Connection Cushion (rawhide).....	01
*55797	—	Needle Bar Lever Connection End Bearing (lower).....	—
*55798	—	Needle Bar Lever Connection End Bearing (upper).....	—
55799	6680	Needle Bar Lever Connection Head (lower) Nos. 55795, 55797 and two 127D	1 50
55800	6680	Needle Bar Lever Connection Head (upper) Nos. 50098c, 55796, 55798 and two 127D.....	1 50
55801	6680	Needle Bar Lever Connection Rod.....	15
1715c	6683	" " " " " Nut	
		(lower).....	05
1716c	6683	Needle Bar Lever Connection Rod Nut (upper).....	05
55802	6680	Needle Bar Lever Hinge Stud with 457c.	1 00
1507J	6683	" " " " " Nut.....	05
457c	6683	" " " " " Oil Hole Stop Screw.....	02
1072F	6685	Needle Set Screw.....	02
55805	6681	Presser Bar.....	30
55884	6685	" " Guide Bracket with 1253F.....	40
1253F	6681	" " " Set Screw.....	03
55807	6681	" " Lifter.....	30
648D	6681	" " Screw.....	07
50099D	6681	" " Screw Stud.....	05
55808	6681	" " Spring.....	02
55877	6686	" Foot with 175D.....	60
175D	6678	" " Clamping Screw.....	02
55810	6678	Tension (under thread) Disc.....	05
1717J	6678	" " " Regulating Thumb Nut.....	12
50100E	6678	Tension (under thread) Screw Stud.....	25
55811	6678	" " " Spring.....	02
55812	6678	" " " Bushing.....	15
55810	6678	" (upper thread) Disc.....	05
55813	6678	" " " Eyelet (double).....	05
190D	6678	" " " Screw.....	03

NO.	PLATE	NAME	EACH
1717J	6678	Tension (upper thread) R e g u l a t i n g Thumb Nut.....	\$ 12
50100E	6678	Tension (upper thread) Screw Stud.....	25
55811	6678	" " " Spring.....	02
55812	6678	" " " " Bushing....	15
55814	6681	Thread (under) Eyelet.....	05
55844	6685	" " " Take-up with 50150c....	1 00
50150c	6685	" " " Set Screw.....	02
55842	6688	" " " Staple.....	50
55817	6682	" " " " Bracket	60
647D	6682	" " " " " "	
		Screw.....	03
55843	6688	Thread (under) Take-up Staple Spring	05
164D	6682	" " " " " "	
		Screw.....	04
55832	6682	Thread (under) Take-up Stripper.....	50
50128F	6682	" " " " Screw..	04
55820	6682	" " " Thread Guard	15
203D	6682	" " " " " "	
		Screw.....	03
55830	6681	Thread (upper) Controller Post.....	50
853C	6685	" " " " Set Screw	02
55831	6681	" " " Spring.....	05
229D	6681	" " " " Screw..	02
55825	6681	" " Eyelet for 55793.....	05
190D	6681	" " " Screw.....	03
7071	6681	" " " " Washer....	01
55878	6685	" " Take-up.....	40
190D	6681	" " " Screw.....	03
55838	6686	" Retainer for 55857.....	20
1161D	6686	" " Screw.....	02
55879	—	Throat Plate Body.....	1 00
55880	6686	" " Cutting Bar.....	30
NOTE: No. 55880, $\frac{1}{16}$ in. gauge, is sent with this machine unless another gauge is specified on order.			
NOTE: When ordering No. 55880 state required distance of trimmed edge from seam.			
239D	6686	Throat Plate Cutting Bar Screw.....	02
55881	6686	" " Slide.....	25
55882	6686	" " " Spring.....	05
50169D	6686	" " " " Screw.....	02
55883	6686	Throat Plate complete, Nos. 239D, 50169D and 55879 to 55882.....	1 65
NOTE: No. 55883, $\frac{3}{4}$ in. gauge, is sent with this machine unless another gauge is specified on order.			
NOTE: When ordering No. 55883, state required distance of trimmed edge from seam.			
211F	6683	Throat Plate Screw.....	02

IRON BASE

NO.	PLATE	NAME	EACH
55845	6689	Machine Base.....	\$1 25
55846	6689	" " Balance Wheel Cover (back).....	20
55847	6688	Machine Base Balance Wheel Cover (back) Hinge Pin.....	02
55848	6689	Machine Base Balance Wheel Cover (front).....	25
55849	6688	Machine Base Balance Wheel Cover (front) Hinge Pin.....	03
55850	6688	Machine Base Balance Wheel Cover Lock Spring.....	03
219D	6688	Machine Base Balance Wheel Cover Lock Spring Screw.....	02
4718	6688	Machine Base Cushion (felt).....	01
42088	6688	" Cushion (felt).....	02
174D	6688	" " Screw.....	02
55851	6689	Machine Base with Balance Wheel Covers complete, Nos. 219D, 55845 to 55850 and four each 174D, 4718, 42088 and wood screws $1\frac{1}{4}$ in. No. 12.....	2 00

ACCESSORIES

NO.	PLATE	NAME	EACH
50344J	6688	Machine Thumb Screw.....	20
9842	6678	" " " Washer.....	02
36578	6680	Oiler (copper plated) with 36579.....	10
36579	6680	" Spout, 3 in. long.....	06
26151	6680	Screw Driver.....	10
55829	6680	Threading Wire.....	05
35143	6680	Tweezers, 4 in.....	10

OBSOLETE PARTS

NO.	PLATE	NAME	EACH
*55769	—	Feed Eccentric for 55772.....	\$ 1 00
55772	6684	Feed Eccentric (adjustable) complete for 94-1 Machine, Nos. 50096D, 55769 to 55771 and two H86c.....	2 50
55783	6679	Looper Carrier Rock Shaft Crank (forked) with 1394D and two 200F, for 94-2 Machine.....	1 25

OBSOLETE PARTS

NO.	PLATE	NAME	EACH
1394d	6679	Looper Carrier Rock Shaft Crank Adjusting Screw for 55783	\$ 05
55784	6684	Looper Eccentric with 1133c, for 94-1 Machine, use 55840	50
55840	6679	Looper Eccentric with two 882c, for 94-2 Machine	50
1133c	6684	Looper Eccentric Set Screw for 55784	02
882c	6679	" " " " " 55840	02
55815	6682	Thread (under) Take-up with 460c, for 94-2 Machine, use 55844	1 00
460c	6682	Thread (under) Take-up Set Screw for 55815	02
55816	6682	Thread (under) Take-up Staple for 94-2 Machine	50
55818	6682	Thread (under) Take-up Staple Spring for 94-2 Machine	05
55819	6684	Thread (under) Take-up Stripper for 94-1 Machine	50
389f	6684	Thread (under) Take-up Stripper Screw for 94-1 Machine	04
55821	6684	Thread (upper) Controller Post for 94-1 Machine	50
55822	6684	Thread (upper) Controller Spring for 94-1 Machine	05
55828	6684	Throat Plate for 55768	60
50156d	6683	" " Screw for 55828	02

NUMERICAL LIST OF PARTS

FOR

MACHINES

Nos. 94-1, 94-2 and 94-10

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
93c	6687	Knife Bar Connecting Link Hinge Screw for 94-10 Machine.....	\$ 01
127d	6683	Needle Bar Lever Connection Cap (lower) Screw for 55799.....	04
127d	6683	Needle Bar Lever Connection Cap (upper) Screw for 55800.....	04
129b	6683	Arm Spool Pin Bracket Screw.....	04
152b	6683	Feed Connecting Rod Adjusting Screw for 55766.....	03
152c	6683	Looper Eccentric Connection Adjusting Screw for 55875.....	03
164b	6682	Thread (under) Take-up Staple Spring Screw.....	04
171d	6679	Looper Carrier Pitman Ball Stud (left) Clamping Screw for 55775.....	03
171E	6679	Looper Carrier Pitman Cap (left) Screw for 55778.....	03
171E	6679	Looper Carrier Pitman Cap (right) Screw for 55779.....	03
174d	6688	Machine Cushion Screw for 55851.....	02
175b	6678	Arm Spool Pin Set Screw for 55754.....	02
175d	6678	Feed Bar Extension Screw.....	02
175d	6678	Presser Foot Clamping Screw for 55809 and 55877.....	02
176d	6679	Looper Gate Cap Screw for 55769 and 55856.....	03
190b	6678	Feed Dog Screw for 94-2 and 94-10 Machines.....	03
190b	6678	Tension (upper thread) Eyelet Screw.....	03
190b	6681	Thread (upper) Eyelet (front of arm) Screw for 94-1 and 94-2 Machines.....	03
190b	6681	Thread (upper) Eyelet Screw.....	03
190b	6681	“ “ Take-up Screw.....	03
195d	6683	Looper Gate Stop Screw for 55769 and 55856.....	02
200F	6679	Looper Carrier Rock Shaft Crank Set Screw for 55783 and 55873.....	03
203d	6682	Thread (under) Take-up Thread Guard Screw.....	03
209F	6678	Feed Bar Adjusting Collar Set Screw for 55762.....	02

NO.	PLATE	NAME	EACH
209F	6678	Feed Bar Hinge Pin Set Screw for 55773.	\$ 02
209F	6678	" Connecting Rod Hinge Stud Set Screw for 55773.....	02
209F	6679	Looper Carrier Rock Shaft Collar Set Screw for 55782.....	02
211F	6683	Knife Bar Connecting Stud Clamping Screw for 55867.....	02
211F	6683	Throat Plate Screw.....	02
219D	6688	Machine Base Balance Wheel Cover Lock Spring Screw for 55851.....	02
229D	6681	Thread (upper) Controller Spring Screw.	02
237F	6681	Needle Bar Connecting Bracket Set Screw for 55790.....	02
239D	6686	Throat Plate Cutting Bar Screw for 55883	02
243F	6687	Knife Bar Connecting Link Cap Screw for 94-10 Machine.....	03
287D	6687	Knife Bar Thumb Screw for 94-10 Machine.....	10
304C	6683	Feed Rocking Frame Screw Centre.....	06
386C	6685	Looper Eccentric Connection Hinge Screw for 94-2 and 94-10 Machines.....	08
389F	6684	Thread (under) Take-up Stripper Screw for 94-1 Machine, obsolete.....	04
401D	6683	Cloth Plate Extension Screw for 55757 and 55854.....	02
425C	6683	Balance Wheel and Needle Bar Lever Eccentric Set Screw for 55755.....	08
457C	6683	Looper Eccentric Set Screw for 55874.....	02
457C	6683	Needle Bar Lever Hinge Stud Oil Hole Stop Screw for 55802.....	02
460C	6681	Needle Bar Connecting Link Hinge Pin Set Screw for 55790 and 55793.....	02
460C	6682	Thread (under) Take-up Set Screw for 55815, obsolete.....	02
552C	6681	Needle Clamp Thumb Screw for 55803.....	10
575D	6683	" Bar Lever Connection Ball Screw Stud Clamping Screw for 55793.....	05
624C	6687	Knife Bar Driving Crank Hinge Stud Set Screw for 94-10 Machine.....	03
641D	6683	Looper Gate Spring Screw for 55760 and 55856.....	03
647D	6682	Thread (under) Take-up Staple Bracket Screw.....	03
648D	6681	Presser Bar Lifter Screw.....	07
733D	6687	Knife Bar Driving Slide Coupling Pin Bushing for 94-10 Machine.....	08

NO.	PLATE	NAME	EACH
853C	6685	Thread (upper) Controller Post Set Screw for 94-10 Machine.....	\$ 02
882C	6679	Looper Eccentric Set Screw for 55840, obsolete.....	02
904C	6687	Knife Bar Guide Set Screw for 55868.....	02
910C	6687	" " " Pin Set Screw for 94-10 Machine.....	03
1008B	6683	Cloth Plate Screw.....	05
1072F	6685	Needle Set Screw for 94-10 Machine.....	02
1100D	6687	Knife Holder Screw for 94-10 Machine...	02
1133C	6684	Looper Eccentric Set Screw for 55784, obsolete.....	02
1161D	6686	Thread Retainer Screw for 94-2 and 94-10 Machines.....	02
1186C	6678	Feed Eccentric Body Set Screw for 55772 and 55835.....	04
1186D	6678	Looper Carrier Pitman Ball Stud (right) Clamping Screw for 55793.....	04
1253F	6681	Presser Bar Guide Bracket Set Screw for 55806 and 55884.....	03
1279F	6679	Looper Set Screw for 55775.....	02
1279F	6681	Thread (upper) Controller Post Set Screw for 94-1 and 94-2 Machines.....	02
1394D	6678	Feed Bar Extension Adjusting Screw....	05
1394D	6679	Looper Carrier Rock Shaft Crank Adjusting Screw for 55783, obsolete.....	05
1423D	6687	Knife Bar Lifting Spring Screw for 94-10 Machine.....	04
1507J	6683	Needle Bar Lever Hinge Stud Nut.....	05
1513J	6683	Feed Rocking Frame Screw Centre Nut.	05
1563D	6687	Knife Bar Driving Slide Coupling Pin Head for 94-10 Machine.....	04
1655E	6679	Looper Carrier Hinge Screw Nut.....	04
1708E	6683	" " Pitman Rod Nut (left) for 55776.....	03
1709E	6683	Looper Carrier Pitman Rod Nut (right) for 55776.....	03
1715C	6683	Needle Bar Lever Connection Rod Nut (lower) for 55794.....	05
1716C	6683	Needle Bar Lever Connection Rod Nut (upper) for 55794.....	05
1717J	6678	Tension (under thread) Regulating Thumb Nut.....	12
1717J	6678	Tension (upper thread) Regulating Thumb Nut.....	12
1718E	6685	Looper Eccentric Connection Hinge Screw Nut for 94-2 and 94-10 Machines.....	03

NO.	PLATE	NAME	EACH
4718	6688	Machine Base Cushion (felt) for 55851...	\$ 01
7071	6681	Thread (upper) Eyelet Screw Washer...	01
9842	6678	Machine Thumb Screw Washer (Accessories).....	02
26151	6680	Screw Driver (Accessories).....	10
35143	6680	Tweezers, 4 in. (Accessories).....	10
36578	6680	Oiler (copper plated) with 36579 (Accessories).....	10
36579	6680	Oiler Spout, 3 in. long. for 36578.....	06
42088	6688	Machine Cushion (felt) for 55851.....	02
*46238	—	Looper Carrier Pitman Cap (left) for 55778.....	—
*46238	—	Looper Carrier Pitman Cap (right) for 55779.....	—
*46239	—	Looper Carrier Pitman End Bearing (left) for 55778.....	—
*46240	—	Looper Carrier Pitman End Bearing (right) for 55779.....	—
46244	6679	Looper Carrier Pitman Washer (fibre)...	02
46289	6681	Needle Bar Lever Connection Cushion (rawhide) for 55793.....	01
50095d	6678	Balance Wheel and Needle Bar Lever Eccentric Handle Screw.....	08
50096d	6678	Feed Eccentric Thumb Screw for 55772 and 55835.....	08
50097c	6679	Looper Carrier Hinge Screw.....	15
50098c	6683	Needle Bar Lever Connection Ball Screw Stud for 55800.....	20
50099d	6681	Presser Bar Screw Stud.....	05
50100e	6678	Tension (under thread) Screw Stud.....	25
50100e	6678	" (upper thread) Screw Stud.....	25
50117d	6687	Knife Clamp Screw for 94-10 Machine...	02
50128e	6682	Thread (under) Take-up Stripper Screw...	04
50150c	6685	" " " Set Screw for 55844.....	02
50152d	6683	Feed Dog Screw for 94-1 Machine, obsolete.....	04
50156d	6683	Throat Plate Screw for 55828, obsolete...	02
50169d	6686	" " Slide Spring Screw for 55883	02
50344d	6688	Machine Thumb Screw (Accessories).....	20
*55751	—	Arm, upper and lower (solid) for 94-1 and 94-2 Machines.....	10 00
55752	6675	Arm Rotary Shaft.....	1 00
55753	6675	" Spool Pin.....	10
55754	6675	" " Bracket with 175d.....	30
55755	6675	Balance Wheel (2 in. pulley) and Needle Bar Lever Eccentric with two 425c....	1 25

NO.	PLATE	NAME	EACH
55756	6678	Balance Wheel and Needle Bar Lever Eccentric Handle (wood).....	\$ 03
55757	6676	Cloth Plate with 55758 and two 401d, for 55760.....	1 75
55758	6675	Cloth Plate Extension for 55757 and 55854	10
55759	6675	" " Slide for 55760.....	20
55760	—	Cloth Plate complete, for 94-1 and 94-2 Machines, Nos. 176d, 195d, 55757, 55759, 55785 to 55788 and two 641d....	3 25
55761	6675	Feed Bar for 94-1 Machine, obsolete....	75
55762	6678	" " Adjusting Collar with 209e....	15
55763	6678	" " Extension.....	1 00
55764	6678	" " " Slide Block.....	30
55765	6675	" " Hinge Pin.....	10
55766	6675	" Connecting Rod with 152d.....	85
55767	6678	" " " Hinge Stud.....	15
55768	6677	" Dog with 55827 for 94-1 Machine, obsolete.....	50
*55769	—	Feed Eccentric for 55772, obsolete.....	1 00
*55770	—	" " Body for 55772 and 55835	1 00
55771	6678	" " Indicator for 55772 and 55835.....	30
55772	6684	Feed Eccentric (adjustable) complete for 94-1 Machine, Nos. 50096d, 55769 to 55771 and two 1186c, obsolete.....	2 50
55773	6675	Feed Rocking Frame with four 209e....	1 00
55774	6679	Looper.....	75
55775	6679	" Carrier with 171d and 1279e....	1 50
55776	6680	Looper Carrier Pitman complete, Nos. 1708e, 1709e and 55778 to 55780....	3 15
55777	6679	Looper Carrier Pitman Ball Stud (left) for 55778.....	25
55777	6679	Looper Carrier Pitman Ball Stud (right) for 55779.....	25
		Nos. 55778 to 55780 for 55776.	
55778	6680	Looper Carrier Pitman Head (left) Nos. 46238, 46239, 55777 and two 171e....	1 50
55779	6680	Looper Carrier Pitman Head (right) Nos. 46238, 46240, 55777 and two 171e....	1 50
55780	6680	Looper Carrier Pitman Rod.....	10
55781	6679	" " Rock Shaft.....	3 00
55782	6679	" " " " Collar with two 209e.....	15
55783	6679	Looper Carrier Rock Shaft Crank (forked) with 1394d and two 200e, for 94-1 and 94-2 Machines, obsolete.....	1 25

NO.	PLATE	NAME	EACH
55784	6684	Looper Eccentric with 1133c, for 94-1 Machine, obsolete, use 55840.....	\$ 50
Nos. 55785 TO 55788 FOR 55760 AND 55856.			
55785	6676	Looper Gate.....	75
55786	6679	“ “ Cap Screw Washer.....	05
55787	6679	“ “ Hinge Stud.....	25
55788	6680	“ “ Spring.....	15
55789	6681	Needle Bar for 94-1 and 94-2 Machines..	40
55790	6681	“ “ Connecting Bracket with 460c and two 237F.....	75
55791	6681	Needle Bar Connecting Link.....	1 25
55792	6681	“ “ “ “ Hinge Pin..	30
55793	6676	“ “ Lever with 460c, 575D, 1186D and two 46289.....	2 50
55794	6680	Needle Bar Lever Connection complete, Nos. 1715c, 1716c and 55799 to 55801..	3 25
*55795	—	Needle Bar Lever Connection Cap (lower) for 55799.....	—
*55796	—	Needle Bar Lever Connection Cap (upper) for 55800.....	—
*55797	—	Needle Bar Lever Connection End Bearing (lower) for 55799.....	—
*55798	—	Needle Bar Lever Connection End Bearing (upper) for 55800.....	—
Nos. 55799 TO 55801 FOR 55791.			
55799	6680	Needle Bar Lever Connection Head (lower) Nos. 55795, 55797 and two 127D	1 50
55800	6680	Needle Bar Lever Connection Head (upper) Nos. 50098c, 55796, 55798 and two 127D.....	1 50
55801	6680	Needle Bar Lever Connection Rod.....	15
55802	6680	“ “ “ Hinge Stud with 457c..	1 00
55803	6681	“ Clamp with 552c and 55801, for 94-1 and 94-2 Machines.....	75
55804	6681	Needle Clamp Thread Guard for 55803..	02
55805	6681	Presser Bar.....	30
55806	6681	“ “ Guide Bracket with 1253F, for 94-1 and 94-2 Machines.....	40
55807	6681	Presser Bar Lifter.....	30
55808	6681	“ “ Spring.....	02
55809	6677	“ Foot with 175D, for 94-1 and 94-2 Machines.....	60
55810	6678	Tension (under thread) Disc.....	05
55810	6678	“ (upper thread) Disc.....	05
55811	6678	“ (under thread) Spring.....	02
55811	6678	“ (upper thread) Spring.....	02

NO.	PLATE	NAME	EACH
55812	6678	Tension (under thread) Spring Bushing..	\$ 15
55812	6678	“ (upper thread) Spring Bushing..	15
55813	6678	“ “ “ Eyelet (double)...	05
55814	6681	Thread (under) Eyelet.....	05
55815	6682	“ “ Take-up with 460c, for 94-1 and 94-2 Machines, obsolete, use 55844.....	1 00
55816	6682	Thread (under) Take-up Staple for 94-1 and 94-2 Machines, obsolete,.....	50
55817	6682	Thread (under) Take-up Staple Bracket..	60
55818	6682	“ “ “ Spring for 94-1 and 94-2 Machines, obsolete....	05
55819	6684	Thread (under) Take-up Stripper for 94-1 Machine, obsolete.....	50
55820	6682	Thread (under) Take-up Thread Guard..	15
55821	6684	“ (upper) Controller Post for 94-1 Machine, obsolete.....	50
55822	6684	Thread (upper) Controller Spring for 94-1 Machine, obsolete.....	05
55823	—	No. cancelled	
55824	6681	Thread (upper) Eyelet (front of arm) for 94-1 and 94-2 Machines.....	05
55825	6681	Thread (upper) Eyelet for 55793.....	05
55826	6681	“ “ Take-up for 94-1 and 94-2 Machines.....	40
55827	6677	Thread Retainer for 55768.....	05
55828	6684	Throat Plate for 55768, obsolete.....	60
55829	6680	Threading Wire (Accessories).....	05
55830	6681	Thread (upper) Controller Post.....	50
55831	6681	“ “ “ Spring.....	05
55832	6682	“ (under) Take-up Stripper.....	50
55833	6677	Throat Plate for 55768, obsolete.....	60
*55834	—	Feed Eccentric for 55835.....	1 00
55835	6678	Feed Eccentric (adjustable) complete, Nos. 50096D, 55770, 55771, 55834 and two 1186c.....	2 50
55836	6685	Feed Bar for 94-2 and 94-10 Machines..	75
55837	6686	“ Dog for 94-2 Machine.....	50
55838	6686	Thread Retainer for 55837 and 55857....	20
55839	6686	Throat Plate for 55837.....	60
55840	6679	Looper Eccentric with two 882c, for 94-1 and 94-2 Machines, obsolete.....	50
Nos. 55842 TO 55844 FOR 94-2 AND 94-10 MACHINES.			
55842	6688	Thread (under) Take-up Staple.....	50
55843	6688	“ “ “ “ Spring... ..	05

NO.	PLATE	NAME	EACH
55844	6685	Thread (under) Take-up with 50150c	\$1 00
Nos. 55845 to 55850 FOR 55851			
55845	6689	Machine Base	1 25
55846	6689	" " Balance Wheel Cover (back)	20
55847	6688	Machine Base Balance Wheel Cover (back) Hinge Pin	02
55848	6689	Machine Base Balance Wheel Cover (front)	25
55849	6688	Machine Base Balance Wheel Cover (front) Hinge Pin	03
55850	6688	Machine Base Balance Wheel Cover Lock Spring	03
55851	6689	Machine Base with Balance Wheel Covers complete, Nos. 219d, 55845 to 55850 and four each 174d, 4718, 42088 and wood screws 1/4 in. No. 12	2 00
Nos. 55853 to 55872 FOR 94-10 MACHINE.			
*55853	—	Arm (upper and lower) solid	12 00
55854	6689	Cloth Plate with 55758 and two 401d, for 55856	1 75
55855	6688	Cloth Plate Slide for 55856	50
55856	—	Cloth Plate complete Nos. 176d, 195d, 55785 to 55788, 55854, 55855 and two 641d	3 55
55857	6686	Feed Dog	50
55858	6687	Knife	08
55859	6687	" Bar	40
55860	6687	" " Driving Crank	1 00
55861	6687	" " " " Hinge Stud	15
55862	6687	" " " " Slide	50
55863	6687	" " " " Connecting Link	1 00
55864	6687	" " " " Coupling Pin	10
55865	6687	" " " " " "	
		Spring	01
55866	6687	Knife Bar Connecting Link	1 00
55867	6687	" " " " Stud with 211F	50
55868	6687	" " Guide with 904c	50
55869	6687	" " " " Pin	02
55870	6687	" " Lifting Spring	15
55871	6687	" Clamp	40
55872	6687	" Holder	75

Nos. 55873 to 55875 FOR 94-2 AND 94-10 MACHINES.

55873	6685	Looper Carrier Rock Shaft Crank with two 200F	\$ 30
55874	6685	Looper Eccentric with two 457c	50
55875	6685	" " Connection with 152L	75
Nos. 55876 to 55884 FOR 94-10 MACHINE.			
55876	6685	Needle Bar	40
55877	6686	Presser Foot with 175d	60
55878	6685	Thread (upper) Take-up	40
Nos. 55879 to 55882 FOR 55883.			
55879	—	Throat Plate Body	1 00
55880	6686	" " Cutting Bar	30
55881	6686	" " Slide	25
55882	6686	" " Spring	05
55883	6686	Throat Plate complete, Nos. 239d, 50169d and 55879 to 55882	1 65
55884	6685	Presser Bar Guide Bracket with 1253F	40

ILLUSTRATIONS OF PARTS

FOR

MACHINES

Nos. 94-1, 94-2 and 94-10

PLATE 6675—ONE-HALF SIZE

55752 55753

55755

55758

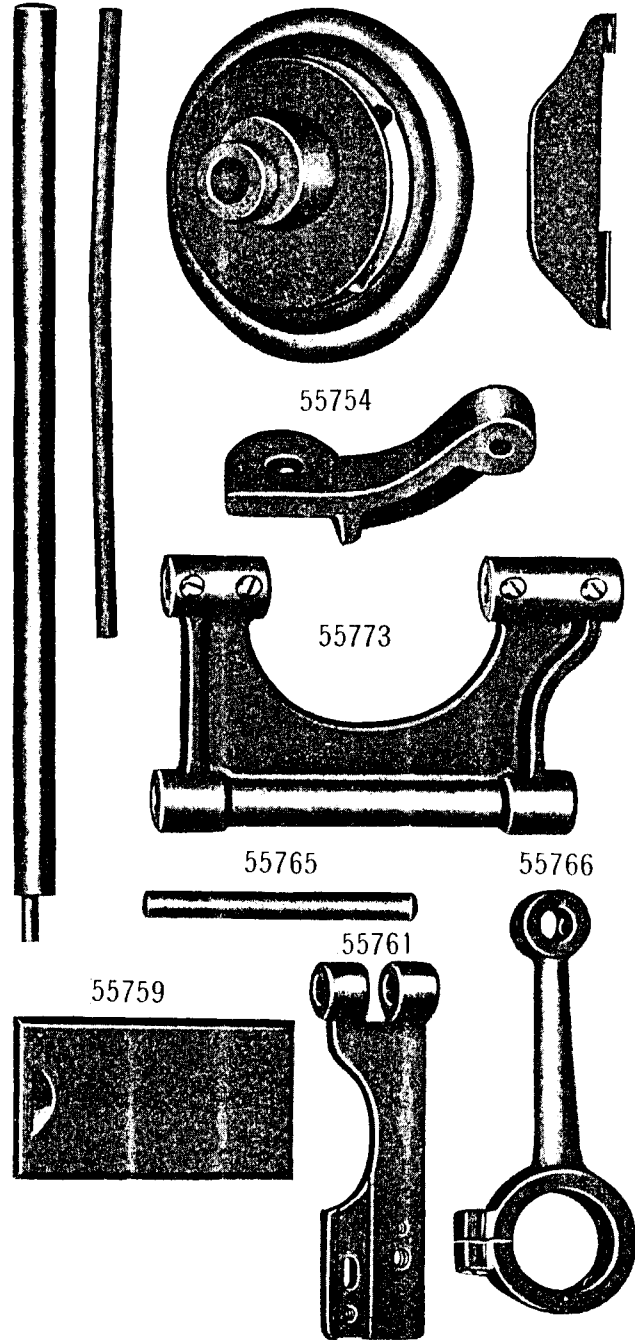 


ILLUSTRATION OF PARTS
FOR
MACHINE
OF TYPE S-10, 1-10

PLATE 6676—ONE-FOURTH SIZE

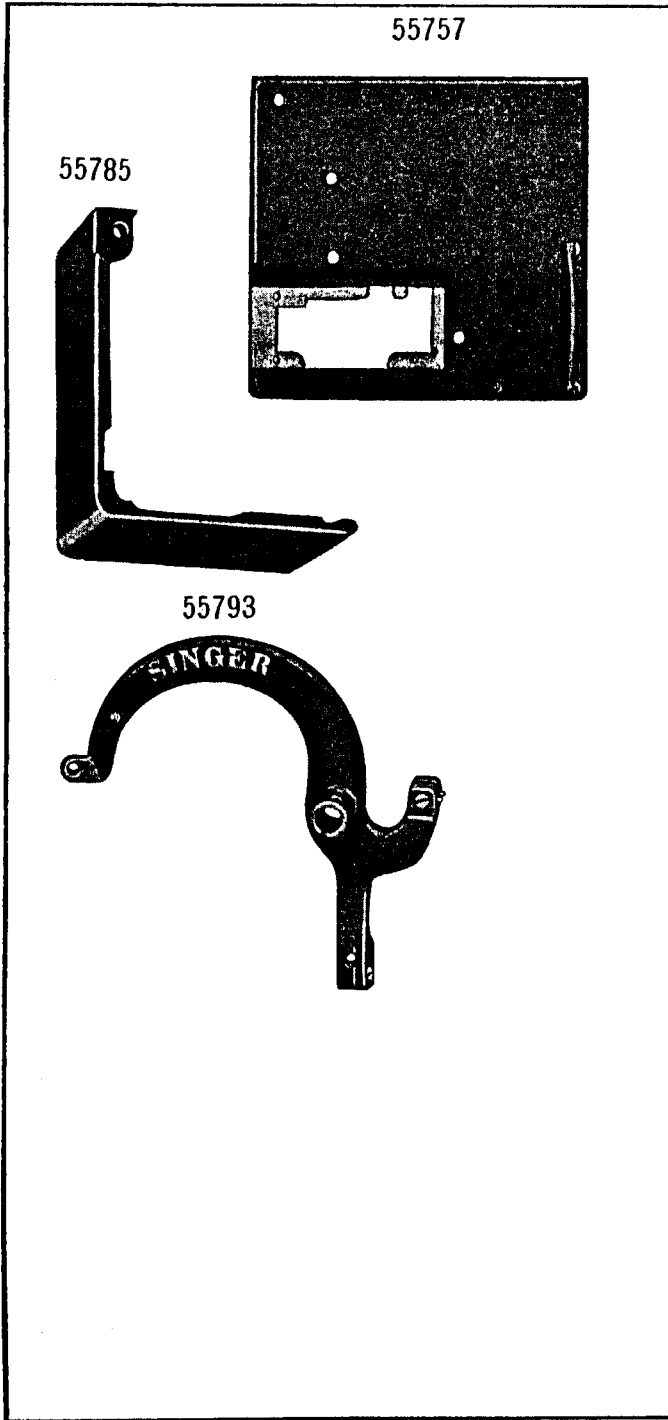 


PLATE 6677—FULL SIZE

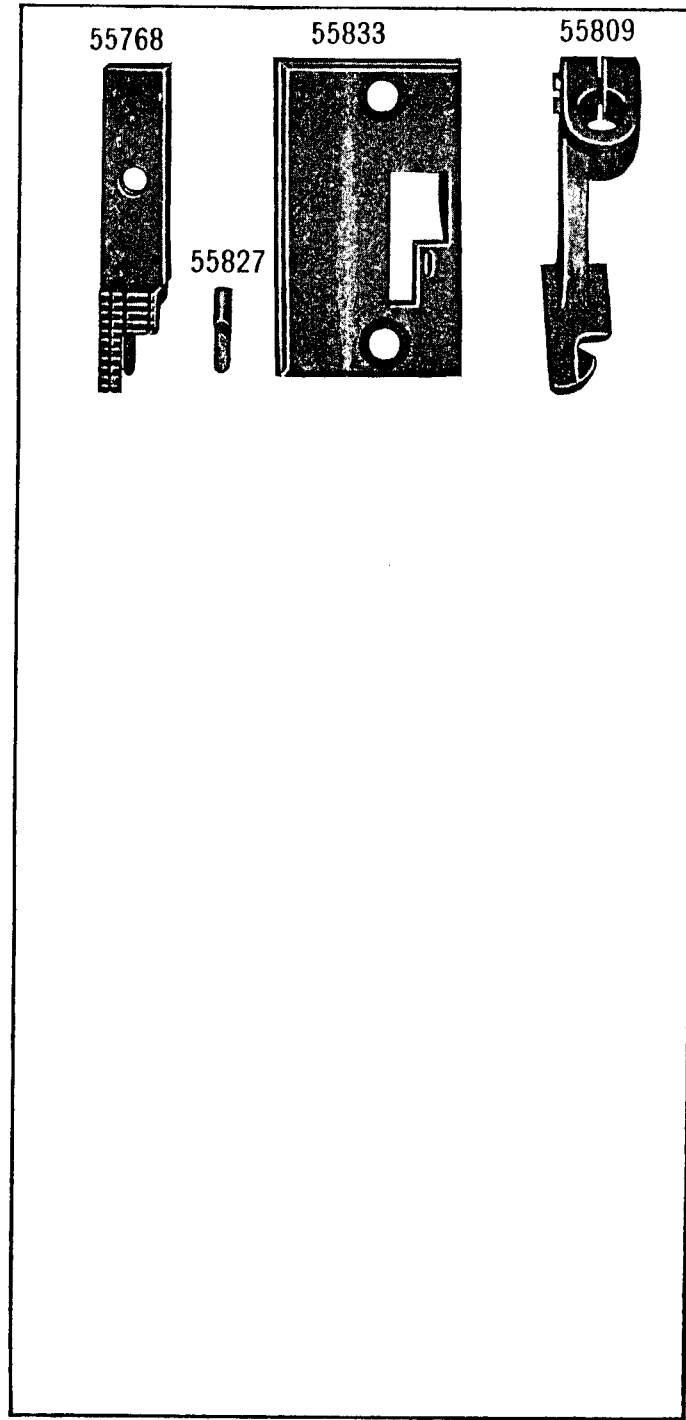 


PLATE 6678—FULL SIZE

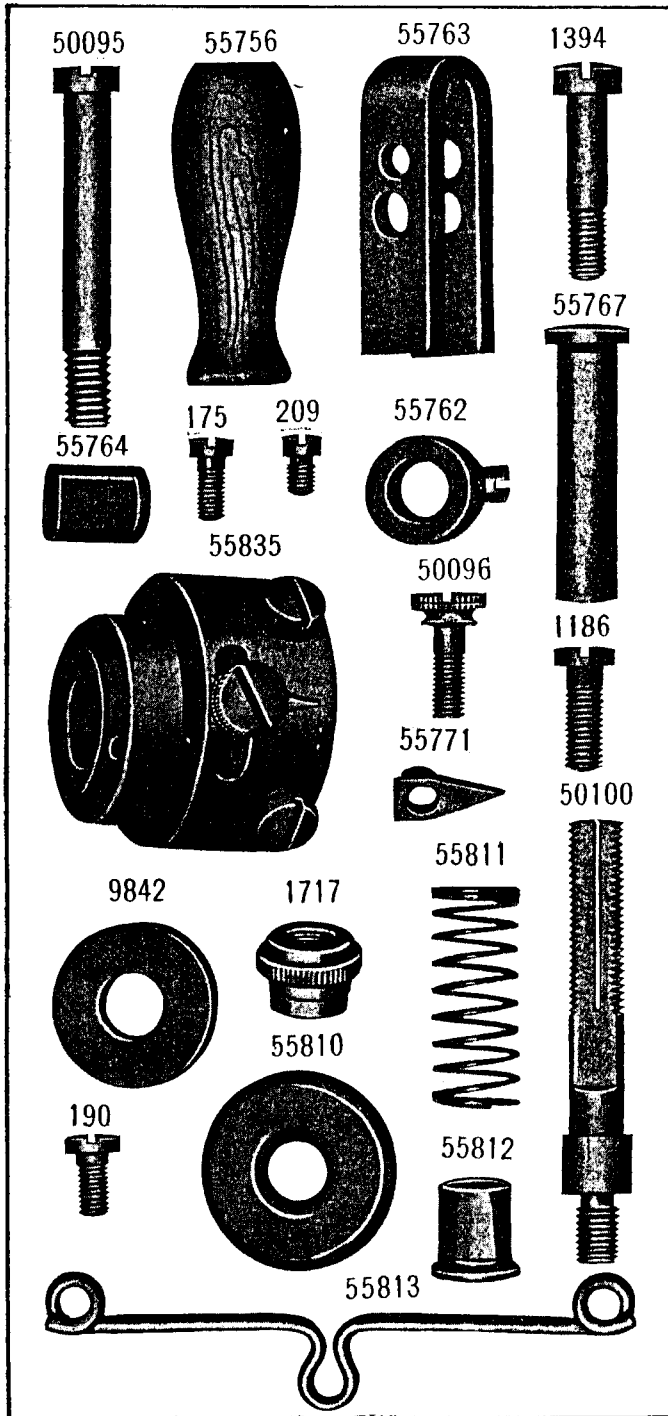 


PLATE 6679—FULL SIZE

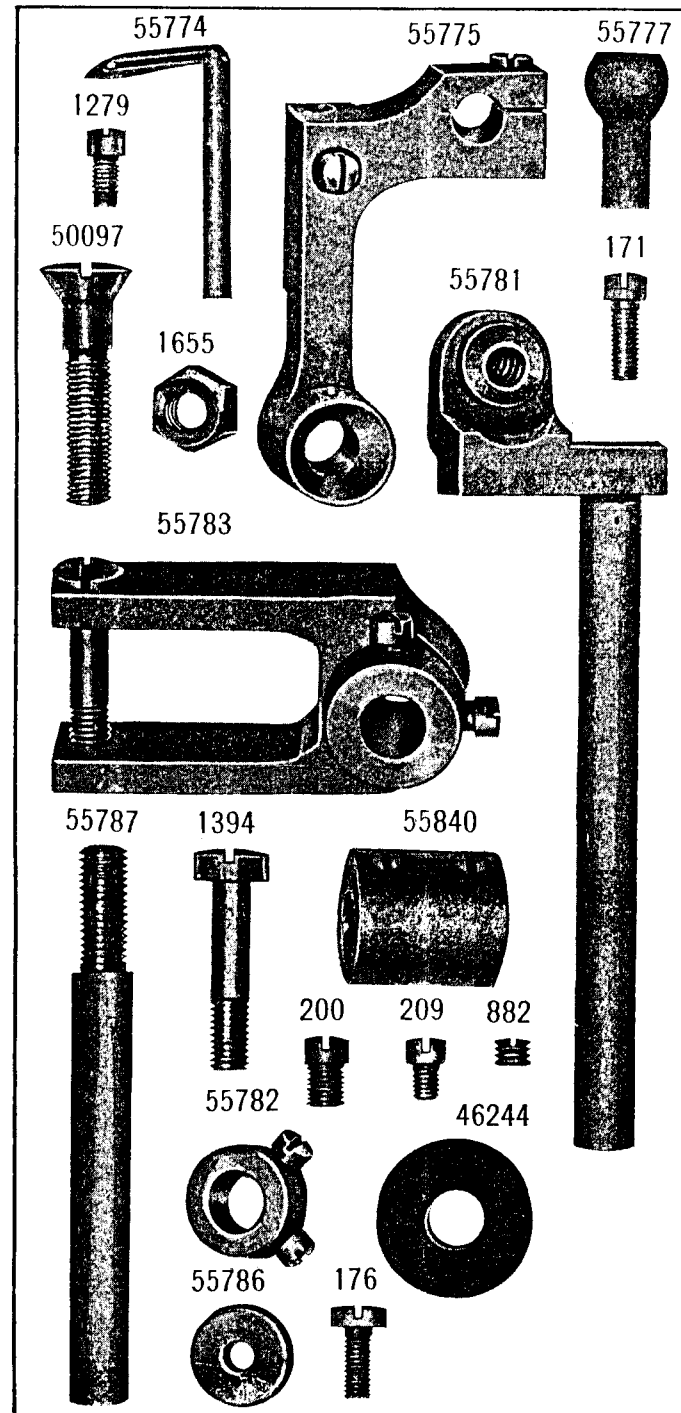 


PLATE 6680—ONE-HALF SIZE

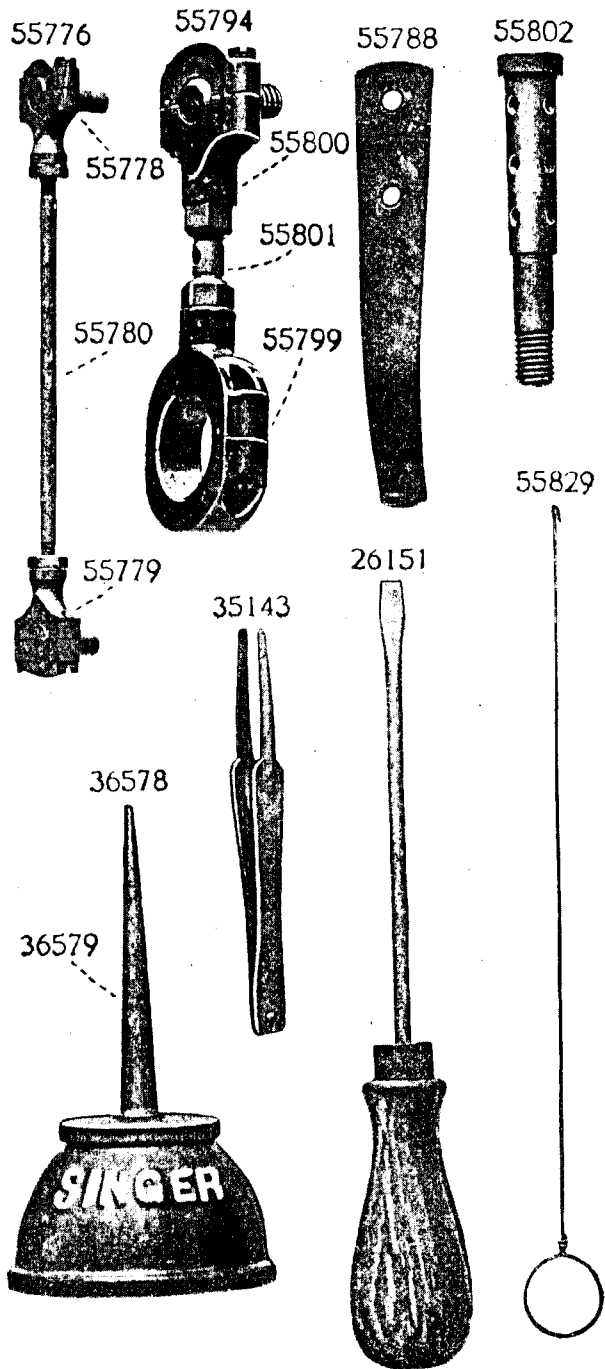 


PLATE 6681—FULL SIZE

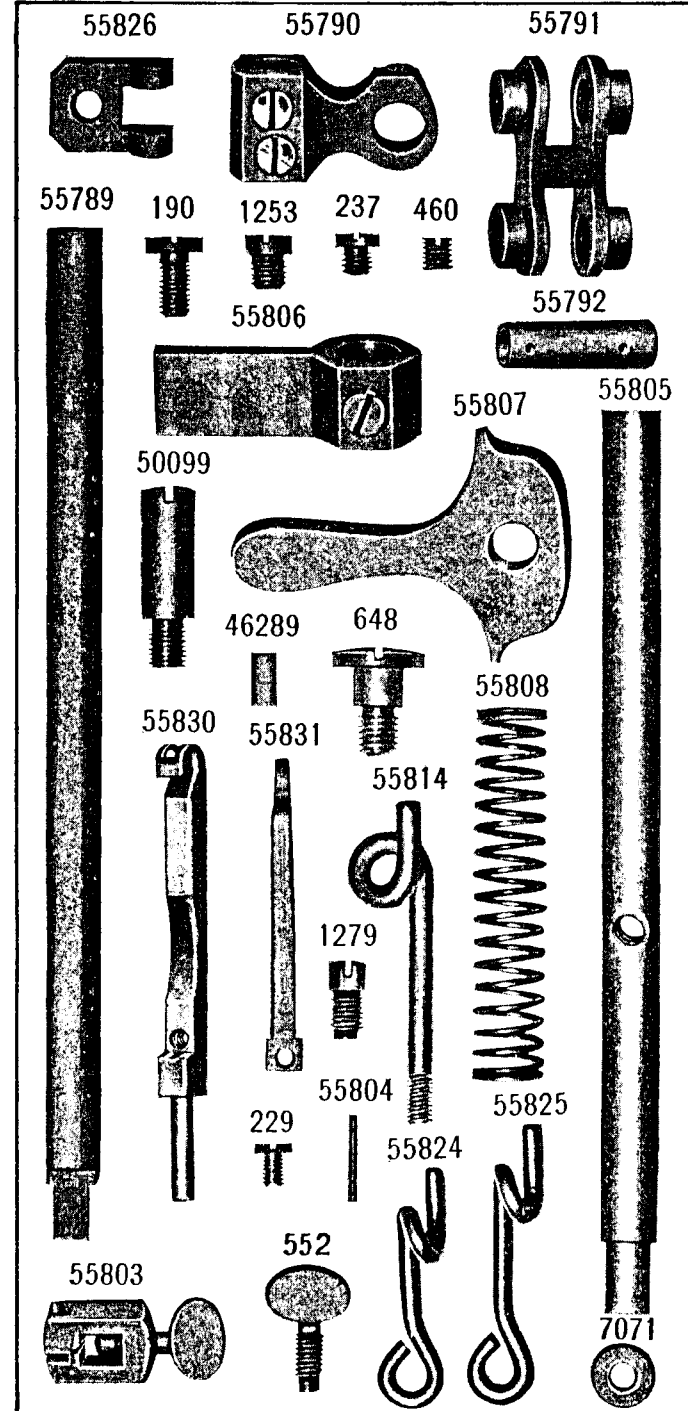 


PLATE 6684—FULL SIZE

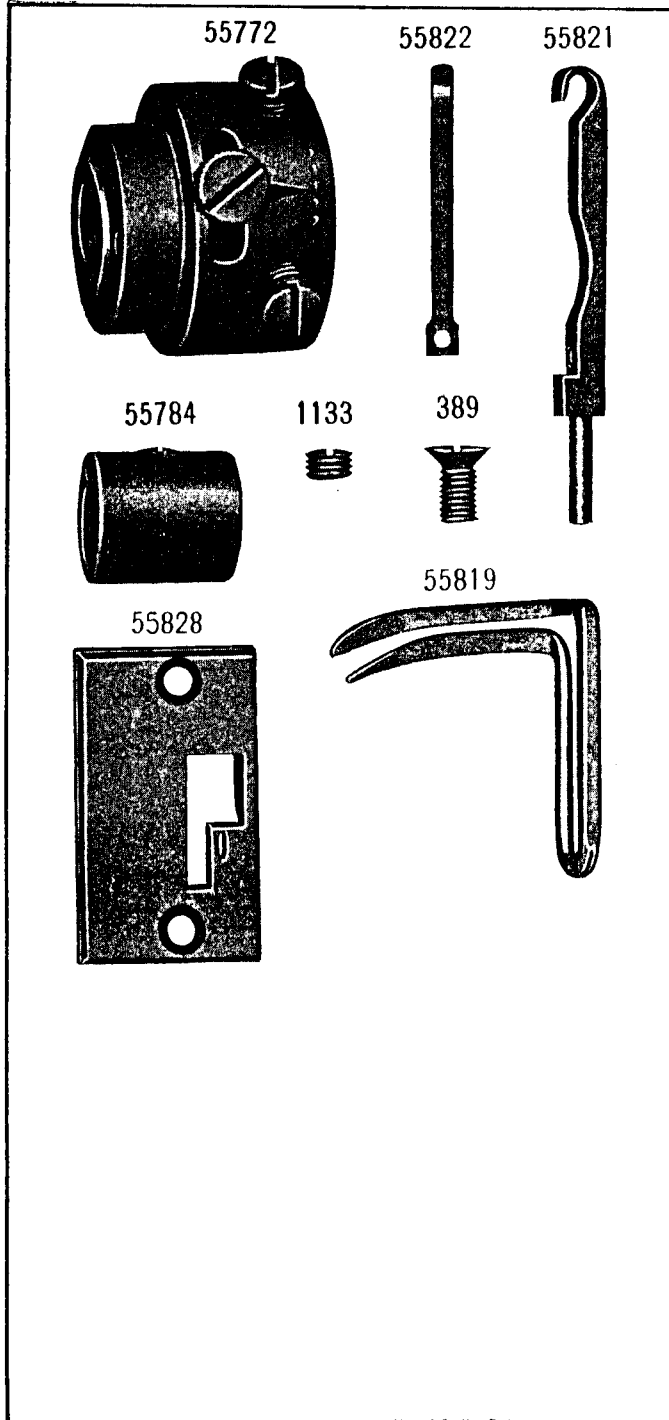 


PLATE 6685—FULL SIZE

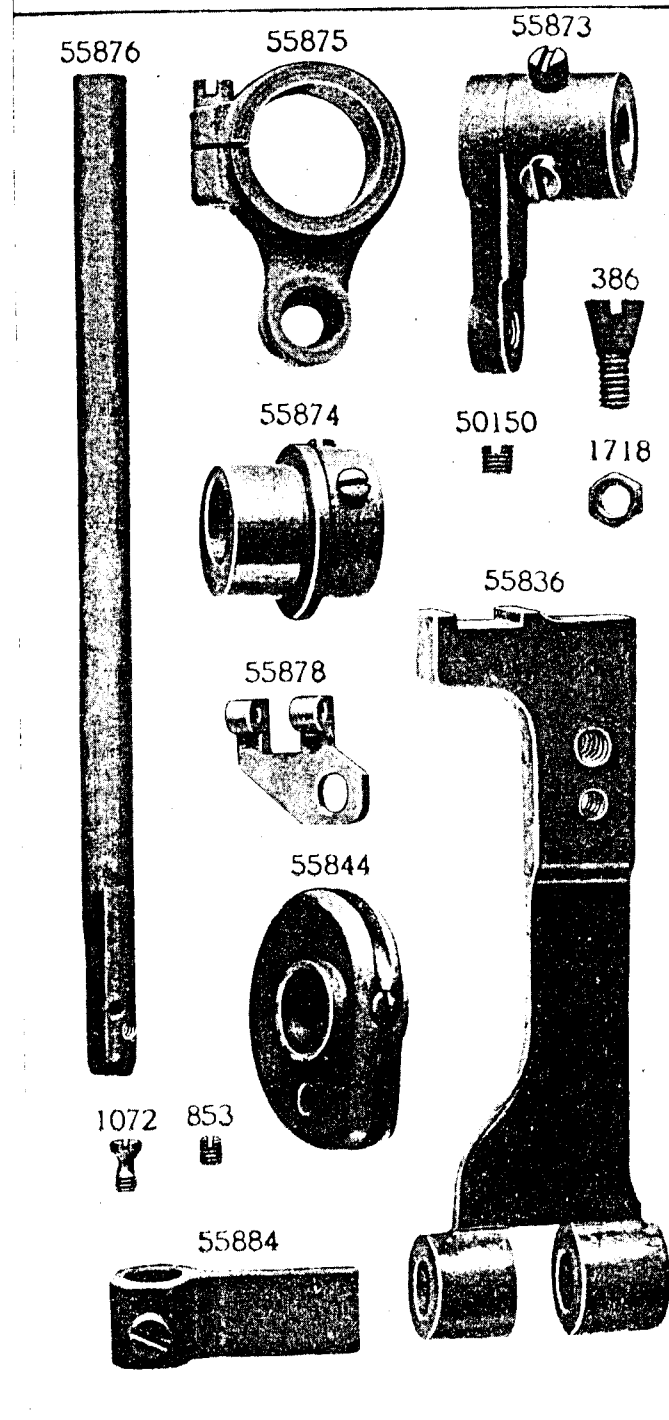 


PLATE 6686—FULL SIZE

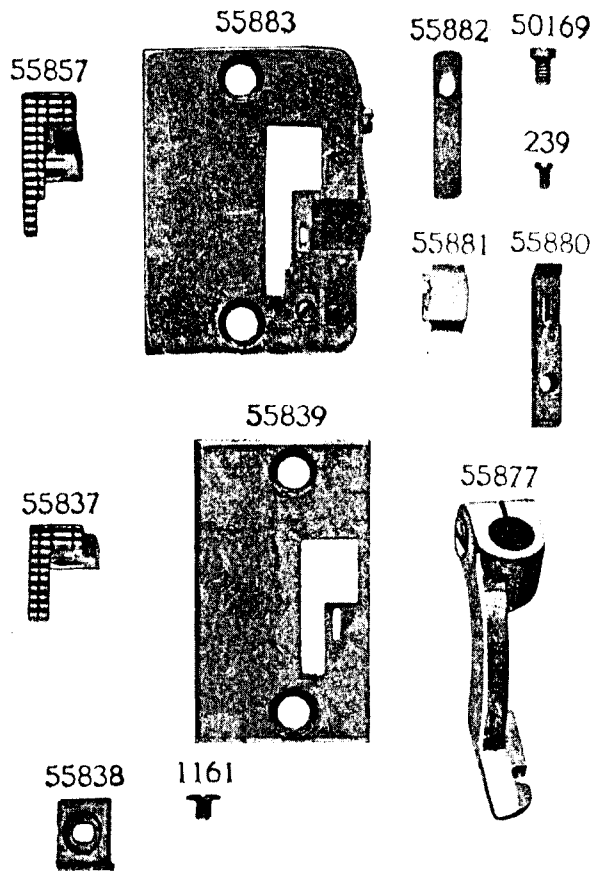 


PLATE 6687—FULL SIZE


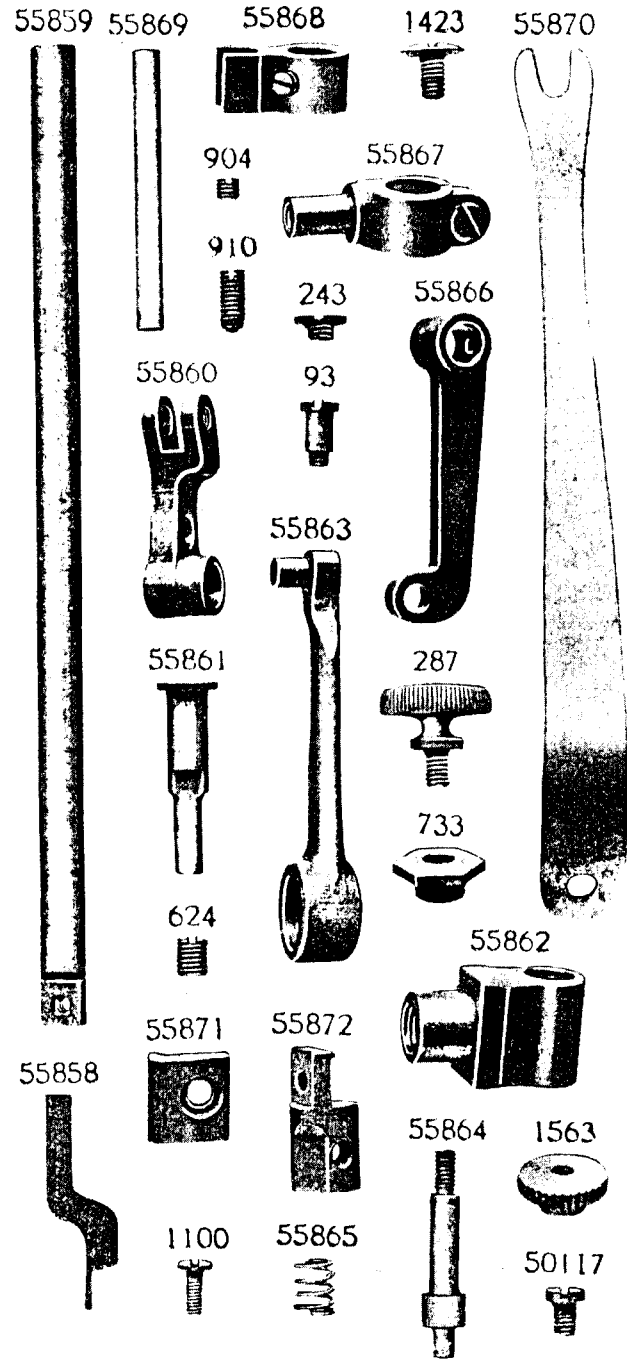 


PLATE 6688--FULL SIZE



55847

 55855

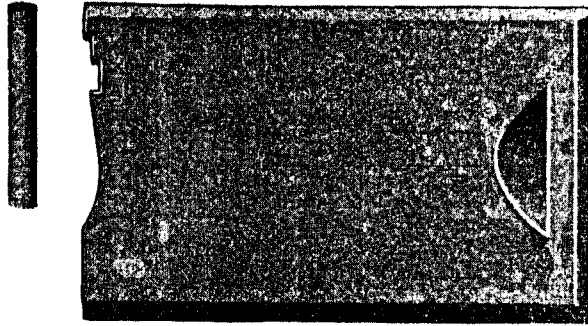

50344

  55842

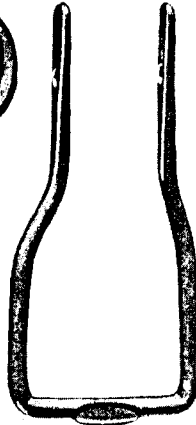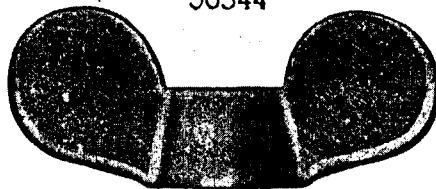


55843

55849



 42088

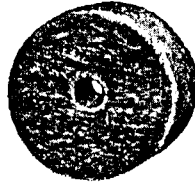

55850

4718



219

174


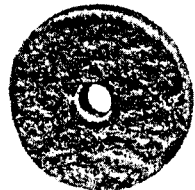 


PLATE 6689--ONE-FOURTH SIZE

 55851

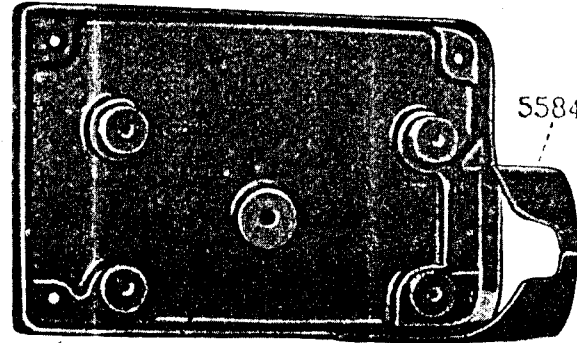

55846

55845

55848

55854

