

SINGER
212W101

front cabinet

MACHINE NO. 212#101

1-31-47

*267201 Arm
 267002 " Cover Plate (back)
 200041X " " " " Screw (2)
 204235 " Position Pin (2)
 200004E " Screw (3)
 202005 " " Washer (3)
 *267202 " Shaft
 267203 " " 267202 with 003330, 200362C, 267007, 267009 and 267096
 270004 " " Ball Bearing (back)
 267007 " " " " (front)
 267009 " " " " " Retainer
 200049D " " " " " " Screw (2)
 267010 " " Connection Belt
 270006 " " " " " Pulley with 200363AL, 350492C and two 202253
 350492C " " " " " Position Screw
 200363AL " " " " " Set Screw
 202253 " " " " " Spring Flange
 267204 " " " " " Timing Plate
 200164H " " " " " " Screw (2)
 224144 Attachment Slide Plate with 213479 and 236061
 236061 " " " " " Friction Slide
 213479 " " " " " Spring
 267011 Balance Wheel (aluminum alloy casting) for "V" belt (outside diam. of belt groove 2.9 in.) with 201346AL and 350107AL
 267012 Balance Wheel 267011 with 270004
 350107AL " " " Position Screw
 201346AL " " " Set Screw
 *267205 Bed with 203376
 202258 " Hinge Connection (2)
 200570E " " " Screw (4)
 54897 " Oil Cup (4)

MACHINE NO. 212w101

223852	Bed Slide (back)
223853	" " (front) for use with Throat Plates in gauges from 1/32 to 1/2 inch
224043	" " " " " " " " " " 17/32 to 1 inch
224044	" " " " " " " " " " 1-1/32 to 1-1/2 inch
203470	Bobbin
*267014	" Case
203648	" " Latch
*202056	" " " Pin
203473	" " " Plunger
203474	" " " Spring
267015	" " Opener
267016	" " " Crank
200135C	" " " " Cap Screw
267017	" " " " Hinge Bracket
200583H	" " " " " " Screw
267018	" " " Driving Cam Shaft
267019	" " " " " " Bushing (lower)
200481X	" " " " " " " " Oil Stop Screw
267004	" " " " " " " " " " Gasket
200358C	" " " " " " " " Set Screw
267020	" " " " " " " " (upper)
200327C	" " " " " " " " Set Screw
267021	" " " " " Gear (spiral) with two 200382C
200382C	" " " " " Set Screw
267022	" " " " Link (left)
267023	" " " " (right)
200135C	" " " " Cap Screw
200110H	" " " " Screw
236083	" " Tension Spring
201016F	" " " " Regulating Screw
200594C	" " " " Screw
203216	" " Washer (cloth)
267024	Bobbin Case complete, Nos. 200594C, 201016F, 202056, 203216, 203473, 203474, 203648, 236083, and 267014

MACHINE NO. 212w101

267025 Face Plate
350503H " " Screw (3)
267026 Feed Bar with 200336E and 201535E
267027 " " 267026 with 201518E, 267028, 267041, 350393C two each 200047E and 203357
267028 " " Crank with two 200354C
200354C " " " Set Screw
350393C " " Hinge Screw (driving)
201518E " " " " Nut
236401 " Dog for 236402
236403 " " " 236405
236477 " " " 236485
211669 " " " 236427
211674 " " " 236430
211679 " " " 236433
211685 " " " 236436
236439 " " " 236441
211693 " " " 236444
211698 " " " 236450
236452 " " " 236454
200106E " " Screw (2)
200336E " " Support Screw
201535E " " " " Nut
268064 " Driving Eccentric
267029 " " " Adjusting Disc
268066 " " " " " Spring
267030 " " " " " " Collar and Power Balance with two 200346C
200346C " " " " " " " " " Set Screw
267031 " " " Connection
267032 " " " " 267031 with 268063 and ~~267031~~
267033 " " " " Friction Washer
201253F " " " " " Screw (3)
267034 " " " " Hinge Stud
270653 " " " " " Needle Bearing
200054g " " " " " Pinch Screw

MACHINE NO. 212w101

268063	Feed Driving Eccentric Connection Needle Bearing
350477C	" " " Friction Adjusting Screw
350101C	" " " " " " Set Screw
267206	" " Flange with 200061C, 350467C , two each 350101C and 350477C
350467C	" " " ^{cut} Position Screw
200061C	" " " Set Screw
267036	" " Rock Shaft
267037	" " " " Bushing (left)
200484X	" " " " " " Oil Stop Screw
267004	" " " " " " " " Gasket
200335C	" " " " " " Set Screw
267038	" " " " " (right)
200327C	" " " " " " Set Screw
203244	" " " " Collar with two 200393C
200393C	" " " " " Set Screw
267039	" " " " Crank with 200054E and 200029E
200029E	" " " " " Pinch Screw
267040	" Lifting Eccentric with 201220C
267041	" " " Fork with 200173D and 223655
200047E	" " " " Screw
203357	" " " " " Washer
223655	" " " Oiling Felt
200173D	" " " " " Screw
201220C	" " " Set Screw
270140	" Regulating Stud
240245	" " " Retaining Spring
270026	" " " Spring
267050	Hook (sewing)
267051	" 267050 with 224100, 267065, 267066, 267084, two each 200590H and 201253F
267052	Hook and Bobbin Case complete, Nos. 267024 and 267051
267053	" Ball Bearing
267054	" " " Retaining Washer
200582H	" " " " " Screw
267055	" Bushing (lower) (left)

MACHINE NO. 212w101

267056	Hook Bushing (lower) (right)
20048H	" " " Oil Stop Screw
267004	" " " " " Gasket
200374C	" " " Set Screw
267057	" Driving Gear (spiral) with 200382C and 201220C (2)
201220C	" " " Position Screw
200382C	" " " Set Screw
267058	" " Pinion (spiral) with two 200382C
200382C	" " " Set Screw
267059	" " Shaft
267060	" " " Ball Bearing
267061	" " " " " Collar with 201220C and 200382C
267062	" " " " " 267061 with 267060
201220C	" " " " " Position Screw
200382C	" " " " " Set Screw
267063	" " " " " Retaining Washer
200580H	" " " " " " Screw (3)
267064	" " " Connection Belt Pulley with 202253 and two 201254C
201254C	" " " " " Set Screw
202253	" " " " " Spring Flange
224100	" Gib
201253F	" " Screw
267065	" Oil Regulating Pin
267066	" " " Vent
267067	" " Retainer with 200366H
200366H	" " " Set Screw
267068	" Saddle (left) with 200327C, 200358C, 200374C, 200902D, 267019, 267020 and 267055
267074	" " " Cover Plate (side)
267075	" " " " " Gasket
200110H	" " " " " Screw
200582H	" " " " " Screw
267069	" " (right) with 200327C, 200358C, 200374C, 200902D, 267019, 267020, and 267056
267076	" " " Cover Plate (side)

MACHINE NO. 212w101

267075	Hook Saddle (right) Cover Plate (side) Gasket
200110H	" " " " " " Screw
200582H	" " " " " " Screw
267070	" " Bearing (left)
200327C	" " " " Set Screw
267071	" " " (right)
200338C	" " " " Set Screw
200484H	" " " Oil Stop Screw
267004	" " " " " " Gasket
267072	" " Cover Plate (bottom)
267073	" " " " " Gasket
200130H	" " " " " Screw
267072	" " " " (end)
267073	" " " " " Gasket
200180H	" " " " " Screw
200543H	" " " " " Screw
267077	" " Equalizing Washer (concave) (2)
267078	" " " " (convex) (2)
267079	" " Oil Gauge (2)
267080	" " " " Sleeve with 267081
200484H	" " " Stop Screw
267004	" " " " " Gasket
267081	" " " Strainer
200902D	" " Pinch Screw
200006H	" " Screw (2)
225585	" " " Washer (2)
267082	Hook Saddle (left) complete, Nos. 200543H, 267015 to 267018, 267021, 267022, 267052 to 267054, 267058, 267067, 267068, 267074, 267075, 267080, two each 200135C, 200583H, 267072, 267073, four each 200338C , 267004, five 200582H and nineteen 200110H
267083	Hook Saddle (right) complete, Nos. 200543H, 267015 to 267018, 267021, 267023, 267052 to 267054, 267058, 267067, 267069, 267075, 267076, 267080, two each 200135C, 200583H, 267072, 267073, four each 200338C , 267004, five 200582H and nineteen 200110H
267084	Hook Washer
200590H	" " Screw

MACHINE NO. 2127101

270256	Knee Lifter Lifting Link
270285	" " " " Connection
200363AL	" " " " " Set Screw
200293C	" " " " Hinge Screw
267085	" " " " Rod
270048	" " " " Connection
200434C	" " " " " Set Screw
267086	" " Rock Shaft with 200363AL and 200434C
267087	Needle Bar
267207	" " Bushing (lower)
267208	" " " (upper)
267090	" " Connecting Link
267091	" " " " 267090 with two 267090
267092	" " " " Hinge Stud with 210985 - 70
200374C	" " " " " " Set Screw
267093	" " " " Needle Bearing
267094	" " " " Thrust Washer
264714	" " " " Stud with 200072C and 202277
267095	" " " " Link Guide Block
200065C	" " " " " " Screw (2)
202277	" " " " Oil Packing (wick)
200072C	" " " " Pinch Screw
*267096	" " Crank with 200053C and 200374C
200053C	" " " " Pinch Screw
200333C	" " " " Position Screw
200362C	" " " " " Check Screw
267209	" " Oiling Felt
267210	" " " " Clamp Plate
201183H	" " " " " " Screw
236650	Needle Holder, needles 3/32 in. apart and must be set diagonally in gauges 1/32, 3/64 and 1/16 in. with 201030F and two 200141F
223878	Needle Holder, in gauges from 3/32 to 15/32 in., in steps of 1/32 in. with 201030F and two 200141F
233863	" " " " " 1/2 to 3/4 in., in steps of 1/32 in., with 201030F and two 200141F
223864	" " " " " 25/32 to 1 1/2 in., in steps of 1/32 in., with 201030F

MACHINE NO. 212w101

201030F	Needle Holder Screw
200141F	" Set Screw
267112	Presser Bar with 200074F
270270	" " Bushing
270282	" " Lifter
350442C	" " " Hinge Screw
267113	" " Lifting Releasing Lever Bracket
270095	" " " " " Spring
267114	" " Position Guide with 200196E and 350411C
350411C	" " " " Pinch Screw
270271	" " Spring
350435C	" " " Screw (pressure regulating)
350521XC	" " " Stud
229092	" Foot, 50 needle hole, needles 3/32 in. apart, in gauges 1/32, 1/8 and 1/16 in.
229102	" " 46 needle hole, in gauges from 3/32 to 7/32 in., in steps of 1/32 inch
229103	" " 46 needle hole, in gauges 1/4, 9/32 and 5/16 inch
229104	" " 46 needle hole, in gauges from 11/32 to 1/2 inch, in steps of 1/32 inch
229105	" " 46 needle hole, in gauges 17/32 and 9/16 inch
229106	" " 46 needle hole, in gauges 19/32, 5/8, 21/32 and 11/16 inch
229107	" " 46 needle hole, in gauges 23/32 and 3/4 inch
229108	" " 46 needle hole, in gauges from 25/32 to 1 in., in steps of 1/32 inch
229110	" " 46 needle hole, in gauges from 1-1/32 to 1-1/2 inch, in steps of 1/32 inch
200074F	" " Screw
267115	Rotary Take-up (large)
210983	" " " Position Pin
401D	" " " Screw (2)
267116	" " (small) with 270147 and 350418C
267117	" " " Driving Shaft
270032	" " " " " Ball Bearing (2)
267118	" " " " " Connection Belt
270070	" " " " " / Pulley with two each 200363AL and 270071
200363AL	" " " " " ^{Shaft} Driving/Pulley Set Screw
270071	" " " " " ^{Pulley} Shaft / Spring Flange

MACHINE NO. 212w101

217 + 2

~~270072~~ Rotary Take-up (small) Driving Shaft Pulley with two 200382C

200382C " " " " " " " Set Screw
 350418C " " " Set Screw
 270147 " " " Thread Cast-off Pin
 267119 " " Guard (inner)
 267120 " " " (outer)
 200567H " " " Screw (4)
 267121 " " " Separator (2)

2102 Tension Disc

267123 " Releaser (adjustable)
 200132E " " Screw
 267124 " " Support
~~200560E~~ " " " Screw (2)
 32572 " Releasing Disc
 270278 " " Pin (lower)
 270086 " " " (upper)
 13710 " Spring
 50304C " Stud (upper)
 52098 " " 50304C with 1560C
 50305C " " (upper) Set Screw
 350457C " " (lower)
 200391C " " " Set Screw

1560C " Thumb Nut

267122 Tension (lower) complete, Nos. 1560C, 13710, 32572, 52082, 267132, 270278, 350457C and

two 2102

270087 " (upper) complete, Nos. 13710, 32572, 52082, 52083, 52098, 270086 and two 2102

271017 Thread Guide (2)

~~267125~~ " " (Lower, ~~inside~~) (C)

~~267126~~ " " (Lower, ~~outside~~)

267127 " " (upper)

201525E " " Lock Nut (2)

350503H " " Screw (2)

267128 " Pull-off (lower)

267129 " " (upper)

MACHINE NO. 212w101

200196E	Thread Pull-off Clamping Screw
267130	" Severing Finger
267131	" " " Guard
2011860	" " " " Hinge Screw
226305	" " " " " Spring " " " " " Washer
200583H	" " " Screw (2)
52082	" Take-up Spring
267132	" " " Regulator (lower) with 200391C
52083	" " " " (upper) with 50305C
446C	" " " " Set Screw (2)
267133	" Tube (long)
267134	" " (short)
267135	" " Thread Bushing with 200146E (4)
200146E	" " " " " Set Screw
236402	Throat Plate, 50 needle hole, needles $3/32$ in. apart for needle sizes 14 and 15 in gauges $1/32, 3/64$ and $1/16$ in., for 236401
236405	" " 50 needle hole, for needle sizes 14 and 15, in gauges $3/32, 1/8, 5/32$ in., for 236403
236485	" " 50 needle hole, for needle sizes 14 and 15, in gauges from $3/16$ to $11/32$ in., in steps of $1/32$ in. for 236477
236427	" " 50 needle hole, for needle sizes 14 and 15, in gauges $3/8, 13/32, 7/16, 15/32$ and $1/2$ in. for 211669
236430	" " 50 needle hole, for needle sizes 14 and 15, in gauges $17/32, 9/16,$ and $19/32$ in., for 211674
236433	" " 50 needle hole, for needle sizes 14 and 15, in gauges $5/8, 21/32,$ $11/16$ in., for 211679
236436	" " 50 needle hole, for needle sizes 14 and 15, in gauges $23/32, 3/4,$ $25/32, 13/16$ and $27/32$ in., for 211685
236441	" " 50 needle hole, for needle sizes 14 and 15, in gauges $7/8, 29/32,$ $15/16, 31/32$ and 1 in., for 236439
236444	" " 50 needle hole, for needle sizes 14 and 15, in gauges from $1-1/32$ to $1-3/16$ in., in steps of $1/32$ in., for 211693
236450	" " 50 needle hole, for needle sizes 14 and 15, in gauges $1-1/8, 1-9/32,$ $1-5/16$ in., for 211698
236454	" " 50 needle hole, for needle sizes 14 and 15, in gauges from $1-3/8$ to $1-1/2$ in., in steps of $1/32$ in., for 236452
200161D	" " Clamp Screw
203376	" " Position Screw
691F	" " Screw

ACCESSORIES
FOR
MACHINE NO. 212-101

200157B Attachment Screw
203470 Bobbin (10)
228476 Case Screw Driver
135x7 Needles, twelve, size 14
228480 Drip Pan
228452 ~~Oil Drain Jar~~ *Machine Rest Pin*
120342 Oiler
225498 Screw Driver
41400 Machine Rest Pin
259462 Bobbin Winder
228368 Knee Lifter
259143 Thread Unwinder
231812 *Threader Winder*