

Singer 44-62

November 11, 1935.
Department #54.

List of Parts Complete

For

Machine No. 44-62

HISTORICAL COPY
DO NOT REMOVE

GR :RY

November 11, 1935.
Department #54.

List of Parts Complete
For
Machine No. 44-62

Two needles, two shuttles, drop feed. For cross
thread embroidery work.
Formerly 44 SV 27.

No.	Name
*24245	Arm with 11104
8582	" Dowel Pin
15783	" Oil Tube
12453	" " " for intermediate bearing
12454	" " " with 52045 for oiling 12409
11119	" " " 15783 with 52045 for oiling 19156
24131	" " " with 52045 for oiling 20283
52045	" " " Packing (felt)
748 E	" Screw (back)
868 E	" " (front)
16511	" Shaft
*11104	" " Bushing (front)
12357	" " Flanged Bushing (back)
448 C	" " " " " Set Screw
144 D	" " Screw
12193	" Side Cover
286 D	" " " Thumb Screw
2415	" Spool Bracket
145 D	" " " Screw
12403	" " " Spool Pin and Thread Eyelet
11241	" " " Washer (cloth)
15063	" " " 2415 with two 12403
24296	Balance Wheel (power) light rim, 2 3/16 in. pulley with two 448C
24297	Balance Wheel Oil Cover
210 D	" " " " Screw
448 C	" " " Set Screw
*19303	Bed
24537	Cord Carrier, for one cord Ser.10766
24538	" " " two cords Ser.10348
24539	" " " Cam with two 430C, Ser. 9797
24248	" " " and Gear Cover

207 J	Cord Carrier Cam and Gear Cover Screw
430 C	" " " Set Screw
24249	" " " Shaft
24250	" " " " Gear
23724	" " " " " Pin
24251	" " " " " (intermediate) 24 teeth
24252	" " " " " " 48 teeth
24253	" " " " " " 24251
	with 2289 and 24252
2289	Cord Carrier Cam Shaft Gear (intermediate) Pin
24254	" " " " " " Stud
448 C	" " " " " " " Set
	Screw
24540	Cord Carrier Driver
36 D	" " " Hinge Screw
237 C	" " " " " Set Screw
11189	" " " Shaft
24258	" " " " Bracket with 448C
145 C	" " " " " Screw
24259	" " " " Crank with 191C and 1820
1820	" " " " " Roller and Stud
191 C	" " " " " Set Screw
24260	" " " " " Head
2049	" " " " " Pin
24255	" " " Driving Arm with 1820
83 D	" " " " Hinge Screw
24258	" " " " Pitman with two 22147 and
	four 196E
679 C	Cord Carrier Driving Arm Pitman Ball Joint Screw
1109 C	" " " " " " " " "
	(eccentric)
1520 E	Cord Carrier Driving Arm Pitman Ball Joint Screw Nut
22147	" " " " " Cap
196 E	" " " " " Screw
1820	" " " " " Roller and Stud
24251	" " " " " Gear
21516	" " " " " Pin
24289	" " " " " Joint
648 J	" " " " Hinge Screw
207 J	" " " " Set Screw
24290	" " " " Shaft
24291	" " " " Bracket with 448C
448 C	" " " " " Set Screw
24292	" " " " Collar with 1019C

1019 C	Cord Carrier Shaft Collar Set Screw
24281	" Eyelet
24483	" " (top of arm)
24283	" Pull-off
24484	" " Staple
190 D	" " " Screw
3148	" " " " Washer
24485	" Tension Bracket with 13589
2921	" " Disc
13589	" " " Steady Pin
1560 C	" " Regulating Thumb Nut
637	" " Screw Stud
1547 D	" " " " Nut
10148	" " Spring
20197	Crank Connecting Rod with 20198 and two 896E
*20198	" " " Cap
896 E	" " " " Screw
908 C	" " " Hinge Screw
1819 E	" " " " Nut
24486	Face Plate (large)
24487	Face Plate (large) complete, Nos. 19155, 19327 and 24486
190 D	Face Plate (large) Screw
24270	" " (small)
219 D	" " " Screw
19327	" " Thread Guard (lower) with 12152
12152	" " " " Rivet
62824	" " " " (upper)
19155	" " " " " 62824 with 12152
12152	" " " " " Rivet
19111	Feed Bar
313 C	" " Screw Center
1519 E	" " " " Nut
3033	" Connecting Link
375 C	" " " Hinge Screw
1518 E	" " " " Nut
24271	" Dog with 19118
231 C	" " Screw
19116	" " Spring
19117	" " " Hook for 19120
19118	" " " " " 24271
20283	" And Feed Lifting Eccentric with 446C
446 C	" " " " Set Screw

24274	Needle Bar Crank with 448C and 743C
24276	Needle Bar Crank complete, Nos. 21516, 24251 and 24274
448 C	Needle Bar Crank Set Screw
743 C	" " " Position Screw
938 D	" " Screw Bushing
19276	" Clamp with two 209C
2273	" " Pin
209 C	" " Set Screw
19386	Oscillating Rock Shaft
19387	Oscillating Rock Shaft complete, Nos. 4784, 12388 and 19386
12388	Oscillating Rock Shaft Hinge Pin
878 D	" " " " " Oil Hole Stop Screw
12459	" " " " " " " " " "
	Washer (leather)
448 C	Oscillating Rock Shaft Hinge Pin Set Screw
4784	" " " Oil Pad
19127	" Shaft
20778	" " Crank
20779	Oscillating Shaft Crank complete, Nos. 219C, 1518E, 19390 and 20778
2049	Oscillating Shaft Crank Pin
219 C	" " " Set Screw
19389	" " " Slide Block
226 D	" " " " " Cap Screw
12424	" " " " " " Washer
969 C	" " " " " Screw Stud
1518 E	" " " " " " Nut
19390	Oscillating Shaft Crank Slide Block complete, Nos. 226D, 969C, 12424 and 19389
12391	Presser Bar (hollow)
12326	" " Guide Bracket with 453C
453 C	" " " Set Screw
24293	" " Lifter
689 C	" " " Hinge Screw
1520 E	" " " " " Nut
12327	" " Lifting and Releasing Lever Bracket
860 E	" " Plug Screw
21257	" " Spring
11170	" " " Washer
Ser. 9522	" Foot
Ser. 9523	" " Folder (left)

Ser. 9524	Presser Foot Folder (right)
Ser. 9525	" " " Holder
1053 J	" " " " Screw
Ser. 9528	Presser Foot complete, Nos. Ser.9522 to Ser.9525 and two 1053J
Ser. 9556	Presser Foot Guide (left)
Ser. 9557	" " " (right)
688 E	Pressure Regulating Thumb Screw
19131	Shuttle (inside) Bobbin
19310	" " " Case Latch and Position Finger
2521	Shuttle (inside) Bobbin Case Latch and Position Finger Spring
592 E	Shuttle (inside) Bobbin Case Latch and Position Finger Stop Screw
62606	Shuttle (inside) Bobbin Case
19312	Shuttle (inside) Bobbin Case complete, Nos. 591F, 592E, 2521, 19149 and 19310 and 62606
19136	Shuttle (inside) Body
591 F	" " Tension Regulating Screw
19149	" " " Spring
19324	" " 1 11/16 in. diam., Nos. 19131, 19136 and 19312
19131	Shuttle (outside) Bobbin
62608	" " " Case
19311	" " " " Latch and Position Finger
2521	Shuttle (outside) Bobbin Case Latch and Position Finger Spring
592 E	Shuttle (outside) Bobbin Case Latch and Position Finger Stop Screw
19313	Shuttle (outside) Bobbin Case complete, Nos. 591F, 592E, 2521, 19172, 19311 and 62608
19137	Shuttle (outside) Body for 19325
19171	" " " " 19326
591 F	" " Tension Regulating Screw
19172	" " " Spring
19326	" " 1 11/16 in. diam., for 1/32 in. to 13/64 in. gauge, Nos. 19131, 19171 and 19313
19325	Shuttle (outside) 1 11/16 in. diam., for 7/32 in. gauge and above, Nos. 19131, 19137 and 19313
19139	Shuttle Driver with two 453C
2049	" " Pin
453 C	" " Set Screw

19315	Shuttle Race Body with 19316
19379	" " " 24013
19316	" " Loop Separator
19309	" " Needle Guard
1053 D	" " " " Screw
19317	" " Ring (inside)
19318	" " " (outside)
2532	" " " Position Pin
2533	" " " Spring
907 D	" " " " Screw
19323	Shuttle Race complete, for 3/32 in. to 5/32 in. gauge, Nos. 19309,19315,19317,19318, two each 907D,1053D,2533 and four 2532
24013	Shuttle Race complete, for 11/64 in. gauge and above, Nos. 19309,19317,19318,19379, two each 907D, 1053D,2533 and four 2532
145	Shuttle Race Screw
19319	" " Slide (inside)
19320	" " " " Stop Stud
19321	" " " " " Spring
19322	" " " (outside) with 662J and 19147
19147	" " " " Friction Spring
662 J	" " " " " " Screw
2921	Tension Disc
19191	" Plate, for upper tension, with 19231
134 J	" " Screw
1560 C	" Regulating Thumb Nut
19192	" Releaser
12397	" Releasing Lever
12398	" " " Hinge Pin
12329	" " " Spring
19193	" " " (intermediate)
19231	" " " " Hinge Block
2269	" " " " " Pin
19194	" " " " " Spring
916 C	" Screw Stud
44209	" " " 916C with 1560C
1560 C	" " " Nut
2923	" Spring
12149	" Thread Guard
19195	Tension (upper) complete with Tension Release, Nos. 2269,19191,19193,19194, two each 1547D,2923, 19192,44209 and four 2921
19159	Thread Guide Body

19161	Thread Guide Cap
19160	" " Roller
905 D	" " Screw
19162	Thread Guide complete (roller) Nos. 905D and 19159 to 19161
24129	Thread Take-up Crank
3094	" " " Wedge
690 E	" " " Screw
19156	" " Lever
775 E	" " " Cap Screw
12166	" " " Hinge Pin
12409	" " " Link
11204	" " " " Hinge Pin
430 C	" " " " " " Set Screw
19157	Thread Take-up Lever complete, Nos. 12166, 12409 and 19156
19158	Thread Take-up Spring
7336	" " " Regulator
448 C	" " " " Set Screw
24283	Throat Plate for 24271
691	" " Screw
24079	Drip Pan with four 1 in. wire nails

Accessories

No.	Name
12361	Machine Hinge Connection
44139	" " Plate
44140	Machine Hinge complete, Nos. 12361, 44139 and two wood screws 1 1/4 in. No. 14
12405	Machine Rest (felt)
120346	Oiler with 120347
120347	" Spout 9 in. long
26026	Screw Driver (machine)
26485	" " (shuttle tension)
120341	Tweezers (curved)
8909	Wrench for 1513 and 1518
8908	" " 1520
19221	" " 936 and 1619

Bobbin Winder (Swinging Automatic, Right Hand)

No.	Name
27552	Base
15072	Bobbin Position Pin
27302	Frame
1620 J	" Hinge Screw
27303	" Spring
27553	Pulley
27538	Spindle with 15072, 27850 and 41828
27850	" Collar
41828	" " Pin
27306	Spool Pin
27307	" Stand
27308	Spool Stand complete, Nos. 418E, 1562J, 2106, 10141, 11241, 27306, 27307, and two each wood screws 1 in. No. 10 and 2455
11241	Spool Washer (cloth)
27587	Stop Latch
50356 D	" " Hinge Screw
2455	Tension Disc
1562 J	" Regulating Thumb Nut
418 E	" Screw Stud
10141	" Spring
2106	" Thread Guide

27651 Bobbin Winder, Nos. 1620J, 27302, 27303, 27538, 27552,
27553, 27587, 50356D and two wood screws 1 in.
No. 7

27588 Bobbin Winder (swinging automatic, right hand)
complete, Nos. 27308 and 27651

**Thread Unwinder
For Two Large Spools**

No.	Name
27555	Spool Pin
27583	" Rest
27556	" " 27583 with 138B and two 27555
138 B	" " Set Screw
27557	" Stand with 138B
41514	" Weight, 4 in. diam., with 41515
41515	" " Center Pin
27559	Thread Guard
27583	" " Hub
330 B	" " Set Screw
27580	" " Rod, 26 in. long
138 B	" " Set Screw
449 C	" " Set Screw
27561	Thread Guard complete, Nos. 330B, 449C, 27559 and 27583
27582	Thread Unwinder complete, Nos. 27556, 27557, 27580, 27581, two 41514 and three wood screws 1 1/4 in. No. 12