


SINGER
15K95,K194

MACHINES OF CLASS 15K

FOR JOINING TAPE BELTS ON SPINNING AND TWISTING FRAMES


Bed 14 $\frac{1}{2}$ " long, 7" wide. Space at right of needle 6 $\frac{1}{2}$ ".

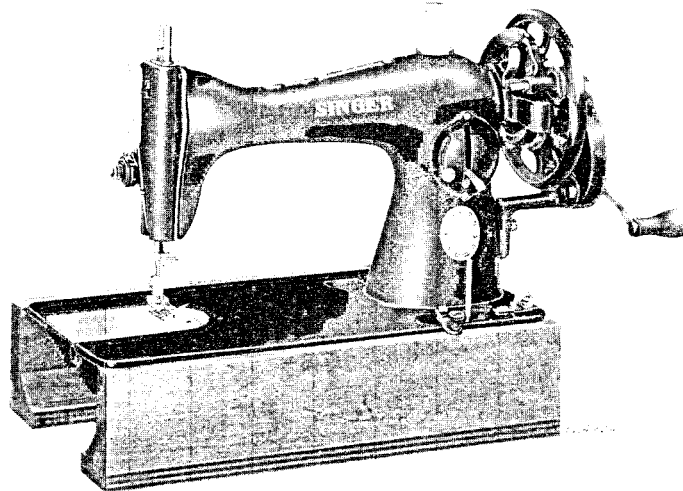

MACHINE 15K194

15K194 REVERSIBLE DROP FEED. Maximum stitch length 6 to the inch. C.B. Shuttle 125013. Balance Wheel 80176. Spool Holder 80179. Hand Attachment 94052. Wood Base 101293. Adjustable Belt Guide Attachment 80331 is available at extra charge.

Presser Foot (Hinged) 105069 is fitted to machine, but if Presser Foot (Plain) 80058 is preferred for use with adjustable Belt Guide Attachment it will be supplied if specified on order.

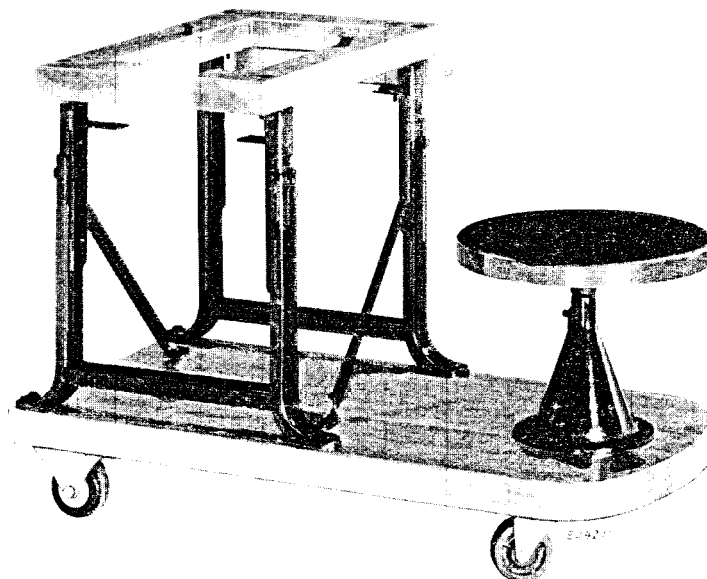

TRUCK 135425

When required, Truck 135425, on which the machine is set at the same height as the Pulley which drives the Winders on the Spinning Frames, can be supplied at an additional charge. Wood Base 101293 fits into the Well of the Truck.

Canvas Cover 96924, to protect machine from dust, can be supplied at extra charge.

List of Parts Complete

For

Machine No. 15 K 95

Reversible Drop Feed; C. B. Shuttle; For Stitching or Joining Tape Belts on Spinning and Twisting Frames.

| | | | |
|---------|---|-----|--|
| *80340 | | Arm | |
| 80341 | | " | 80340 with 435C, 448C, 15404, 15486, 15498 and two 15405 |
| 2002 | 2 | " | Dowel Pin |
| 4389 | 2 | " | " " (for repairs only) |
| 138 E | 3 | " | Screw |
| 125331 | | " | Oil Pad for oiling Arm Shaft Back Bearing |
| 125333 | | " | " " Spring |
| 125334 | | " | " " " Cap |
| 15497 | | " | Shaft |
| 15498 | | " | " Bushing |
| 435 C | | " | " " Set Screw |
| 144 C | | " | " Screw |
| 8300 | | " | Side Cover |
| 51224 D | | " | " " Thumb Screw |
| 2007 | | " | Spool Pin |
| 15282 P | | | Balance Wheel (2-1/4" pulley, heavy rim) |
| *80342 | | Bed | |
| 256 B | | | Clamp Stop Motion Clamp Screw |
| 248 A | | " | " " " Stop Screw |
| 2020 | | " | " " " Washer |
| *15312 | | " | " " Flanged Bushing |
| 15313 | | " | " " " " 15312 with two 462AL |

| | | | | | |
|---------|---|---|---|---|--|
| 2836 | | | | | Feed Lifting Rock Shaft 2816 with 2509 |
| 2509 | | " | " | " | Crank with 157J and 1813 |
| 157 J | | " | " | " | Clamping Screw |
| 1813 | | " | " | " | Roller and Stud |
| 307 C | 2 | " | " | " | Screw Center |
| 1513 J | 2 | " | " | " | " " Nut |
| 125397 | | " | | | Regulator |
| 125398 | | " | " | | 125397 with 125381 |
| 50353 E | | " | " | | Hinge Screw |
| 8217 | | " | " | " | Friction Washer |
| 45305 | | " | | | Reversing Handle |
| 125381 | | " | " | " | 45305 with 1550J |
| 1550 J | | " | " | " | Lock Nut |
| 125270 | | " | | | Rock Shaft |
| 307 C | 2 | " | " | " | Screw Center |
| 1513 J | 2 | " | " | " | " " Nut |
| 80054 | | | | | Needle Bar |
| 125052 | | " | " | | Bushing |
| 15248 | | " | " | | Connecting Link with 51002E |
| 15374 | | " | " | " | 15248 with 2052 |
| 51002 E | | " | " | " | Adjusting Screw |
| 570 C | | " | " | " | Hinge Screw |
| 1520 R | | " | " | " | " " Nut |
| 2052 | | " | " | " | Stud with 155C |
| 155 C | | " | " | " | Set Screw |
| 80055 | | " | " | | Thread Eyelet |
| 240 F | | " | " | " | Screw |

| | |
|--------|--|
| 80037 | Presser Bar Spring Bracket with 453C and 756C |
| 443 C | " " " " Set Screw |
| 756 C | " " " " Thread Controller Clamp Screw |
| 2070 | " " " Washer |
| 2143 | " Foot for 15226 |
| 130 E | " " Screw |
| 243 J | Pressure Regulating Thread Screw |
| 2518 | Shuttle Bobbin |
| 15140 | " " Case latch |
| 2973 | " " " " Lever |
| 2974 | " " " " " Fulcrum Pin |
| 2975 | " " " " Spring |
| 592 E | " " " " Stop Screw |
| 15141 | " " " Hinge, complete, Nos. 2973,2974 and 15140 |
| 15277 | " " " with 591F, 592E,2975,15141 & 15278 |
| 2515 | " Body |
| 591 F | " Tension Regulating Screw |
| 15278 | " " Spring |
| 125015 | " 1-11.16" diam., complete, Nos. 2515,2518 and 15277 |
| 2542 | " Driver |
| 2541 | " " 2542 with two 462AL |
| 2040 | " " Pin |
| 410 AL | " " Set Screw |
| 2531 | " Race Pack |
| 2532 | " " " Position Pin |
| 2533 | " " " Spring |
| 648 J | " " " " Screw |

| | |
|---------|--|
| 448 C | Tension Screw Stud Set Screw |
| 2103 | " Spring |
| 80211 | " complete, Nos. 2103,16202 and two 2102 |
| 80085 | Thread Controller |
| 82358 | " Guard |
| 233 D | " " Screw |
| 2112 | " Retainer Guide Disc with 2113 |
| 2113 | " " " " Steady Pin |
| 460 C | " " " Set Screw |
| 2114 | " " " Spring |
| 2115 | " " " Stud |
| 2111 | " " " complete, Nos. 2112,2114 and 2115 |
| 15275 | " Take-up Cam (steel) with 1293C |
| 15433 | " " " 15275 with 570C and 1520R |
| 1293 C | " " " Timing Screw |
| 15491 | " " Lever with 1822 |
| 15492 | " " " 15491 with 50527C |
| 50527 C | " " " Hinge Screw |
| 1822 | " " " Roller and Stud |
| 80259 | " " Spring (closed eye) |
| 15010 | " " " (open eye) |
| 15227 | Throat Plate for 15226 |
| 691 F 2 | " " Screw |
| *15404 | Trade Mark |
| 15405 | " " Rivet |
| 80312 | Drip Pan (for Machine on Truck) |

| | |
|----------|--|
| 399 A | Gear Cover Screw |
| SS 599 F | " Screw Stud |
| 94048 | Pinion |
| 80028 | " Dowel Pin |
| SS 600 F | " Screw Stud (eccentric) |
| 94052 B | Hand Attachment complete, Nos. SS565E, SS566C, SS599F, SS600F, 94016, 94027, 94034B, ⁹⁴⁰³⁷ 94038, 94041, 94044, 94050, 94051B, 94069, 94070, two each 183E and 399A |
| SS 566 C | Hand Attachment Screw |

Machine Base No. 101293

For

Machine No. 15K194

| | |
|----------|--|
| 28242 | Machine Rest Cushion (leather) for 101293 |
| ----- | " " " Nail 1/2 in. No. 17 R.H., for 101293 |
| 124387 | " Button for 124388 |
| 124388 | " " 124387 with 56493, for 124389 |
| 124389 | " " 124388 with 22436 and 124411, for 101293 |
| 56493 | " " Cushion for 124388 |
| 732 B | " " Thumb Screw for 124411 |
| 124411 | " " " " Bushing 124390 with 732B, for 124389 |
| 124390 | " " " " " for 124411 |
| 22436 | " " " " Washer for 124389 |
| 87721 | " Hinge Connection for 87723 |
| 8295 | " " " Hinge Pin for 87723 |
| 87722 | " " Head for 87723 |
| SS 368 J | " " Screw for 87723 |
| 87572 | " " " Washer for 87723 |
| 87723 | " " complete, Nos. SS368J, 8295, 87572, 87721 and 87722 for 101293 |
| 101293 | " Base with 124389, two each 28242, 87723 and nails 1/2 in. No. 17 R.H. |

| | | |
|----------|---|---|
| 126150 | 4 | Machine Platform Base Bolt Nut Lock Washer |
| 23250 | 4 | " " " " " Washer |
| 151141 | 4 | " " " " complete, Nos. 126150 and 140570 R |
| 140656 R | 2 | " " " Bumper Bolt with 1778R |
| 1778 R | 2 | " " " " " Nut |
| 126150 | 2 | " " " " " " Lock Washer |
| 23250 | 2 | " " " " " " Washer |
| 151224 | 2 | " " " " " complete, Nos. 23250, 126150 and 140656R |
| ----- | 4 | " " " wood screws 1-1/2" long No. 15 R.H. |
| 23250 | 4 | " " " " " Washer |
| 124387 | 2 | " " " Button |
| 124388 | 2 | " " " 124387 with 56493 |
| 124389 | 2 | " " " 124388 with 22436 and 124411 |
| 56493 | 2 | " " " Cushion |
| 732 B | 2 | " " " Thumb Screw |
| 124390 | 2 | " " " " " Bushing |
| 124411 | 2 | " " " " " " 124390 w/732B |
| 22436 | 2 | " " " " " Washer |
| 221830 | | Steel Base with 200522C and four screws 1-1/4" No. 12 R.H.B. |
| 227134 | | " Seat |
| 227053 | | " " 227134 with 227132 |
| 227132 | | " " Bracket with 227556 and three wood screws 1" No. 12 |
| 227556 | | " " Spindle |
| 200522 C | | " " " Set Screw |
| 221849 | 2 | Truck Caster with four 1-1/4" No. 14 Wood Screws |
| 221851 | 2 | " " (swivel) with four 1-1/4 No. 14 wood screws |
| 135425 | | " complete, Nos. 135426, 221830, 227053, two each 51038R, 126510, 151224, 152256, 152257, 152258, 221849, 221851, four each 1062R, 9842, 50612P, 51550R, 126150, 151141, wood screws 1 1/2" long No. 15 R.H. and twelve 23250 |